




iPad 4 CDMA Home Button Control Board Replacement

Prereq only for adhesive strips.

Written By: Walter Galan

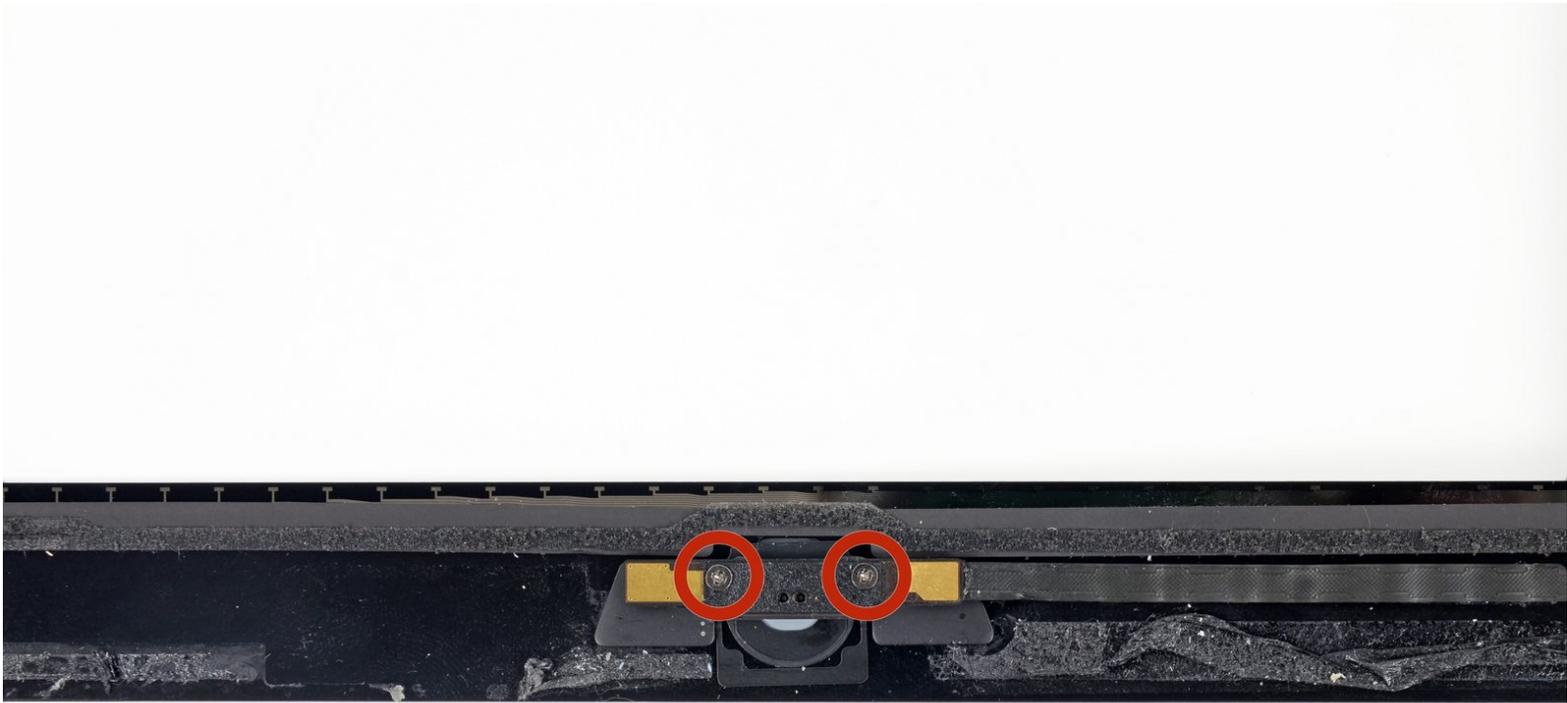

INTRODUCTION

Prereq only for adhesive strips.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)



PARTS:

- [iPad Retina Adhesive Strips](#) (1)
-

Step 1 — Home Button Control Board



- Remove the two 2.1 mm Phillips #00 Phillips screws securing the home button control board to the home button mounting bracket.

Step 2





- Wedge the flat edge of a plastic opening tool in between the right end of the home button control board and the home button mounting bracket.
 - Depress the plastic opening tool downwards to pry the adhesive securing the home button control board from the home button mounting bracket.
- Repeat the procedure to release the adhesive underneath the left end of the home button control board.

Step 3



- Lift and remove the home button control board up off the home button mounting bracket.


Step 4

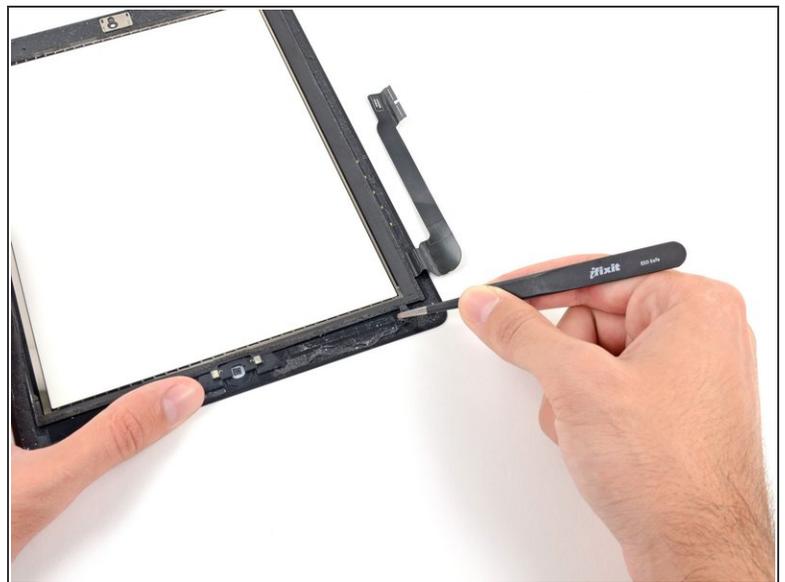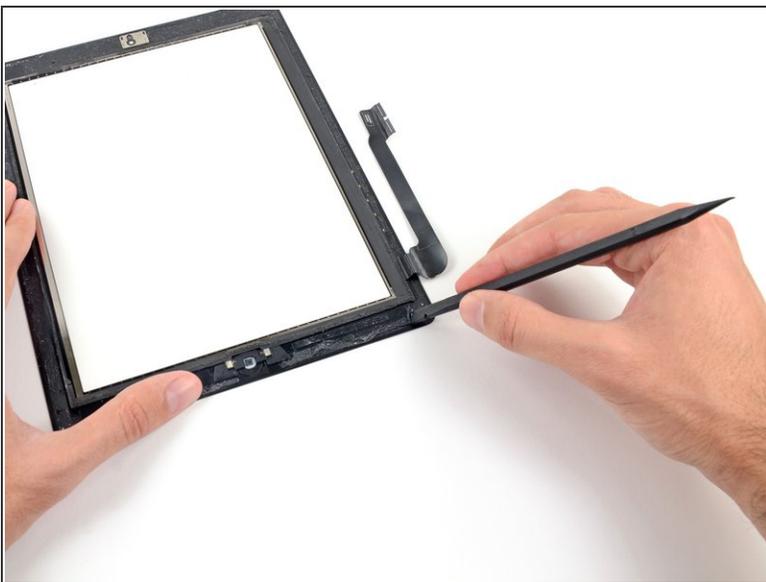

- Use the flat edge of a spudger to scrape the old adhesive off the bottom right corner of the front panel assembly.

i If necessary, gently peel the old adhesive with a pair of tweezers.

Step 5

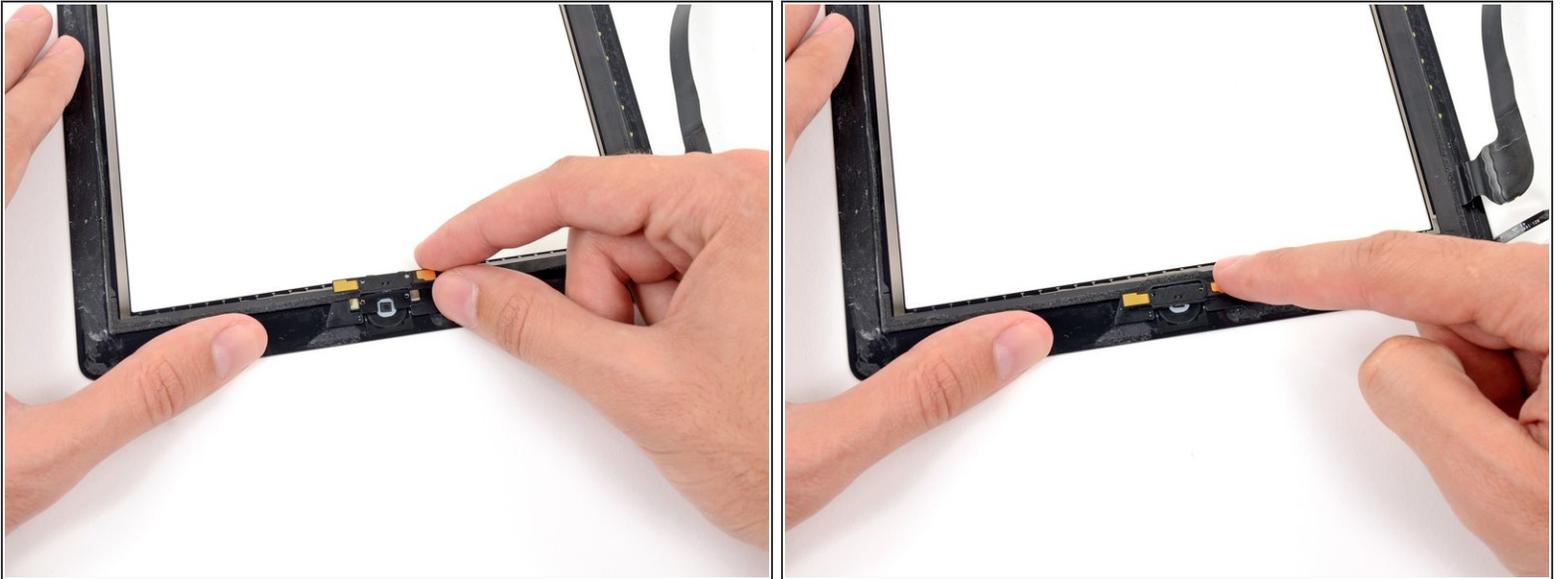

- Gently place the home button control board on top of the home button mounting bracket.
- ⓘ Make sure the home button control board is lined up with the bottom of the home button mounting bracket.

Step 6



- Insert the two 2.1 mm Phillips #00 Phillips screws back into the home button control board to secure it against the home button mounting bracket.

To reassemble your device, follow these instructions in reverse order.