



Power Mac G4 Quicksilver Hard Drive Assembly Replacement

This is meant to be a private prereq guide.

Written By: Ryan Bylard



INTRODUCTION

This is meant to be a private prereq guide.

TOOLS:

Phillips #0 Screwdriver (1)

Step 1 — Hard Drive Assembly



- The hard drive is located in the back right corner of the case.

Step 2




- Remove the flat ribbon cable by pulling with substantial force.

Step 3



- Remove the screw holding the hard drive to the computer.

Step 4

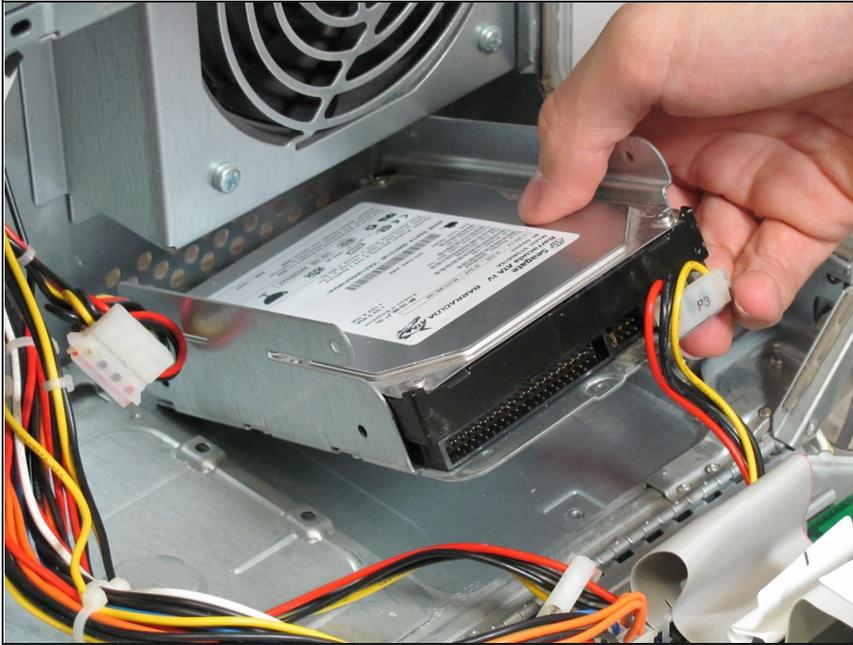

- Pull the drive up and out of the computer.

Step 5



- Remove the multicolored cable by grasping the plastic connector on either side and pulling with substantial force.

To reassemble your device, follow these instructions in reverse order.