



# Disassembling Weather Box Oregon BAR800

This is the disassembly procedure for this weather box. The initial proposal was to repair it. At this moment, I can't do it.

Written By: Andres





## TOOLS:



- [Phillips #0 Screwdriver](#) (1)
- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
- [iFixit Tech Knife](#) (1)

## Step 1 — Disassembling Weather Box Oregon BAR800



- Weather Box, front side

## Step 2

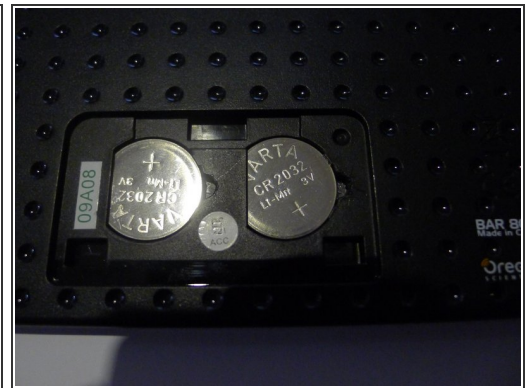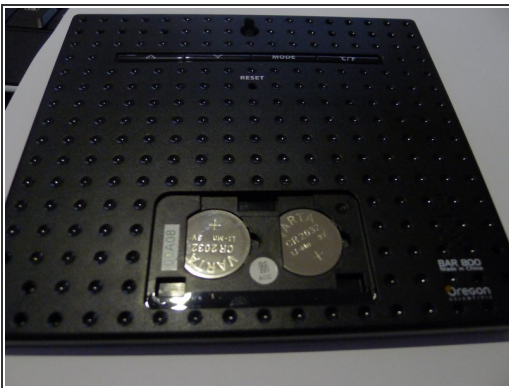

- Rear side




### Step 3



- External front side is a plastic screen glued to the equipment. To disassembly it, insert a knife to cut the glue. It is soft glue, silicone, probably.
- Be carefull to not damage external plastic with knife

### Step 4

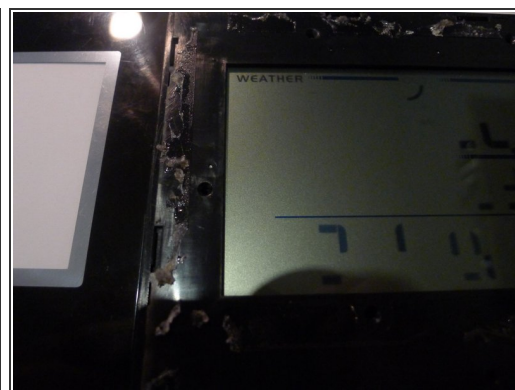



- After plastic screen removed, it can see the screws.
- With a small screw driver, take them off. There are eight screws.

## Step 5



- After screws removed, it is possible to disassemble the equipment by inserting a flat screwdriver into the sides. It is strong enough to resist some efforts. Be careful anyway.

## Step 6

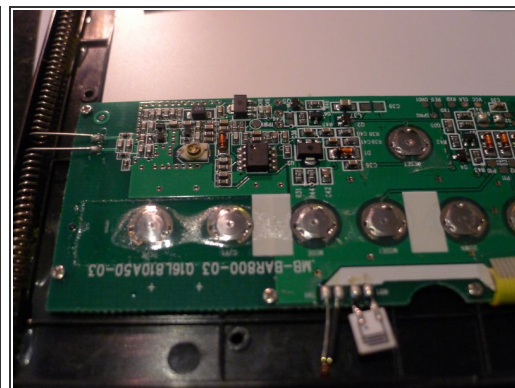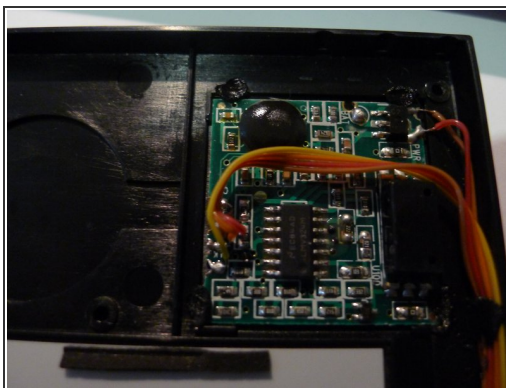

- Internal view