



# Conair Cord-Keeper 169XR Cool Down Button Replacement

If when you hold down the cool down button and...

Written By: Candace



## INTRODUCTION

If when you hold down the cool down button and the air is still hot, the spring behind the button may be broken. Another possibility is that the other parts of the button inside the dryer that engage that setting may be broken.


---

### TOOLS:

Phillips #2 Screwdriver (1)


---

### Step 1 — Handle Cover

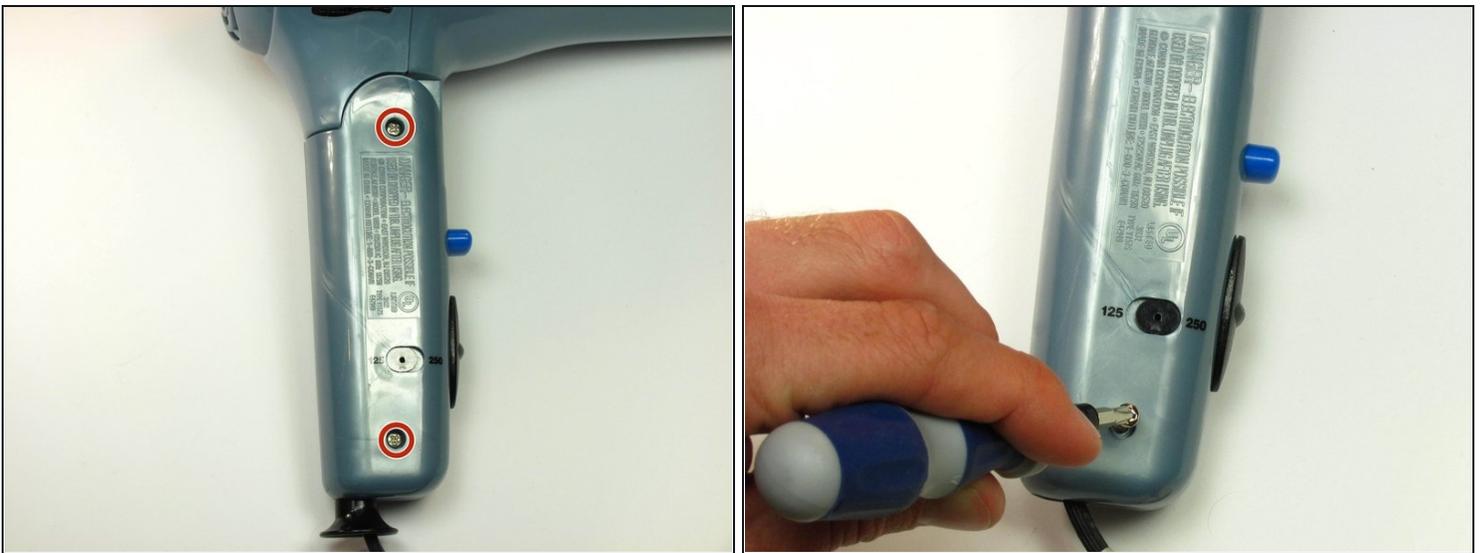

- Unscrew the **two 18 mm long Phillips #2** screws on the side of the hair dryer.


## Step 2

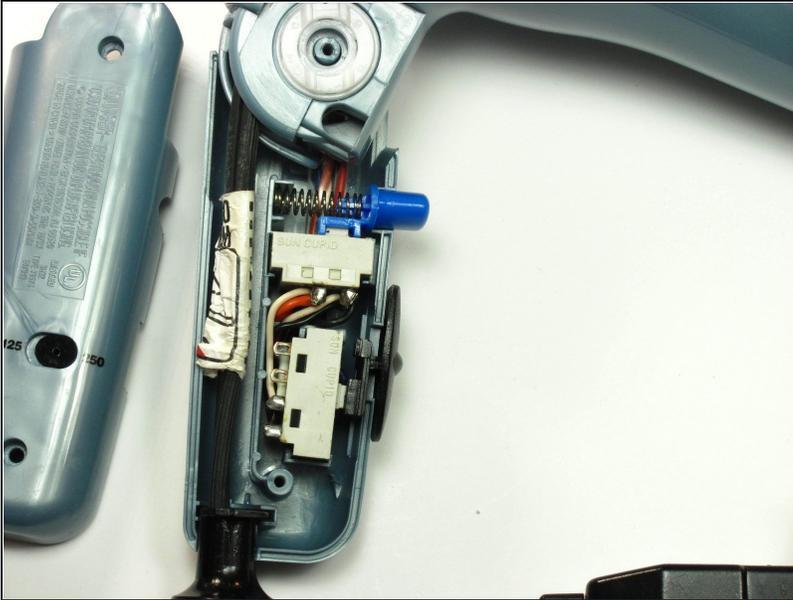

**⚠ Be cautious of pieces that can possibly fall out when removing the face of the handle.**

- Once you have taken the screws out, take the top half of the handle off by lifting it off of the dryer.

## Step 3 — Cool Down Button

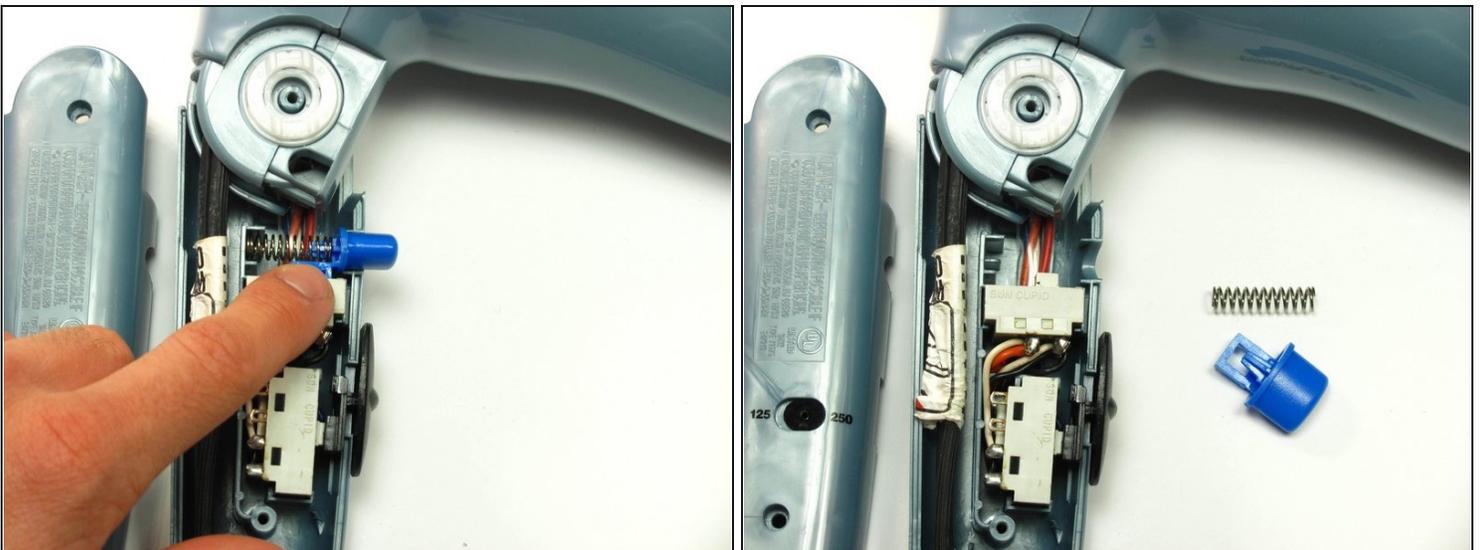

- Take out the cool down button and the spring behind it by gently lifting the button up toward you and pushing it to the right out of its groove.

ⓘ You may need to replace the button and spring depending on which one is broken.

To reassemble your device, follow these instructions in reverse order.