



# iRobot Roomba 551 Brushes Replacement

Remove brushes from your iRobot Roomba 551.

Written By: John McTigue



---

## INTRODUCTION

This guide explains how to remove the brushes from your iRobot Roomba 551, either for replacement or cleaning.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
-




## Step 1 — Side Brush




- Place your Roomba upside-down on a hard surface.

## Step 2

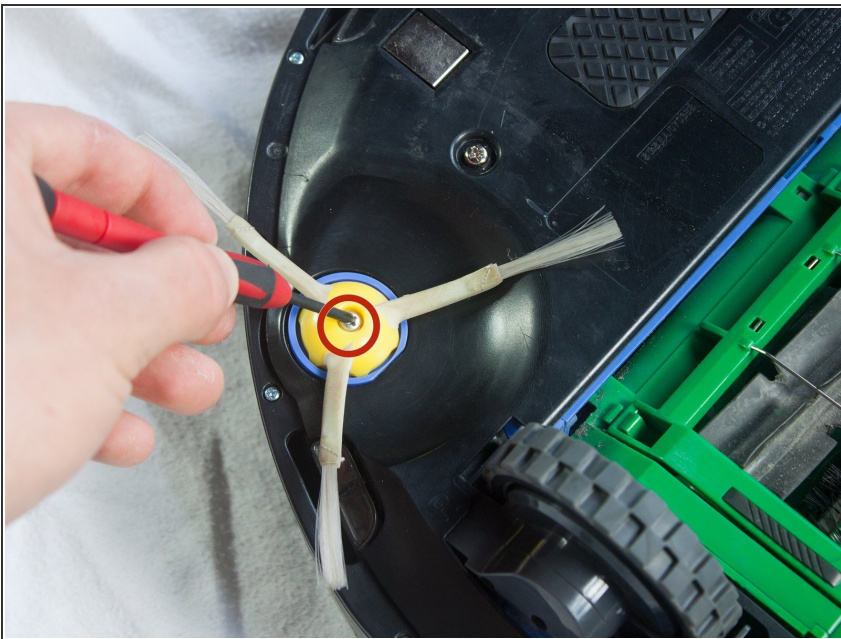


- While holding the side brush in place, use a Phillips #1 screwdriver to remove the 4.5mm screw from the center of the brush.

### Step 3

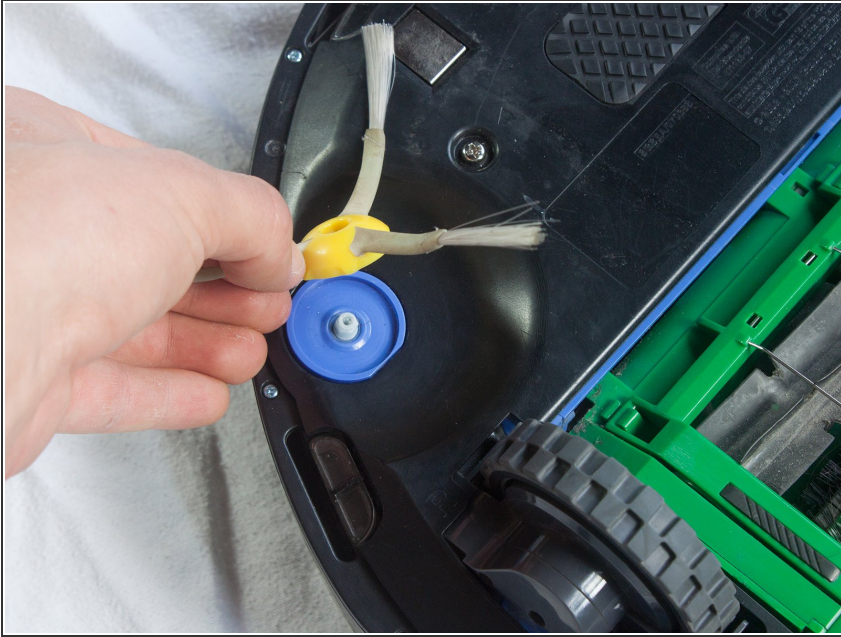

- Gently pull upwards on the brush to remove it.


### Step 4 — Bottom Plate

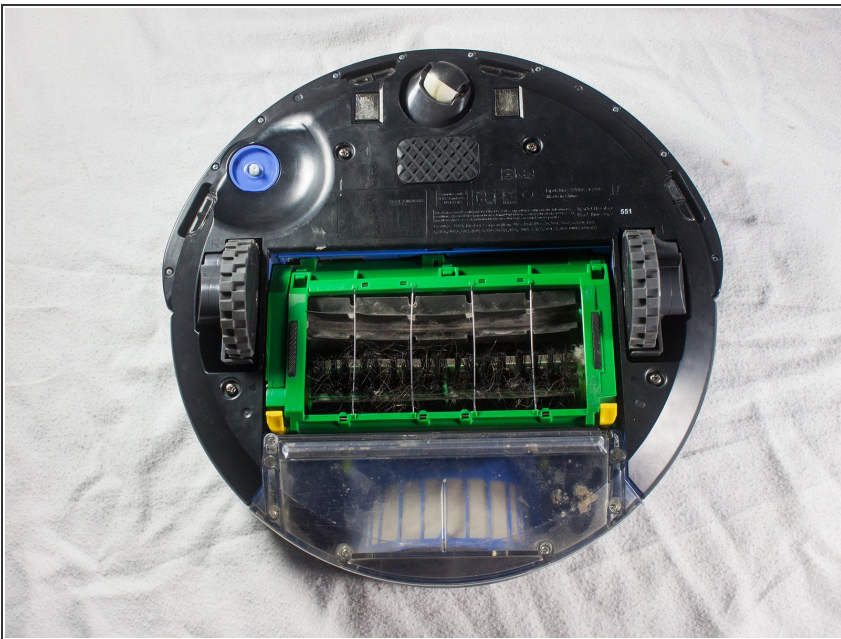

- Rotate the Roomba upside-down so the bottom is facing towards you.




## Step 5

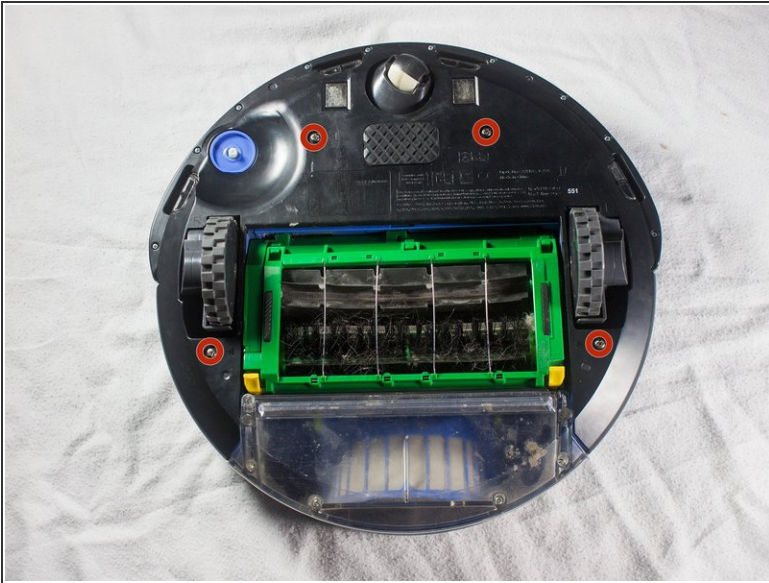

- Using a Phillips #2 screwdriver, remove the captive screws that hold the bottom plate in place.

## Step 6

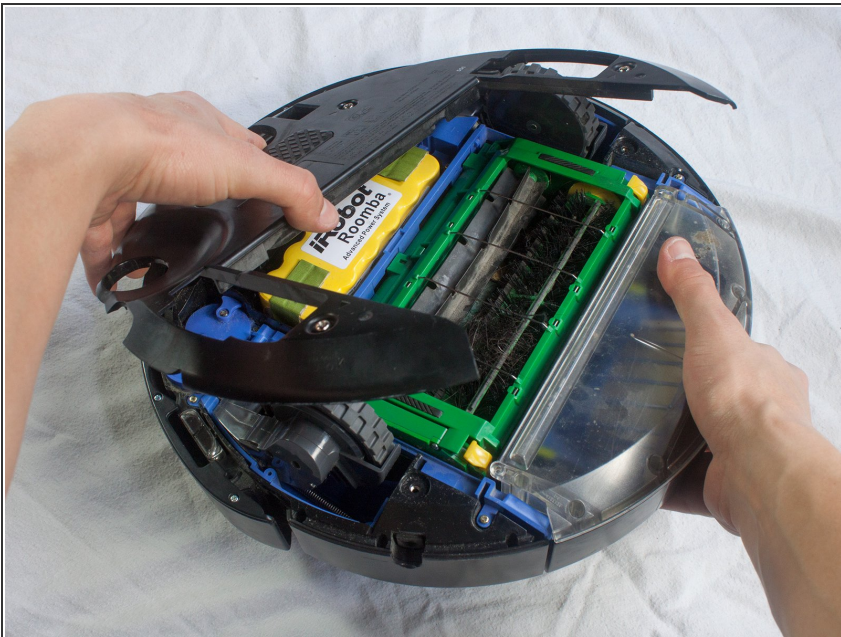

- Carefully lift the bottom plate.
- ⚠ The battery is only secured in place by the bottom plate, and may fall out once the bottom plate is removed.



## Step 7 — Brushes



- Pinch the yellow tabs on the sides of the brush cage and lift up to open.

## Step 8



- Grab each brush and lift upwards to remove.

To reassemble your device, follow these instructions in reverse order.