


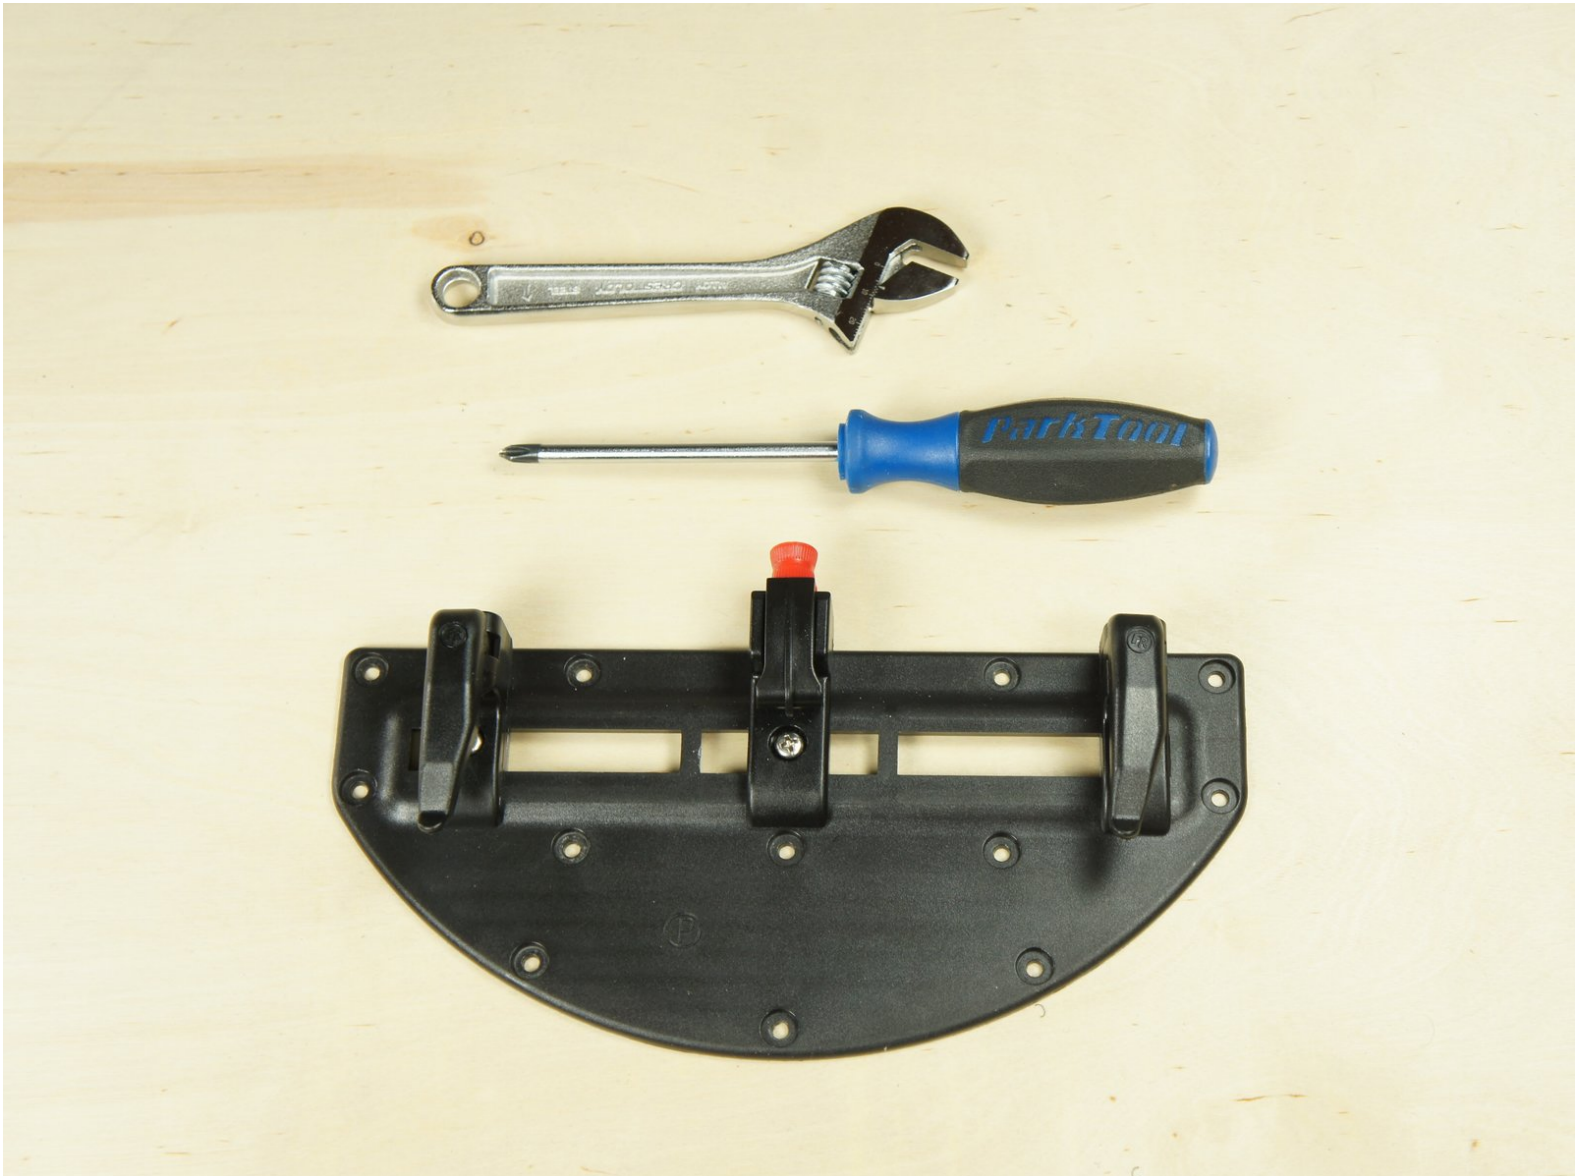

Timbuk2 Pannier Whole Clip Bracket Replacement

How to replace the whole clip bracket on any Timbuk2 Pannier

Written By: Emilee





TOOLS:

- [Smart Wrench](#) (1)
- [Screwdriver](#) (1)




PARTS:

- [Pannier Whole Clip Bracket](#) (1)


Contact warranty@timbuk2.com for this part.

Step 1 — Whole Clip Bracket

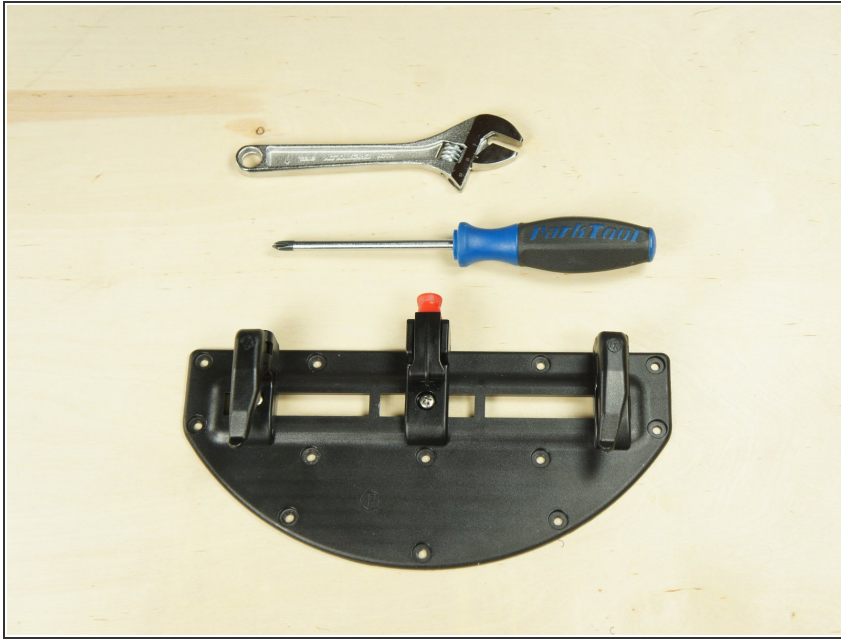

- Here are the tools you will need:
 - Standard Screwdriver
 - New Pannier Whole Clip Bracket
 - Wrench

Step 2

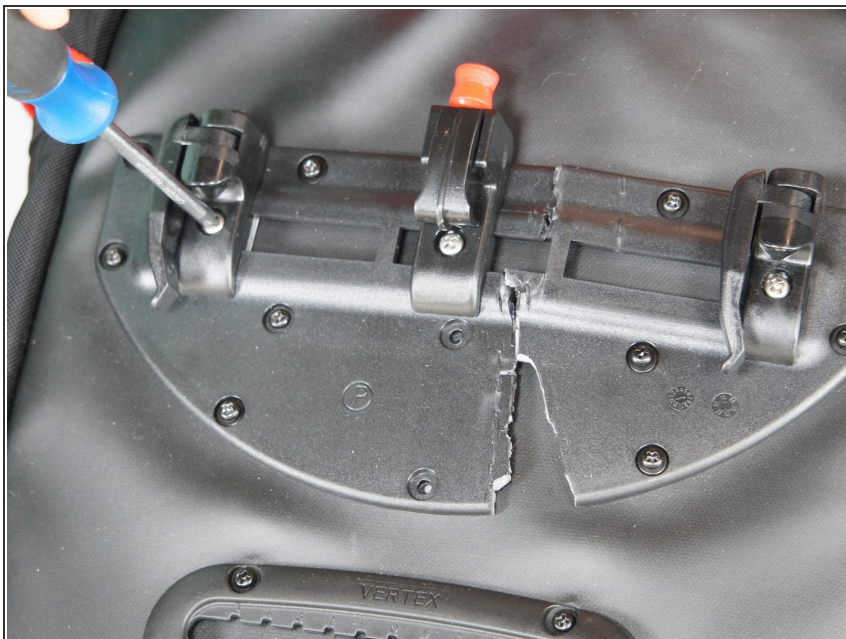

- To remove clip bracket, first remove all 3 clips using the #2 screwdriver or hand drill (Make sure to put clips and their screws and anchor plates in a safe place as to not misplace any such as a Ziploc bag).

Step 3





- Unscrew all 13 small black screws. To do so, undo velcro flap located at the top of the laptop sleeve. With the wrench, hold nut in place in the back of the pannier.

Step 4



- While holding nuts with the wrench, use the screwdriver to unscrew the screw in the front bracket.

Step 5

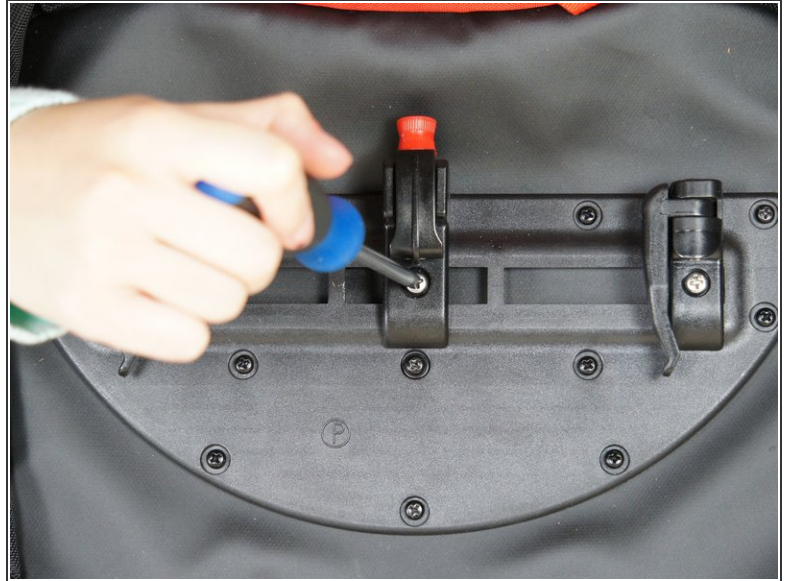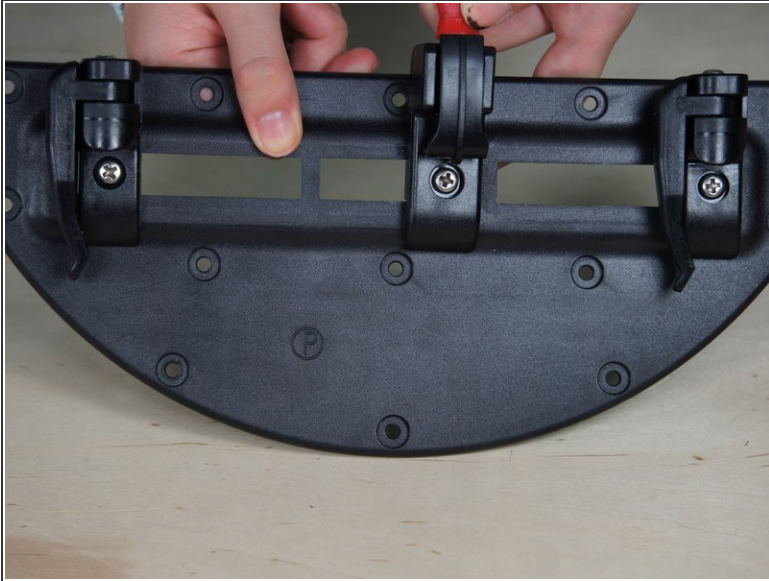

- Remove old clip. Take new clip bracket and unscrew and remove middle clip.

Step 6



- Replace the middle clip and screw it into place on the bag. Place the new clip bracket in place and screw in all 13 screws again.
- As in step 3 and 4, hold nut with wrench while screwing clip in place. (Be sure to keep washers in between the screws and the body of the bag)

Step 7



- You're done!