



# Samsung Galaxy Pocket (GT-S5300) Teardown

This is a Teardown of my old broken Samsung Galaxy Pocket (GT-S5300)

Written By: Ryan



---

## INTRODUCTION

This is a Teardown of my old broken Samsung Galaxy Pocket (GT-S5300)

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [iFixit Opening Picks set of 6](#) (1)
-

## Step 1 — Samsung Galaxy Pocket (GT-S5300) Teardown




- Remove the battery cover
- Then remove the battery

## Step 2



- Remove all 4 screws

### Step 3

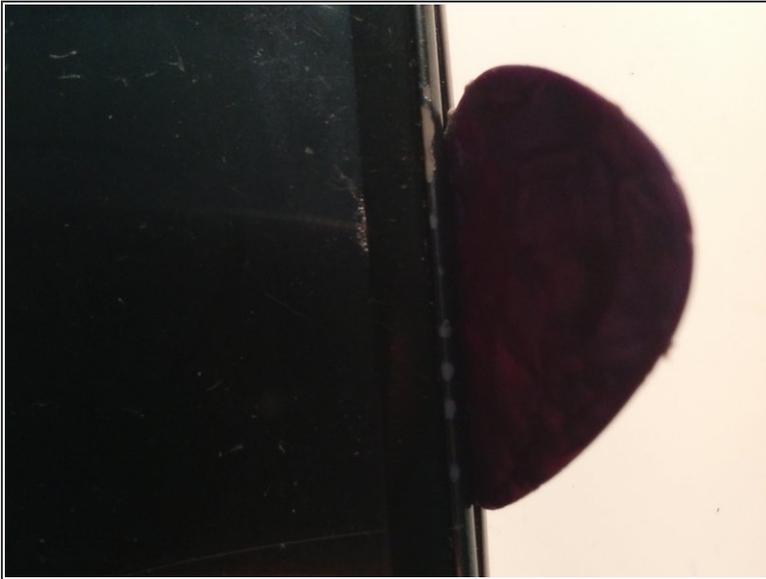


- Slide a guitar pick between the sliver bezel and the rear of the phone
- Slide it all the way around until the rear is loosened from the logic board and screen

### Step 4




- Remove LCD connector

## Step 5

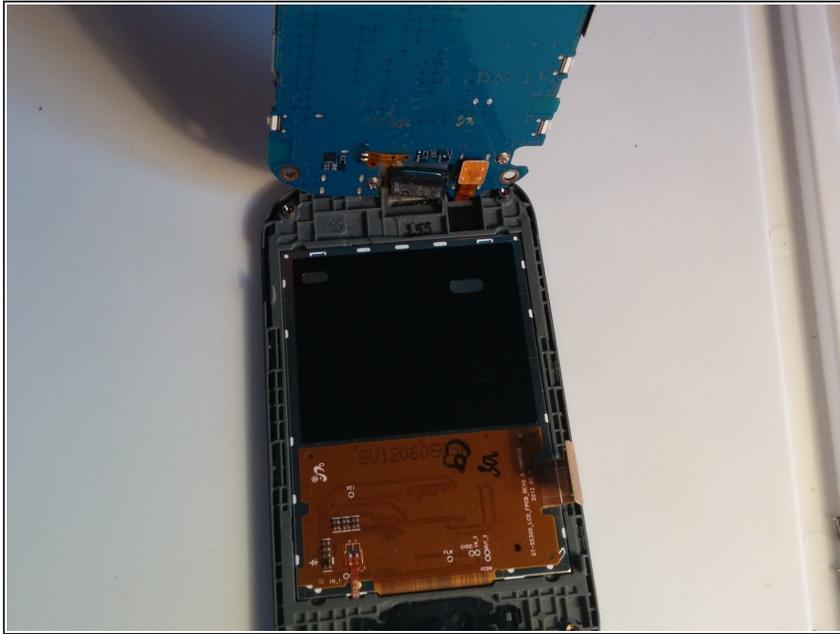

- Remove logic board from screen by lifting the logic board up and removing the digitizer connector

## Step 6

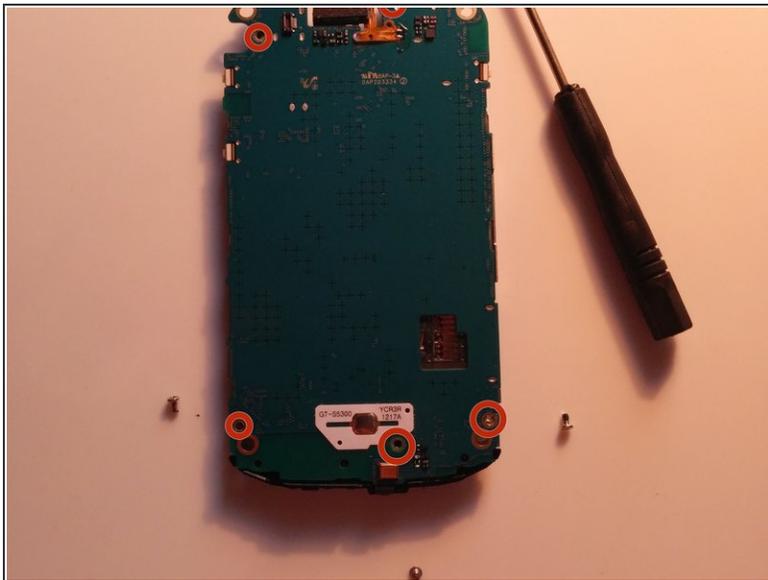

- Remove the 5 screws to remove the shield

## Step 7



- Remove what seems to be the antenna from the logic board

## Step 8



- Slide guitar pick between the digitizer and lcd
- Make sure not to get under the black adhesive on the back be the digitizer

⚠ At the top of the digitizer there is a circuit be careful up there

## Step 9



- Então essa é a minha desmontagem para o bolso da galáxia Samsung (GT-S5300)