




Sony Tablet S Factory / Hard reset

Sony Tablet S Factory / Hard reset

Written By: ZFix

SONY

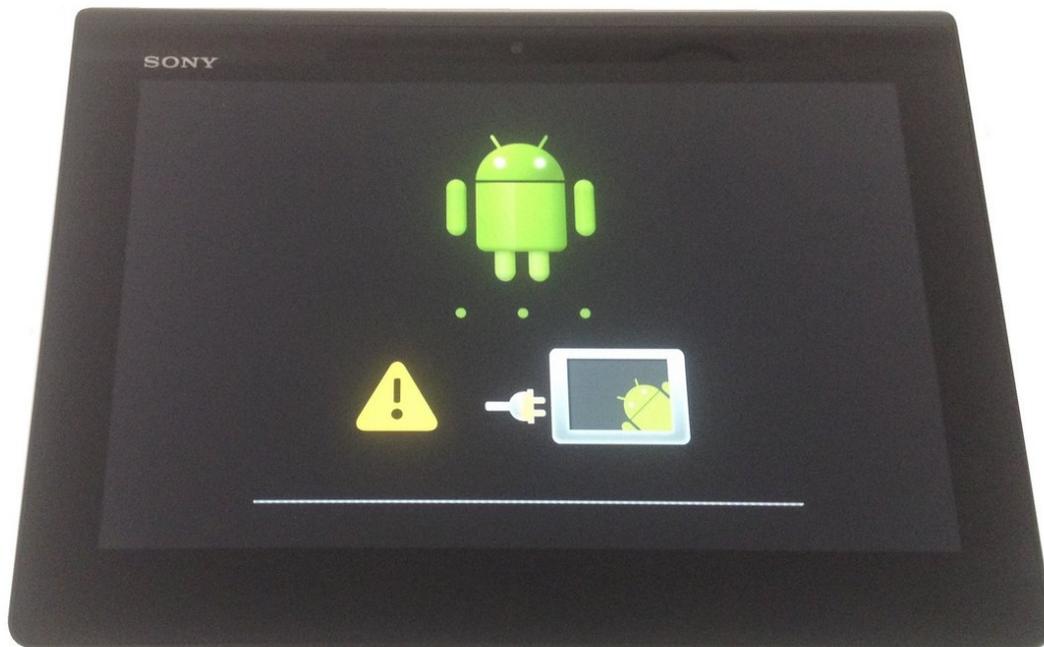

XPERIA Tablet S

INTRODUCTION

If you have a problem with starting-up the OS, or if you want to erase all data, or you forgot your password, PIN, pattern code you can do a Factory reset.

Attention!!! This will erase all your data!!! It's good to do **BACKUP** first.

["Please SUBSCRIBE to my channel ツ"](#)

[video: <https://www.youtube.com/watch?v=9NM2znQk558>]

Step 1 — Sony Tablet S Factory / Hard reset



- **Metod 1:**
- - Settings
- - Backup & reset
- - Factory data reset
- The tablet will restart automatically.
- **!!! From the "Backup & reset" menu you can do Back up my data !!!**

Step 2



● Metod 2:

- Power of the tablet. Pres and hold the Power On key and the Volume Up key at the same time.
- When you see the Sony logo release the Power On button but continue to press the Volume Up button.
- Now you are in the **Android recovery menu**. Use Volume keys to scroll and the Power On key to select. From the options select:
 - - Reset to Factory Settings
 - - Yes - erase all user data
 - - The tablet will restart alone
- [Please SUBSCRIBE to my channel ツ](#)

To reassemble your device, follow these instructions in reverse order.