


# **Motorola V276 Speaker Replacement**

This is a guide for replacing the back speaker...

Written By: Kyle Klitzner

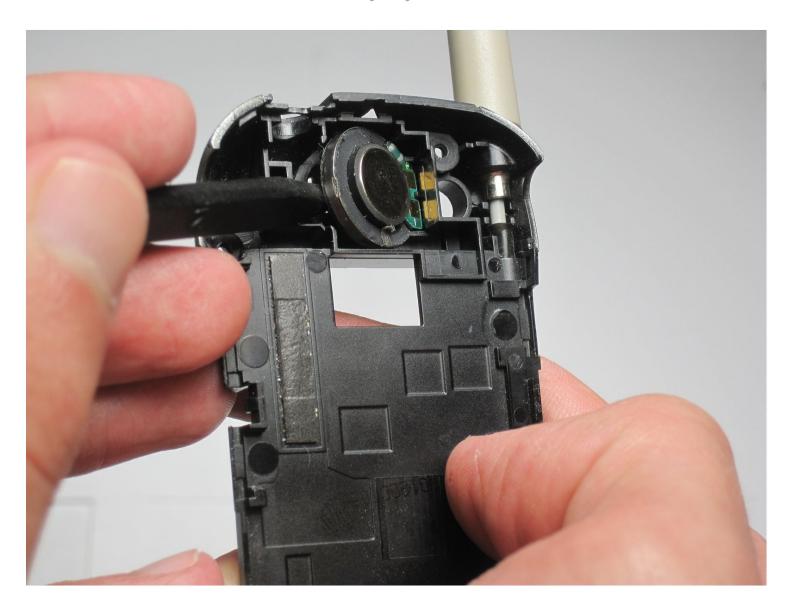


#### **INTRODUCTION**

This is a guide for replacing the back speaker for a Motorola V276 phone.

#### TOOLS:

Spudger (1) T6 Torx Screwdriver (1) Tweezers (1) iFixit Opening Tool (1)

#### Step 1 — Battery

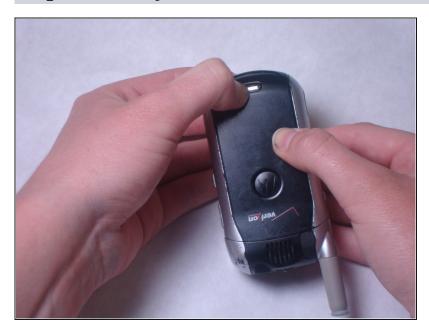

- Locate the silver button on the back of the phone, near the bottom.
- Depress the silver button with one hand and slide the back cover of the phone *away* from the antenna.
- (i) The back cover should slide off easily.

#### Step 2



- Insert a plastic spudger near one corner of the battery (preferably one furthest from the phone's antenna).
- Gently pry the battery up and away from the phone. The battery should easily raise out of its place.
- Now that the battery is exposed, use your fingers to remove the it from the phone.

#### Step 3






- Note the metal connections on the phone, which are now exposed with the battery removed.
- There are corresponding metal connectors on the replacement battery.
- When you install the battery, be sure both connectors are matched up. Otherwise, your battery will be unable to supply power to your phone.

#### Step 4 — Speaker



 Use Spudger to remove rubber plug from upper left corner of the back of the phone

## Step 5

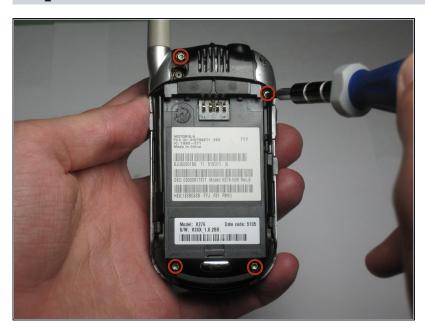

 Using a Hex T6 screwdriver, remove the 4 screws holding the back plate of the phone in place

#### Step 6







• Using your hands, pull up on the back plate while pulling on the 3 side tabs to remove the back plate.

⚠ Be careful when removing the back plate; don't put too much stress on the back plate or the plastic may snap


#### Step 7





 On the back casing, using a spudger, push into the headphone jack at an upward angle to pop it out

#### Step 8

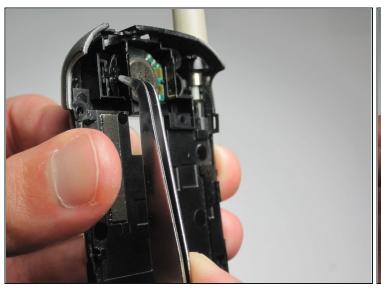



 Using <u>tweezers</u> or your hands, pick out the semicircular plastic border between the speaker and headphone jack

### Step 9



 Using a spudger, remove the speaker

To reassemble your device, follow these instructions in reverse order.