



Disassembling Motorola i90c Internal Backplate

This guide details how to remove the internal...

Written By: Grant Glazebrook



INTRODUCTION

This guide details how to remove the internal backplate of your Motorola i90c phone to expose the speaker, the headphone jack, and the motherboard.

TOOLS:

[Flathead 3/32" or 2.5 mm Screwdriver](#) (1)

[Tweezers](#) (1)

[TR9 Torx Security Screwdriver](#) (1)

PARTS:

[motorola antenna](#) (1)

Step 1 — Battery



- Slide the notch downward while pulling the back cover off to remove it.

Step 2



- Use your fingers to push the battery upward from the bottom.
- Lift upwards to remove the battery.

Step 3 — Antenna



- Unscrew the antenna in a counter-clockwise fashion.
- Remove the aluminum cover.

Step 4 — Disassembling Motorola i90c Internal Backplate



- Unscrew the 3 screws shown.
- Lift up the right part of the Nextel logo and unscrew the screw underneath.


Step 5



⚠ DO NOT force the cover off as it could damage the ribbon cable!

- Gently lift the back cover off.

Step 6

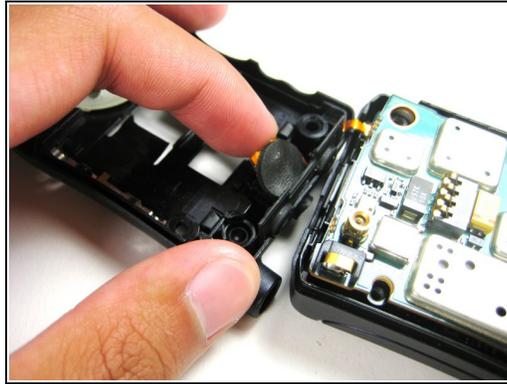

- Carefully pry off the connection between the headphone jack and logic board.

To reassemble your device, follow these instructions in reverse order.