



# Disassembling Motorola i850 LCD Board

Written By: Andrew Aw



---

## INTRODUCTION

The removal and replacement of the LCD board.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Razor Blade](#) (1)
  - [Spudger](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — LCD Board



- Open the flip cover of the phone with the LCD screen facing towards you.

## Step 2



- Use a Razor Blade to remove the screw covers.

⚠ Razor Blade is very sharp. Use caution.

### Step 3



- Unscrew the screws using a Phillips #00 Screwdriver.

### Step 4



- Insert a Spudger into the side crack of the flip cover and slowly separate the phone cover from the case.

## Step 5



- Gently separate the flip cover case from the phone with your hands when the crack is wide enough.

## Step 6




- Partially close the flip cover of the phone in order to take off the outer case.

## Step 7




- Completely remove the outer casing from the phone.

## Step 8

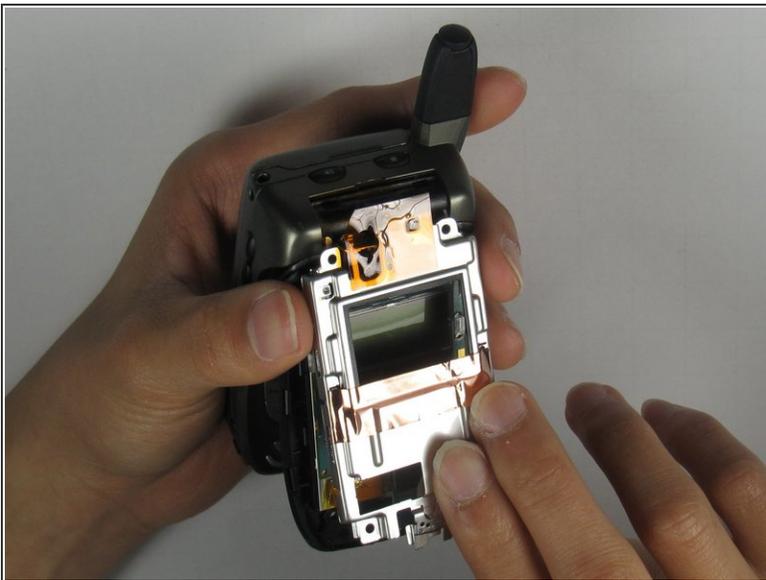

- Place your thumb underneath the protective metal covering to remove it from the phone.

## Step 9

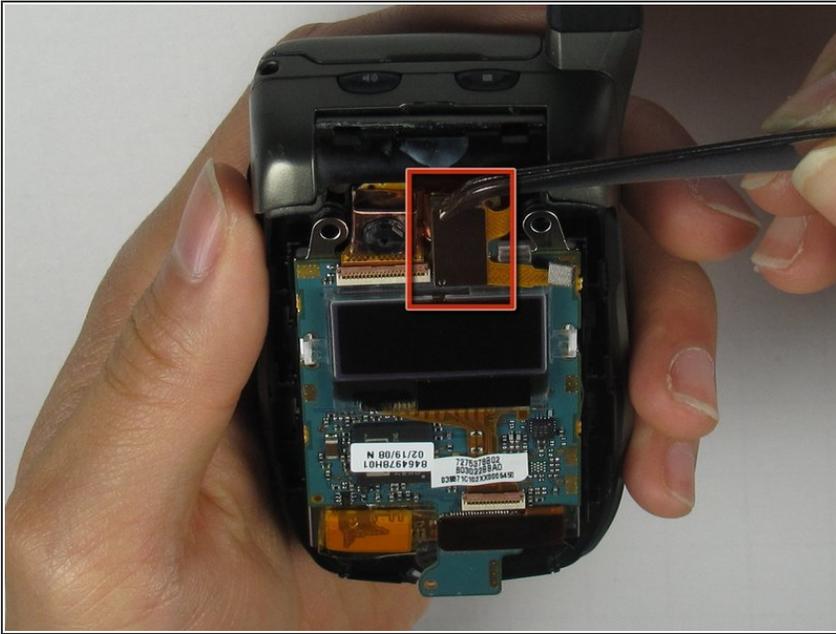

- Gently detach the black microchip from the phone with a Tweezer.

## Step 10



- Prop out the LCD board from the phone using your fingertips.

## Step 11



- Remove the LCD board from the phone by grabbing the bottom side of the LCD board.

To reassemble your device, follow these instructions in reverse order.