



Motorola i850 Speaker Replacement

Written By: Kevin Dermody



INTRODUCTION

Replace the speaker in the phone.

TOOLS:

- [Flathead 3/32" or 2.5 mm Screwdriver \(1\)](#)
-

Step 1 — LCD Board



- Open the flip cover of the phone with the LCD screen facing towards you.

Step 2



- Use a Razor Blade to remove the screw covers.

⚠ Razor Blade is very sharp. Use caution.

Step 3



- Unscrew the screws using a Phillips #00 Screwdriver.

Step 4



- Insert a Spudger into the side crack of the flip cover and slowly separate the phone cover from the case.

Step 5



- Gently separate the flip cover case from the phone with your hands when the crack is wide enough.

Step 6




- Partially close the flip cover of the phone in order to take off the outer case.

Step 7




- Completely remove the outer casing from the phone.

Step 8

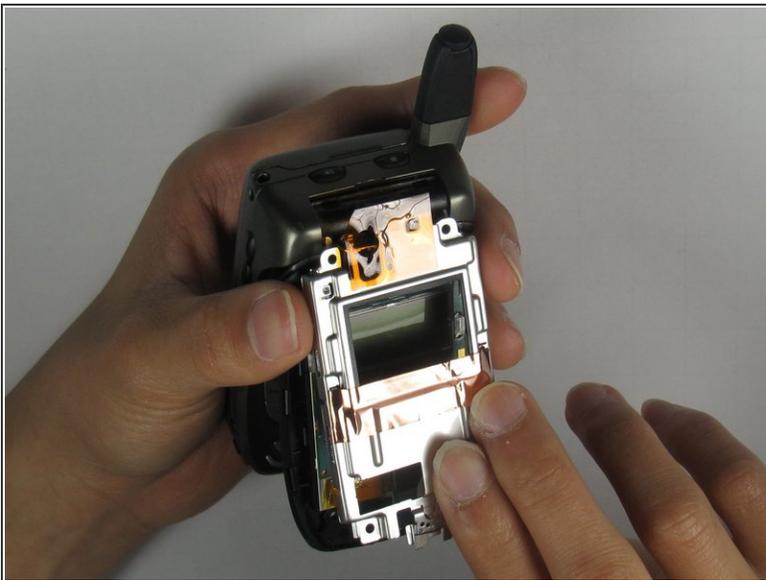

- Place your thumb underneath the protective metal covering to remove it from the phone.

Step 9

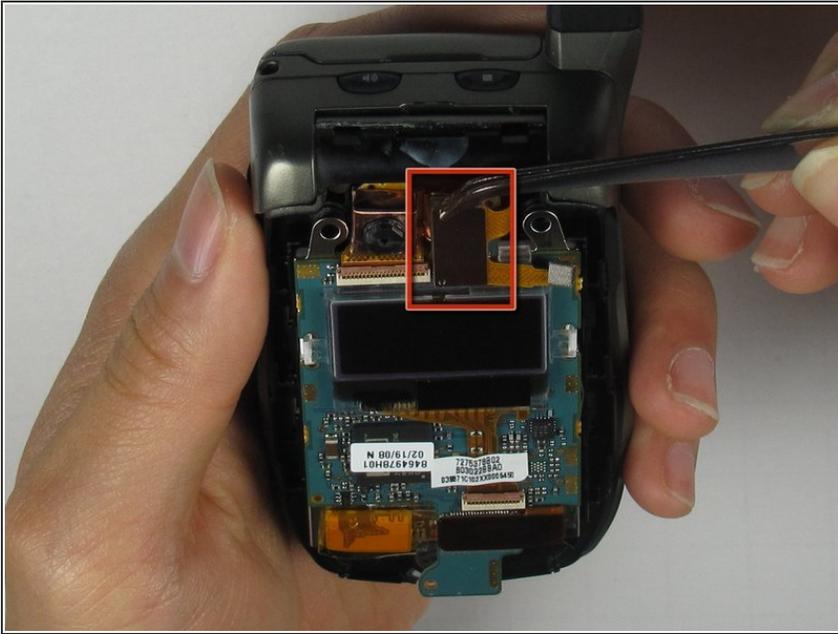


- Gently detach the black microchip from the phone with a Tweezer.

Step 10



- Prop out the LCD board from the phone using your fingertips.

Step 11

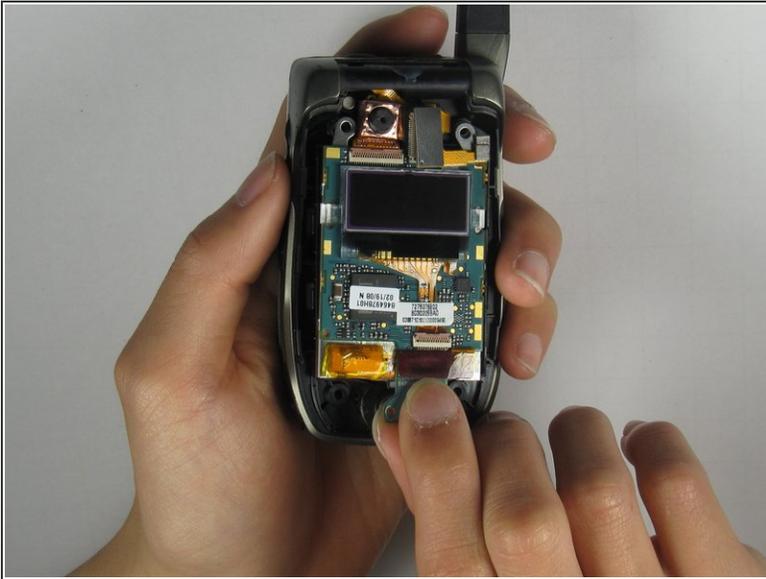

- Remove the LCD board from the phone by grabbing the bottom side of the LCD board.

Step 12 — Speaker



- Use a flathead screwdriver to gently remove the speaker.

Step 13



- Insert the new speaker into the phone and it should look like the image at left.

To reassemble your device, follow these instructions in reverse order.