



Samsung SGH-A237 Keypad Replacement

Written By: Shawn



INTRODUCTION

With this guide you can clean or repair a faulty keypad.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Keypad




- Place phone face down so battery cover is showing.

Step 2



- Use thumb to push the cover down and off.
- Lift battery cover off the device.

Step 3

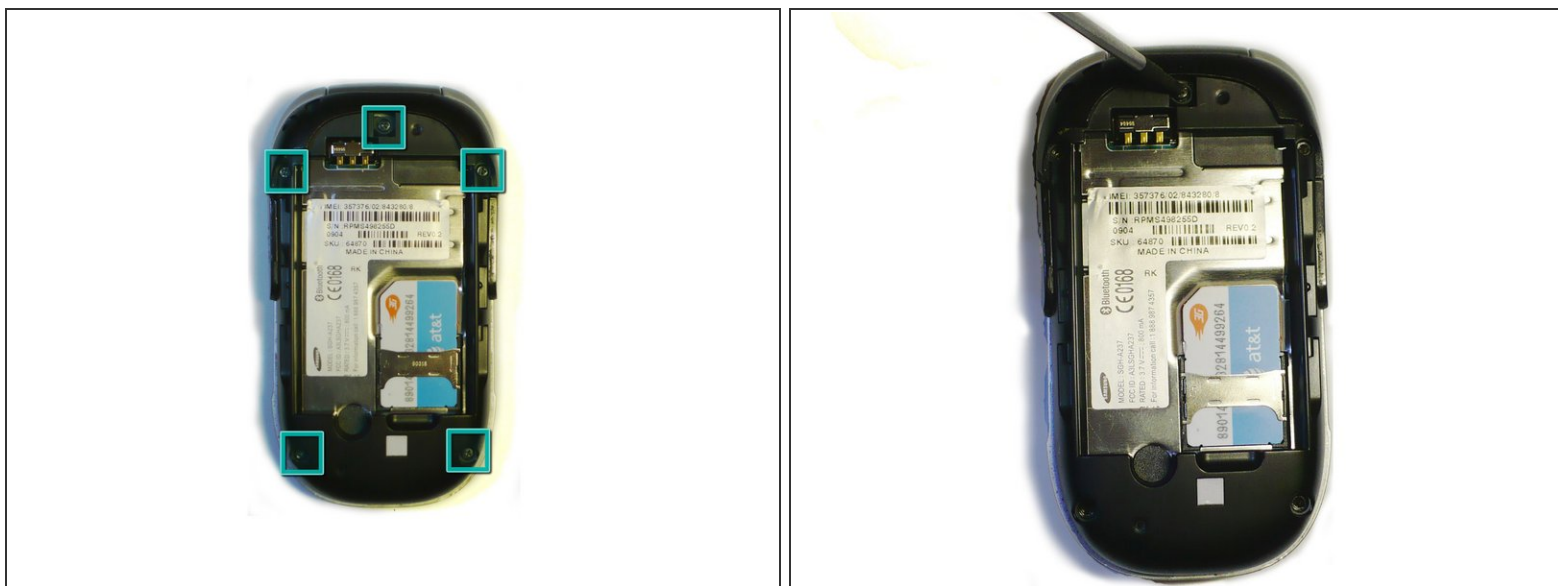

- Remove the five screws with a size 00 screwdriver. There are 4 in the corners and one on the top as shown.

Step 4



- Be sure that all 5 screws are removed and start to carefully remove the back cover by using the iPod Opening Tool in the slots on the bottom of the device.
- Some force must be applied, and the back cover should come off.

Step 5




- Detach the tab from the logic board shown by using the Ipod Opening Tool

Step 6



- Use the Ipod Opening Tool to lift the green logic board carefully.
- Remove the logic board from the device.

Step 7

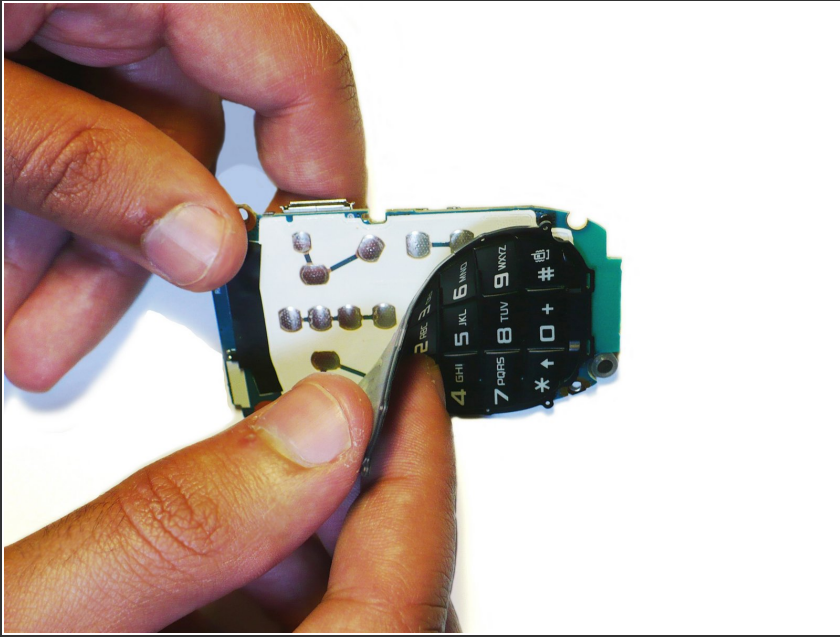

- The keypad should peel off the logic board with a gentle pull.
- Use a clean, soft, cotton cloth to gently remove any debris or liquid that may be located on the pad or logic board interface.

To reassemble your device, follow these instructions in reverse order.