


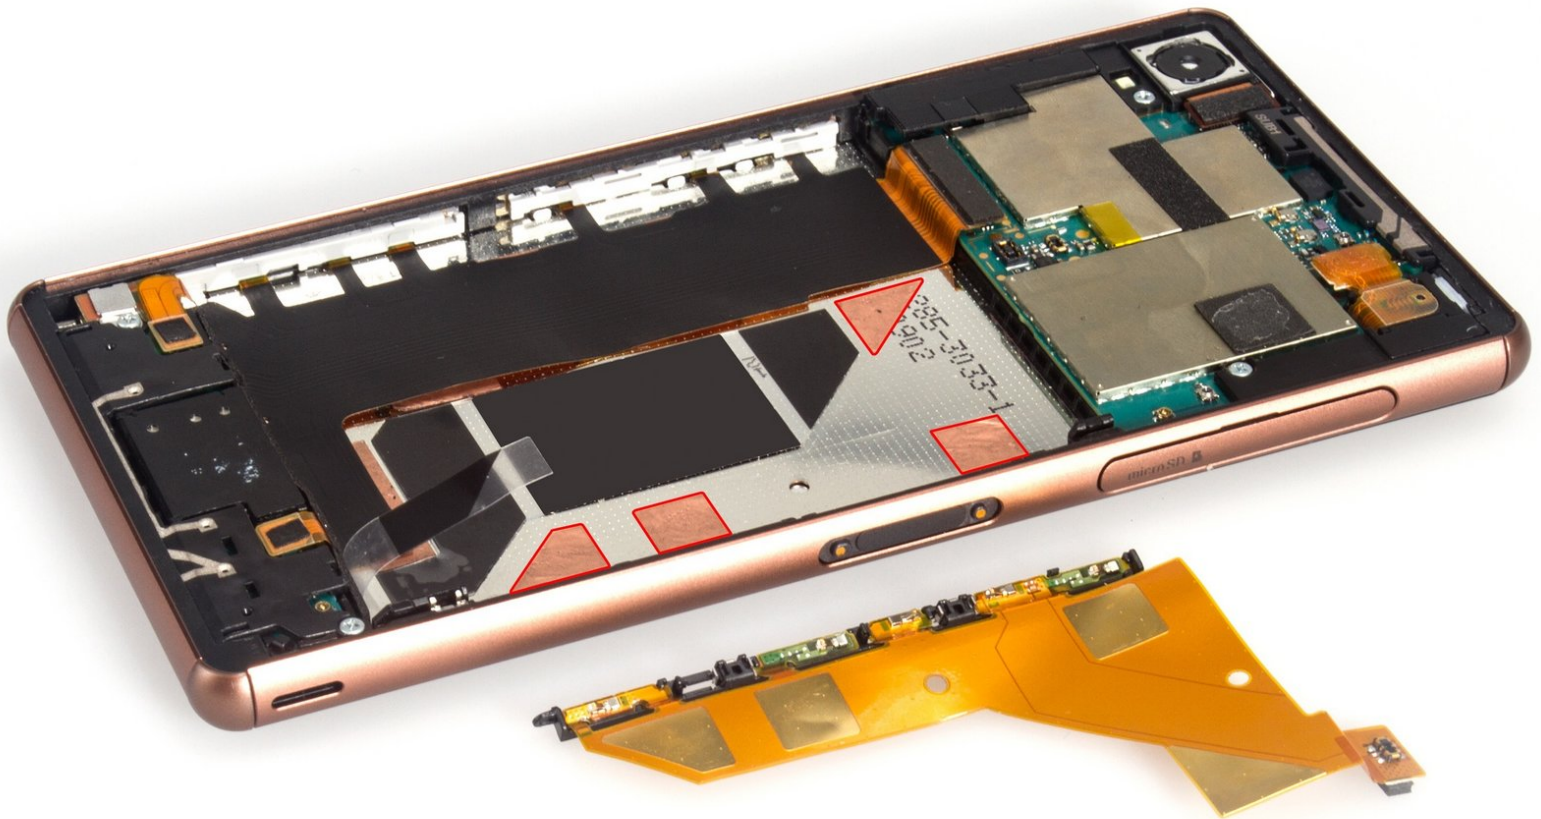

Sony Xperia Z3 Dual Magnetic Charging Flex Replacement

Written By: Sophia





TOOLS:


- [Heat Gun](#) (1)
- [Suction Handle](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [Spudger](#) (1)



PARTS:

- [Sony Xperia Z3 and Z3 Dual Wireless Charging Cable](#) (1)

Step 1 — Magnetic Charging Flex

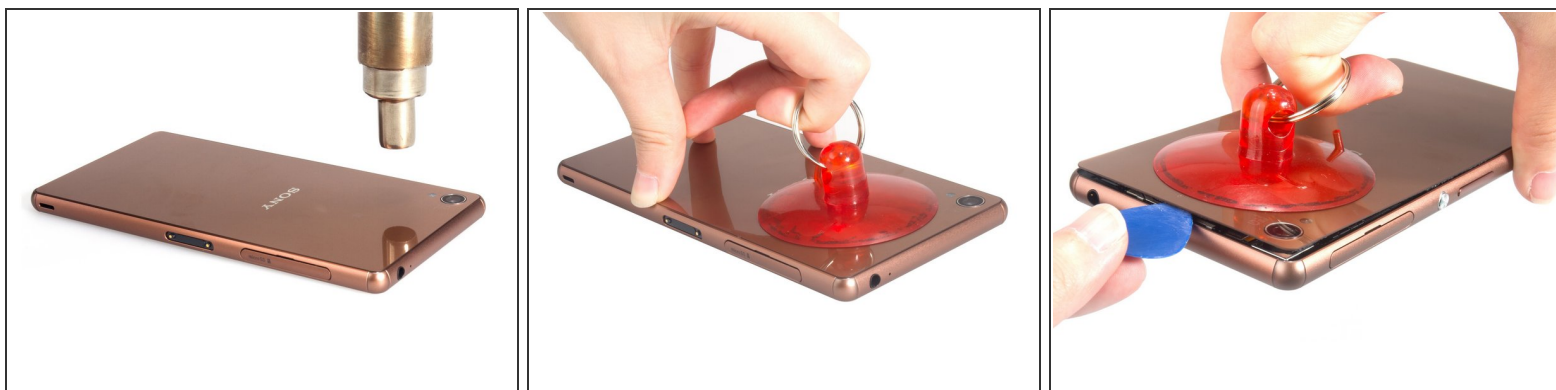


- Heat to soften back cover sticker.
- Place the suction cup and drag to open a gap.
- Insert into guitar pick.

Step 2




- Slide the guitar pick to cut the sticker and remove the back cover.

Step 3

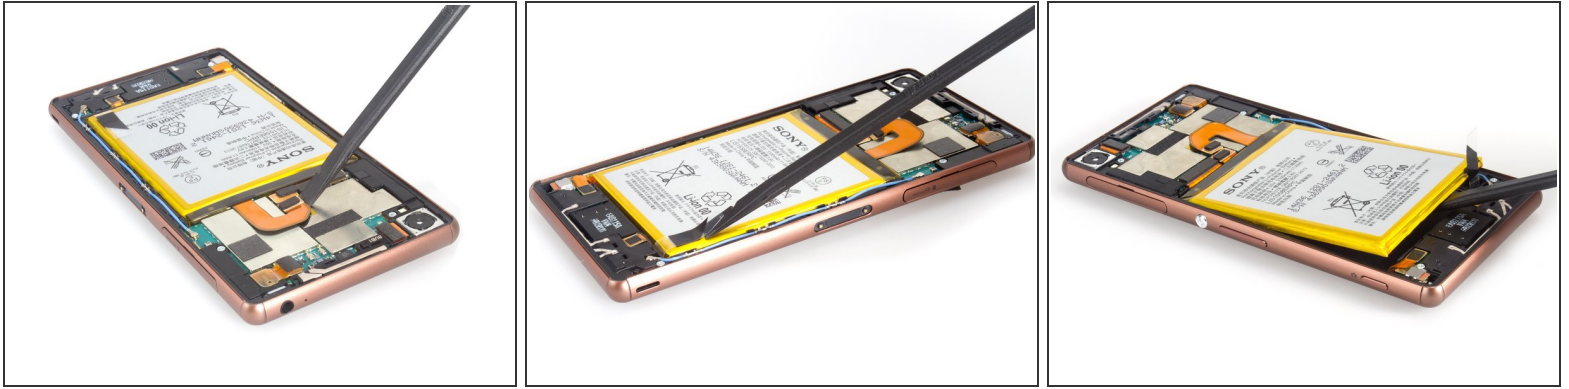


- Remove battery.

Step 4

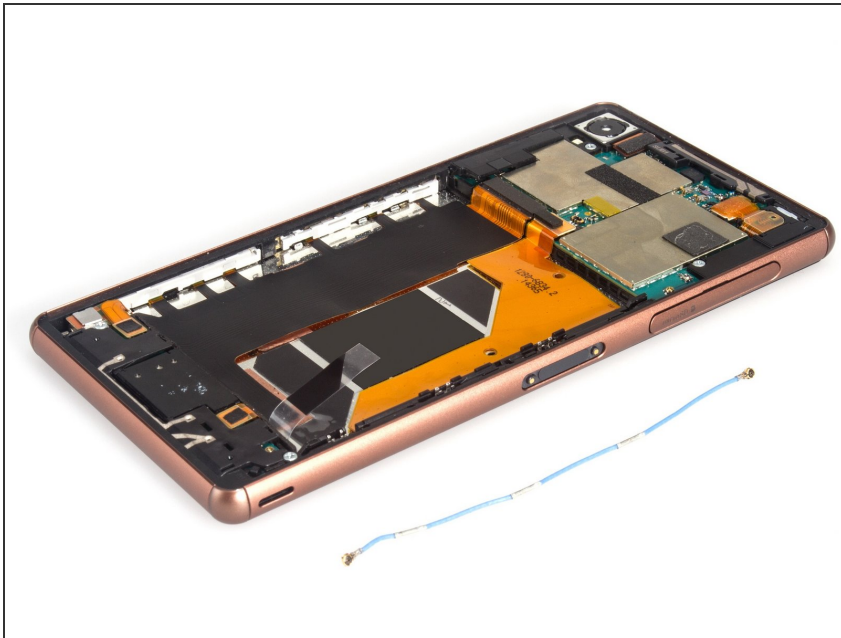

- Remove signal flex.

Step 5

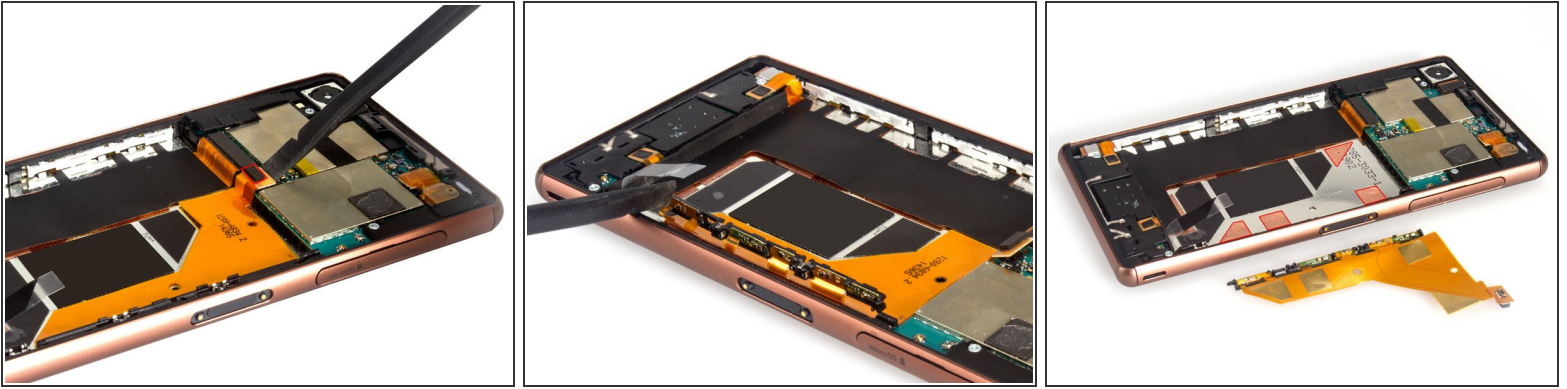

- Release magnetic charging flex with the motherboard.
- Get free the flex securing bracket from the hidden keys of mid frame.
- Remove the flex from several square stickers.

To reassemble your device, follow these instructions in reverse order.