



# Nokia 2610 Circuit Board Replacement

Written By: Andrew Wood



---

 **TOOLS:**

- [T6 Torx Screwdriver](#) (1)
-

## Step 1 — Battery and Sim Card



- Place your thumb on the middle of the back cover and push it toward the bottom of the phone to slide the cover off.

## Step 2



- Use a plastic opening tool (or your finger) to gently pry the battery out of the battery slot on the back of the phone.

### Step 3



- Lift the metal sim card holder (at the bottom of the battery slot) up and carefully pry the sim card out of its slot with a plastic opening tool or your finger.
- After removal, lower the metal sim card holder into its original position.

### Step 4 — Front Panel




- Insert the plastic opening tool into the crack between the front and back panels.
- Gently pry the front cover away from the back cover while sliding the plastic opening tool towards the top of the phone.

## Step 5




- Lift the bottom of the front cover away from the phone.
  - Continue lifting until the top of the front cover is fully removed from the phone.
- i** Note: To replace the Keypad, gently lift it out of the front cover. It is located below the clear viewing window.

## Step 6 — Circuit Board

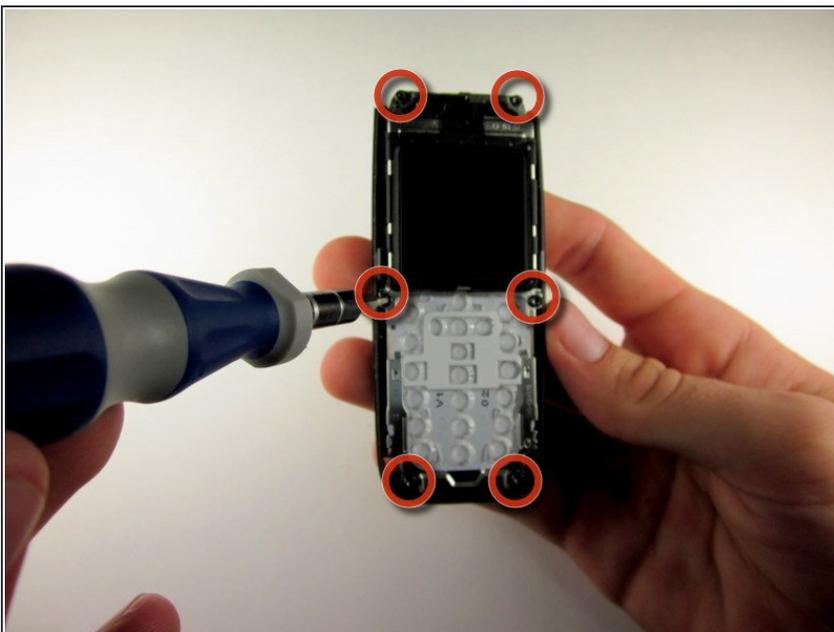

- Use the Torx screwdriver with the T6 attachmet to remove the 6 .4 mm screws around the outside of the circuit board.
- i** Note: Removing the 4 T6 screws around the screen will loosen it, so don't worry if the screen also separates from the circuit board.

## Step 7

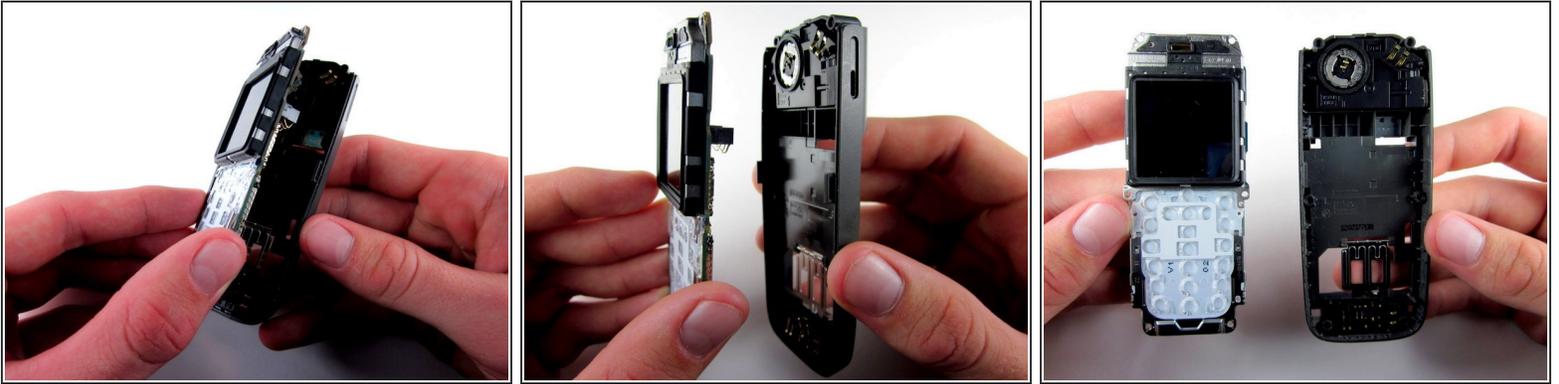

- Lift the circuit board out of the back cover.

To reassemble your device, follow these instructions in reverse order.