



# Azpen A720 Battery Replacement

The battery is important for all tablet...

Written By: Ben



# INTRODUCTION

The battery is important for all tablet functions. If the battery is malfunctioning you will want to replace it. Replacing your battery is a relatively simple task and following this guide will help you fix your battery related problems.


---

## TOOLS:

[Magnetic Project Mat](#) (1)  
[Phillips #00 Screwdriver](#) (1)  
[iFixit Opening Tool](#) (1)  
[Lead-Free Solder](#) (1)  
[Soldering Iron](#) (1)  
[Tweezers](#) (1)


---

## Step 1 — Back Cover

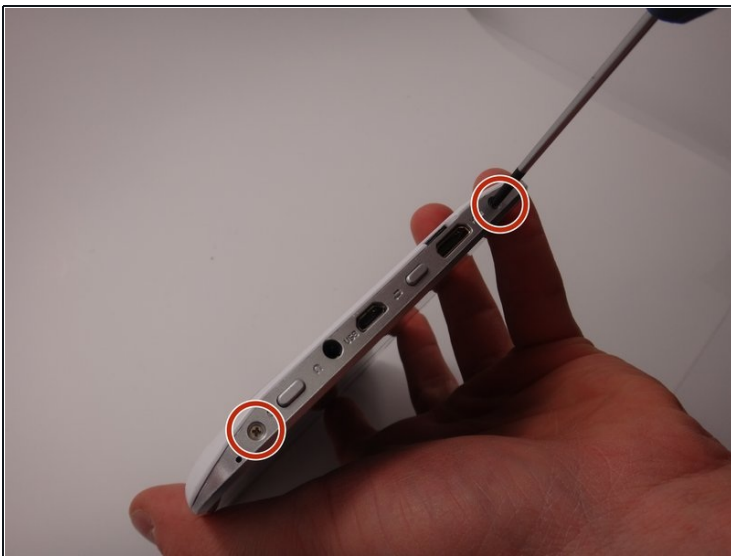

- Use a Phillips #00 screwdriver to remove the two 4mm screws found on the top edge of the tablet near the power button.

## Step 2

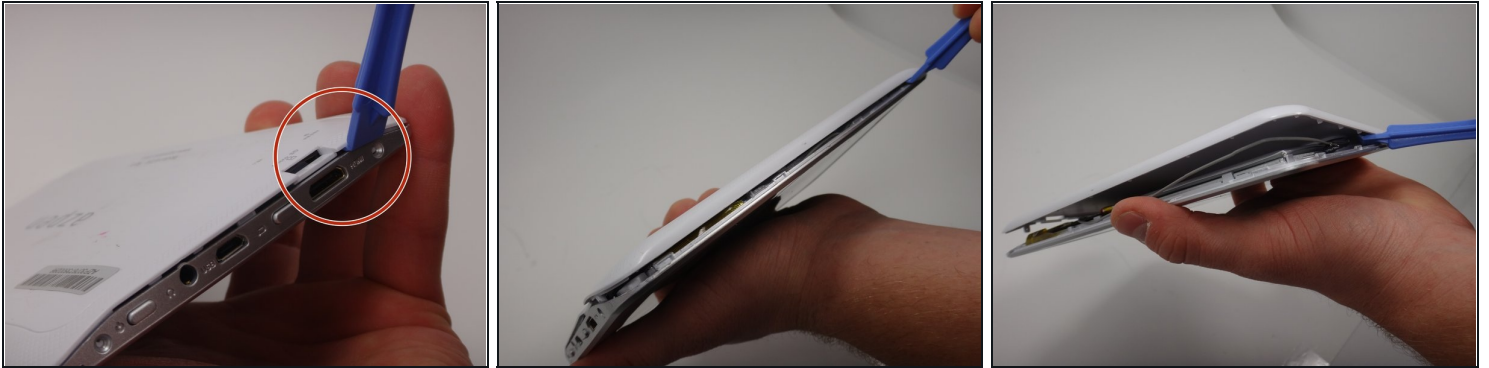

- Use the plastic opening tool to pry the white back from the silver frame. Start near the micro SD slot.
  - ① Slide the plastic opening tool around the perimeter of the casing until the back is disconnected.

## Step 3




- Remove the rear casing.

## Step 4 — Battery




- Locate the batteries' connection points.

## Step 5

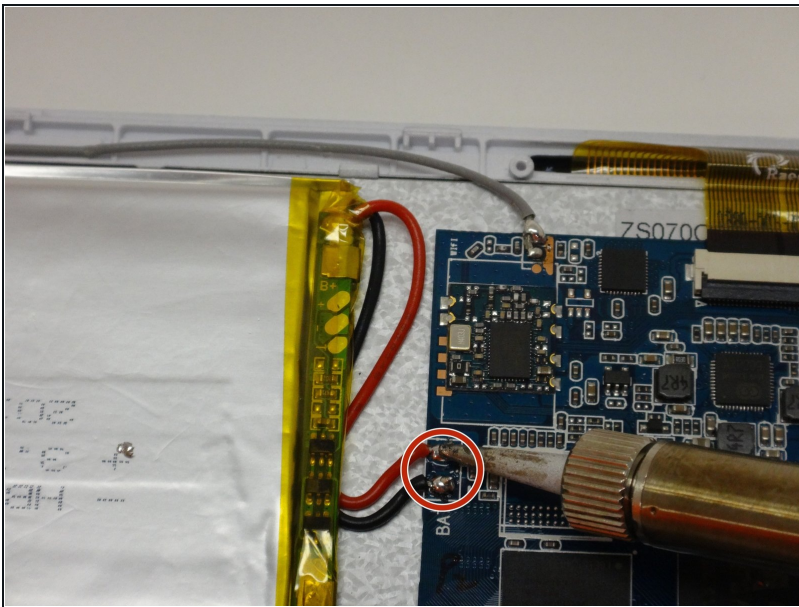


- ⚠ A soldering iron can reach 600° F, which will cause serious burns. Learn how to solder properly [here](#). Using [tweezers](#) to hold the wires will reduce the risk of burns.
- Use a soldering iron to melt the connections which attach the battery to the motherboard.
- Disconnect the red and black wires from the motherboard.

## Step 6

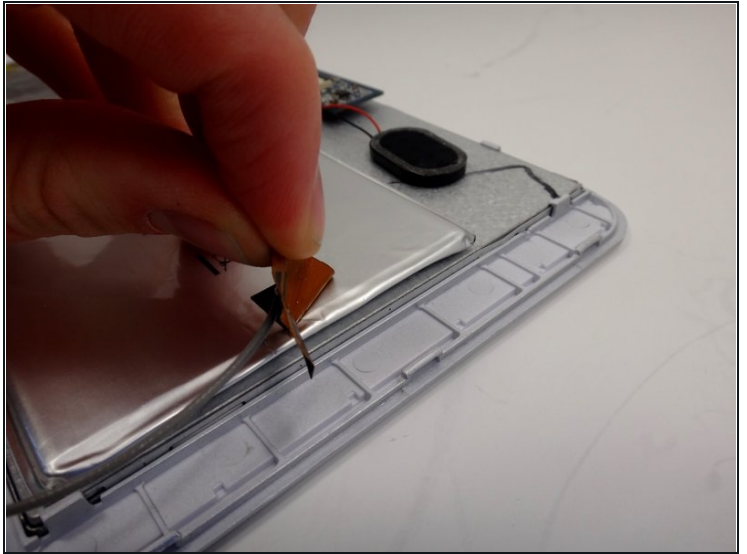


- Peel the black sticker off the battery to disconnect the wifi antennae.

## Step 7

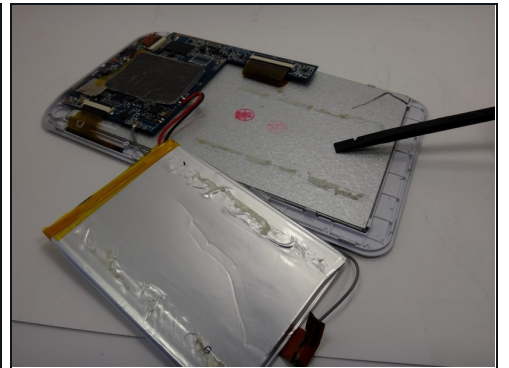

- Slide the spudger between the battery and the metal backing. Move the spudger back and forth in a sawing motion to break the adhesive seal between the battery and the backing.
- ① When the spudger is underneath the battery avoid prying. A prying motion could damage the battery.

## Step 8

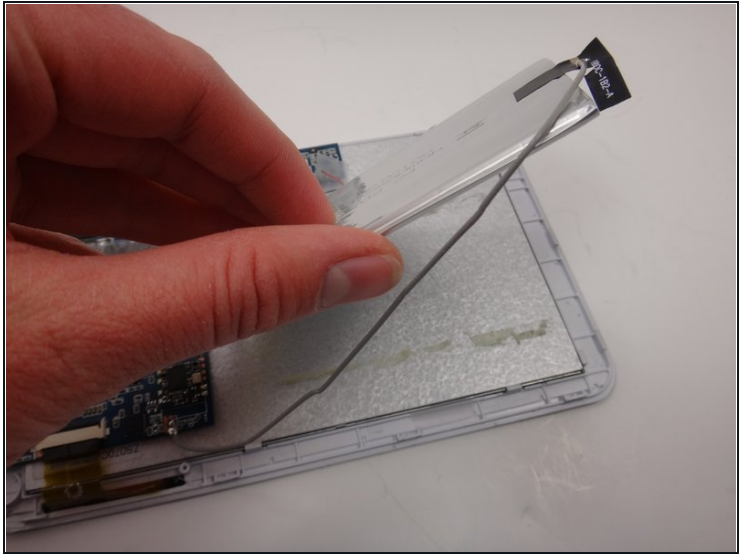

- Remove the old battery and replace it with the new battery.
-