




HTC Desire V Speaker Replacement

This guide will outline how to remove and replace the main rear speaker of the HTC Desire V smartphone.

Written By: William McCusker

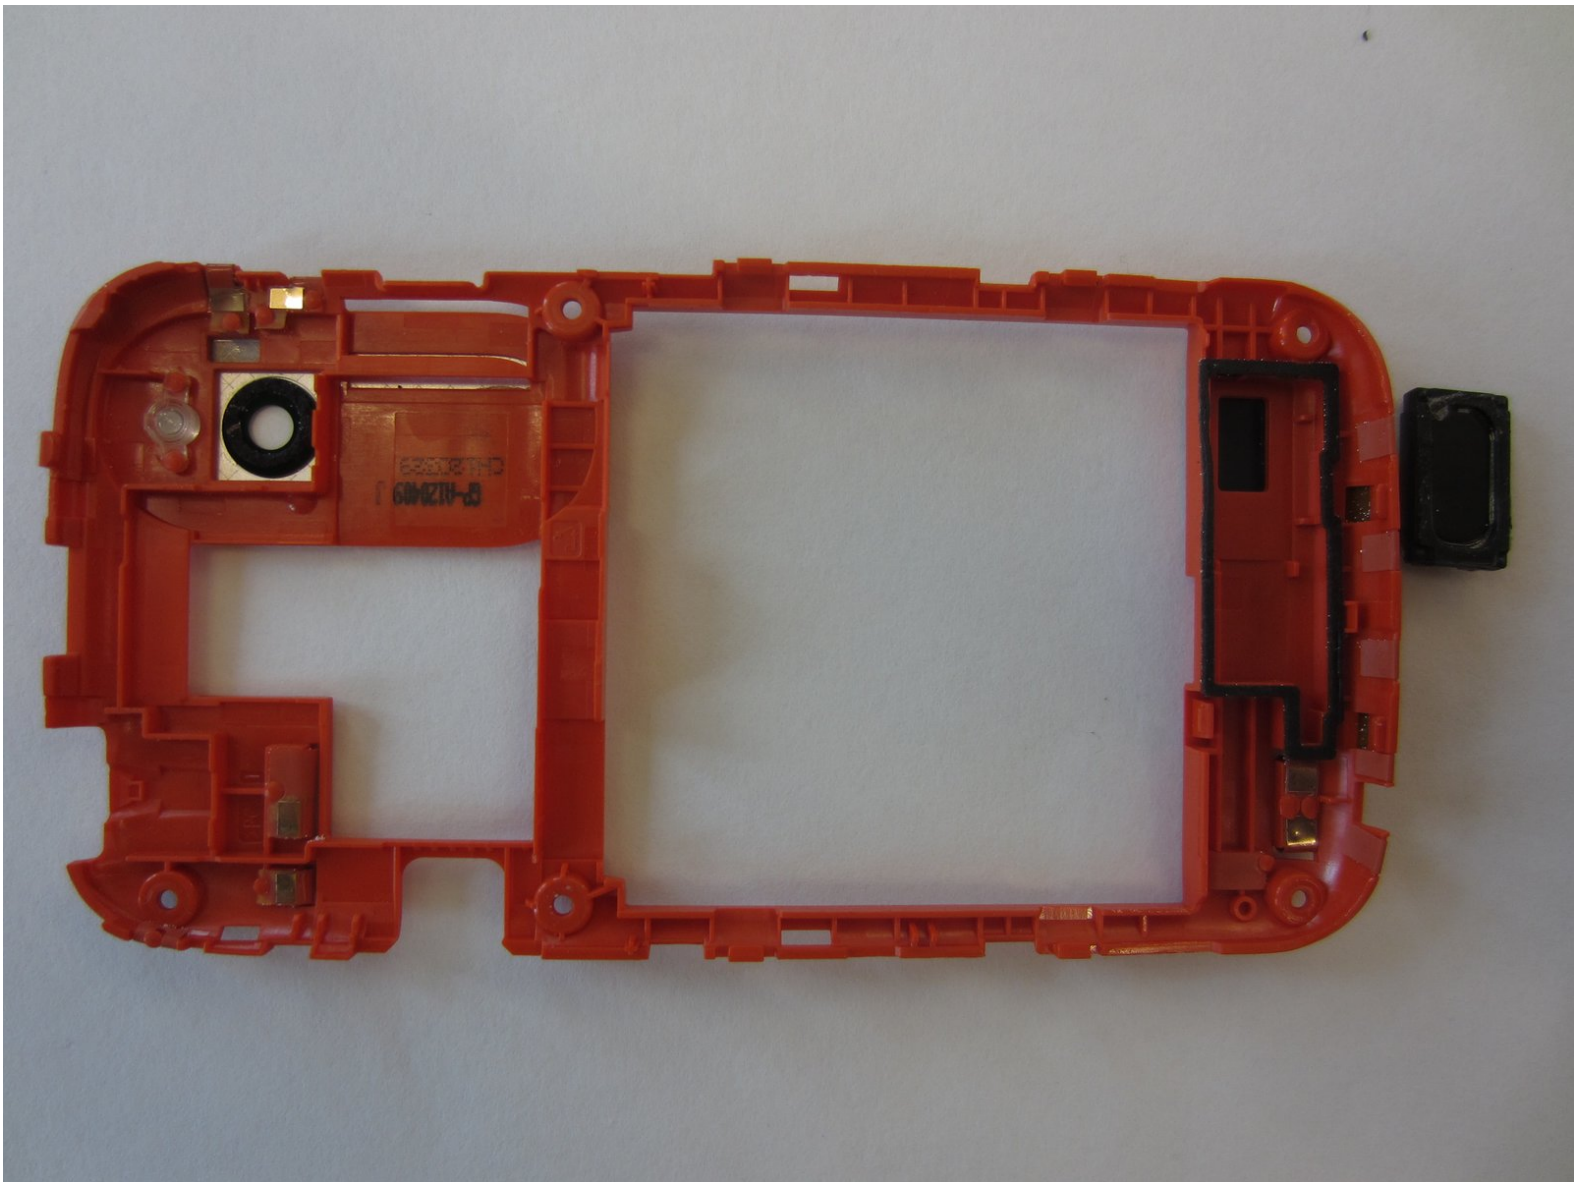

INTRODUCTION

This guide will outline how to remove and replace the main rear speaker of the HTC Desire V smartphone.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- Gently pry back cover away from phone.

i If you are having difficulty you may need to use a Spudger or plastic opener.


Step 2



- Lever the battery out from the bottom end first.

! Do not bend or puncture the battery.

Step 3 — Midframe

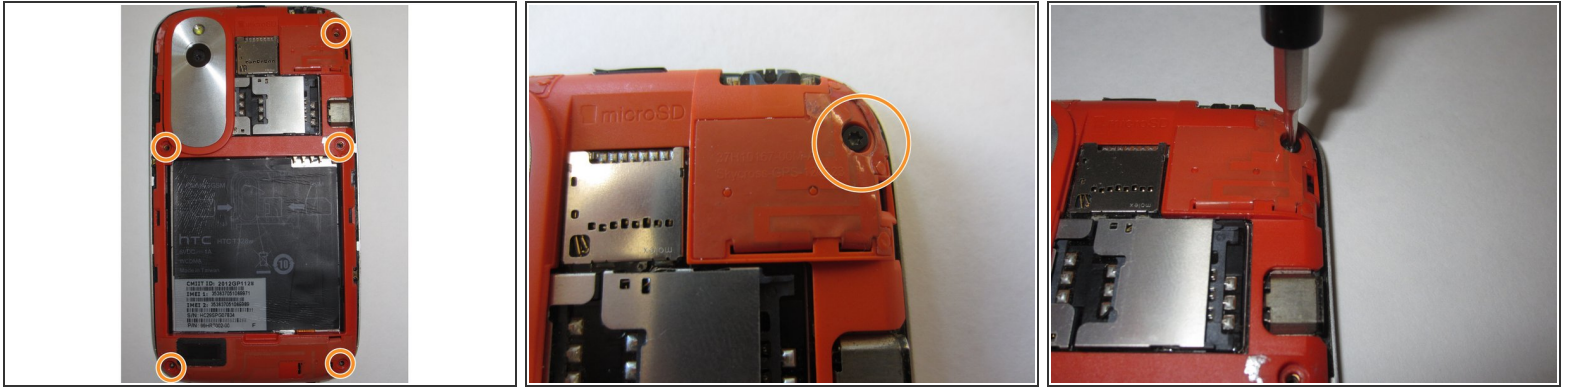


- Use a Torx T5 screwdriver to unscrew and remove five 3.0 mm screws from the rear frame.

Step 4



- Use an opening tool or a spudger to gently remove the rear frame.

Step 5 — Speaker

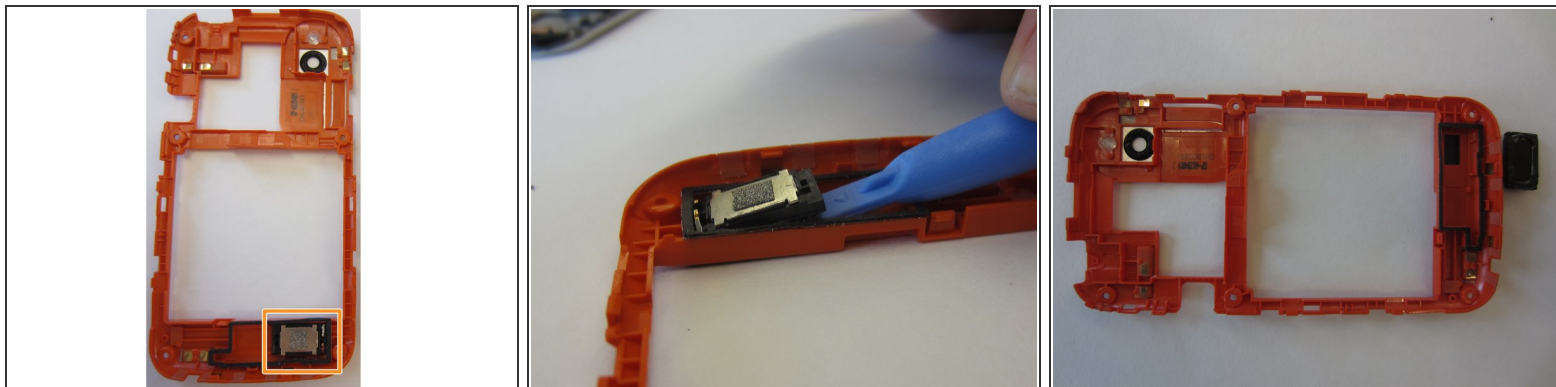

- Using a smaller prying tool, spudger or similar, lever up the speaker at the bottom end of the phone shown in the picture (bottom right)
- The bottom is sticky, so expect some resistance

To reassemble your device, follow these instructions in reverse order.