



Sony Ericsson z300 Microphone Replacement

Replace your microphone so you can actually talk to people on the phone.

Written By: Alex Serventi



INTRODUCTION

This guide shows how to remove the Microphone.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Back Phone Cover



- To remove the back cover, use your thumb to press down on the center of case and slide it off.

Step 2 — Battery



- Using a fingernail lift the battery out of the phone.

Step 3 — Sim Card




- Slide the sim card out with your thumb.

Step 4 — Back Dark Grey Case




- To remove the back case first remove the four screws shown with a T5 Torx screwdriver

Step 5

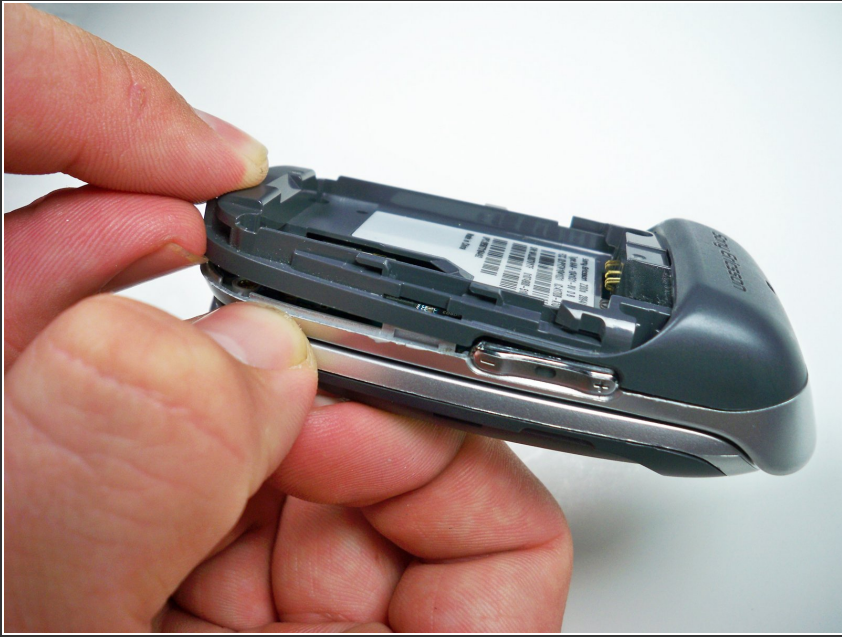


- Using your fingernail lift up the side of the casing around the bottom of the phone to release all five of the clips.

Step 6

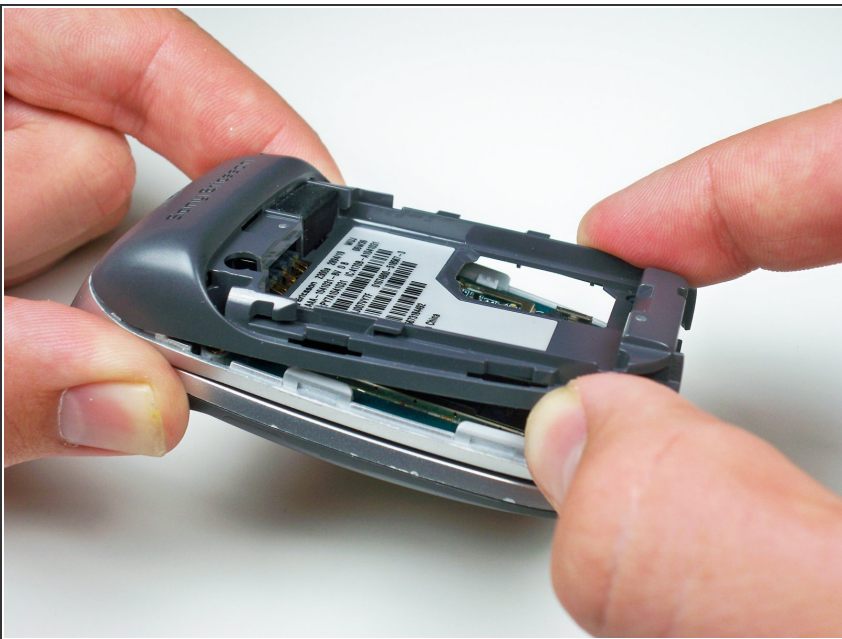


- Lift up towards the bottom and slide the case off.

Step 7 — Motherboard

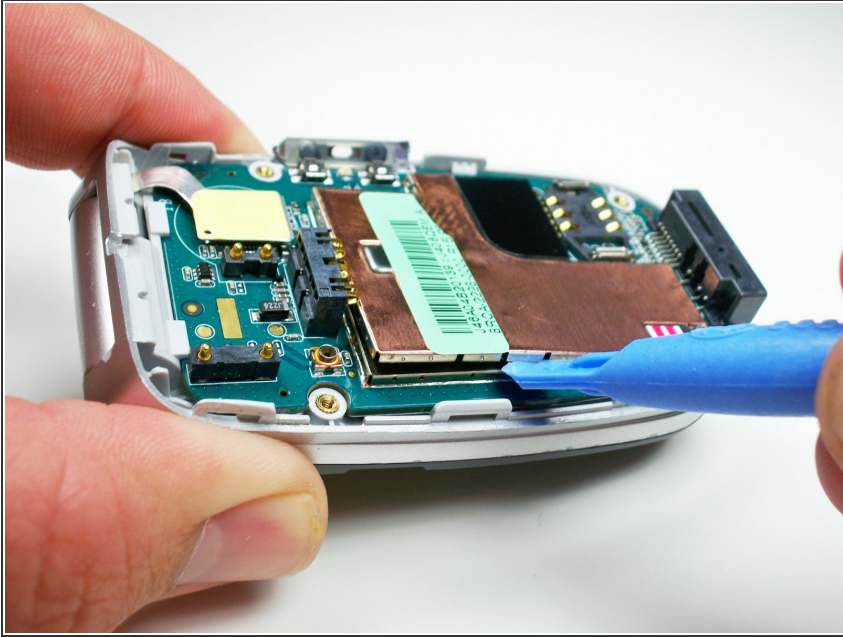


- Use a plastic opening tool to lift up the brass colored panel.

Step 8

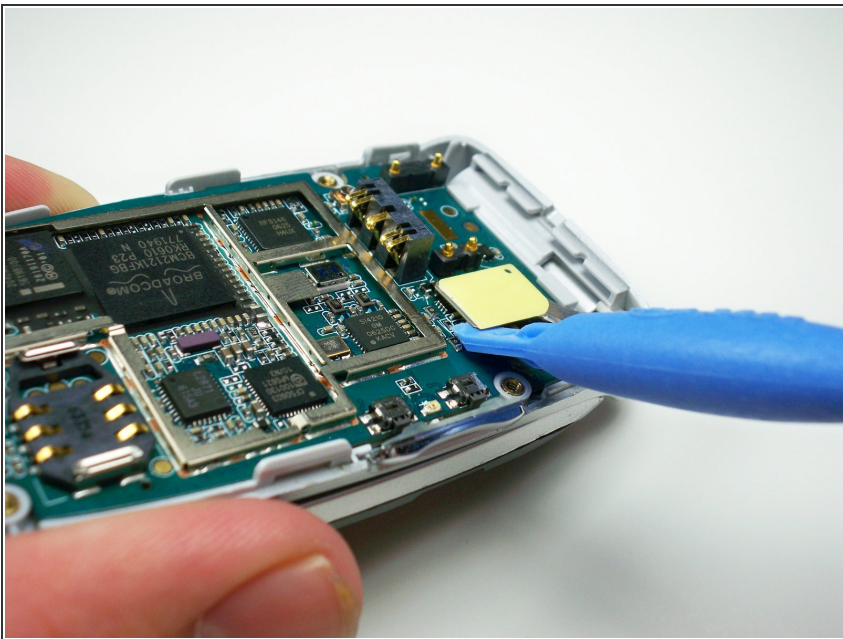


- Flip up the yellow tab using a plastic opening tool to disconnect the motherboard from the phone body.

Step 9

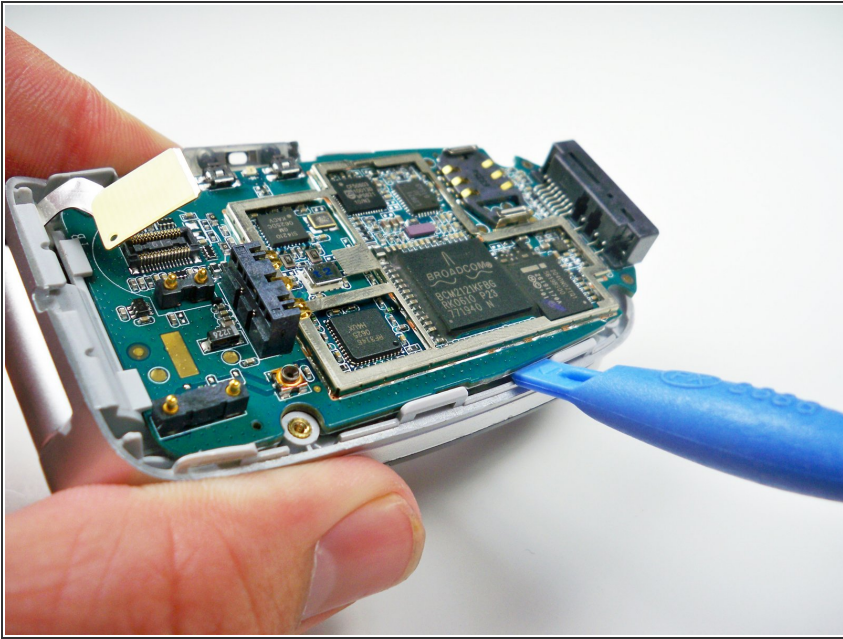

- Work the plastic opening tool around the edges of the motherboard to release it from the clips.

Step 10 — Keypad

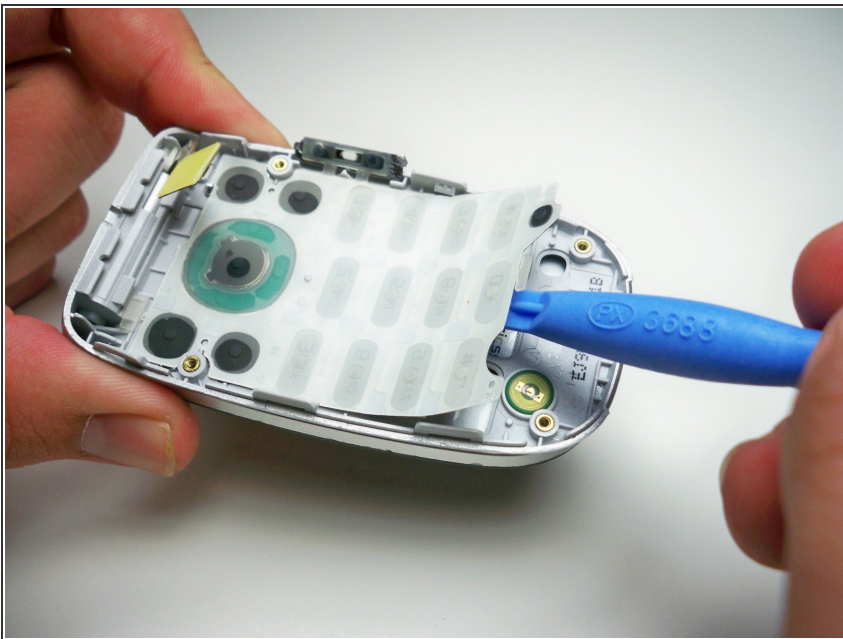

- Using a plastic opening tool lift up the keypad to remove it.

Step 11 — Microphone



- Use a plastic opening tool to lift the microphone out of its circular slot.

To reassemble your device, follow these instructions in reverse order.