



# Disassembling IBM ThinkPad A30 BIOS Battery

This disassembly shows how to remove the ThinkPad's BIOS battery.

Written By: Alan



---

## INTRODUCTION

Remove the ThinkPad A30 BIOS battery.

The following steps will be shown:

- Battery removal
- BIOS battery removal



### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- ❗ Flip the ThinkPad over so that it is upside down.
- Slide the highlighted tab to the left.
- With your finger on the tab, remove the battery by lifting it upwards away from the laptop.

## Step 2 — BIOS Battery

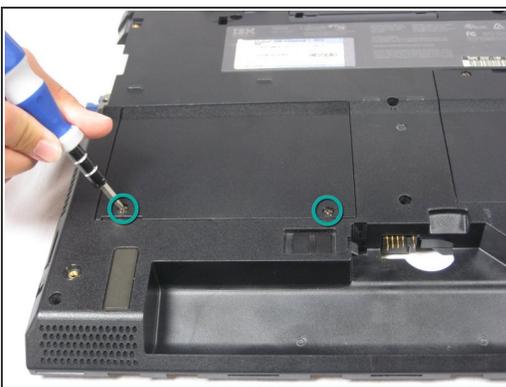

- Remove the two 5.3mm cover screws.
- Gently lift the cover.
- Take out the BIOS battery by unplugging it from the computer.

To reassemble your device, follow these instructions in reverse order.