




Ryobi P202 Bit Storage Clip Replacement

How to replace the Bit Storage Clip on the Ryobi P202 power drill.

Written By: Joseph Eckstein

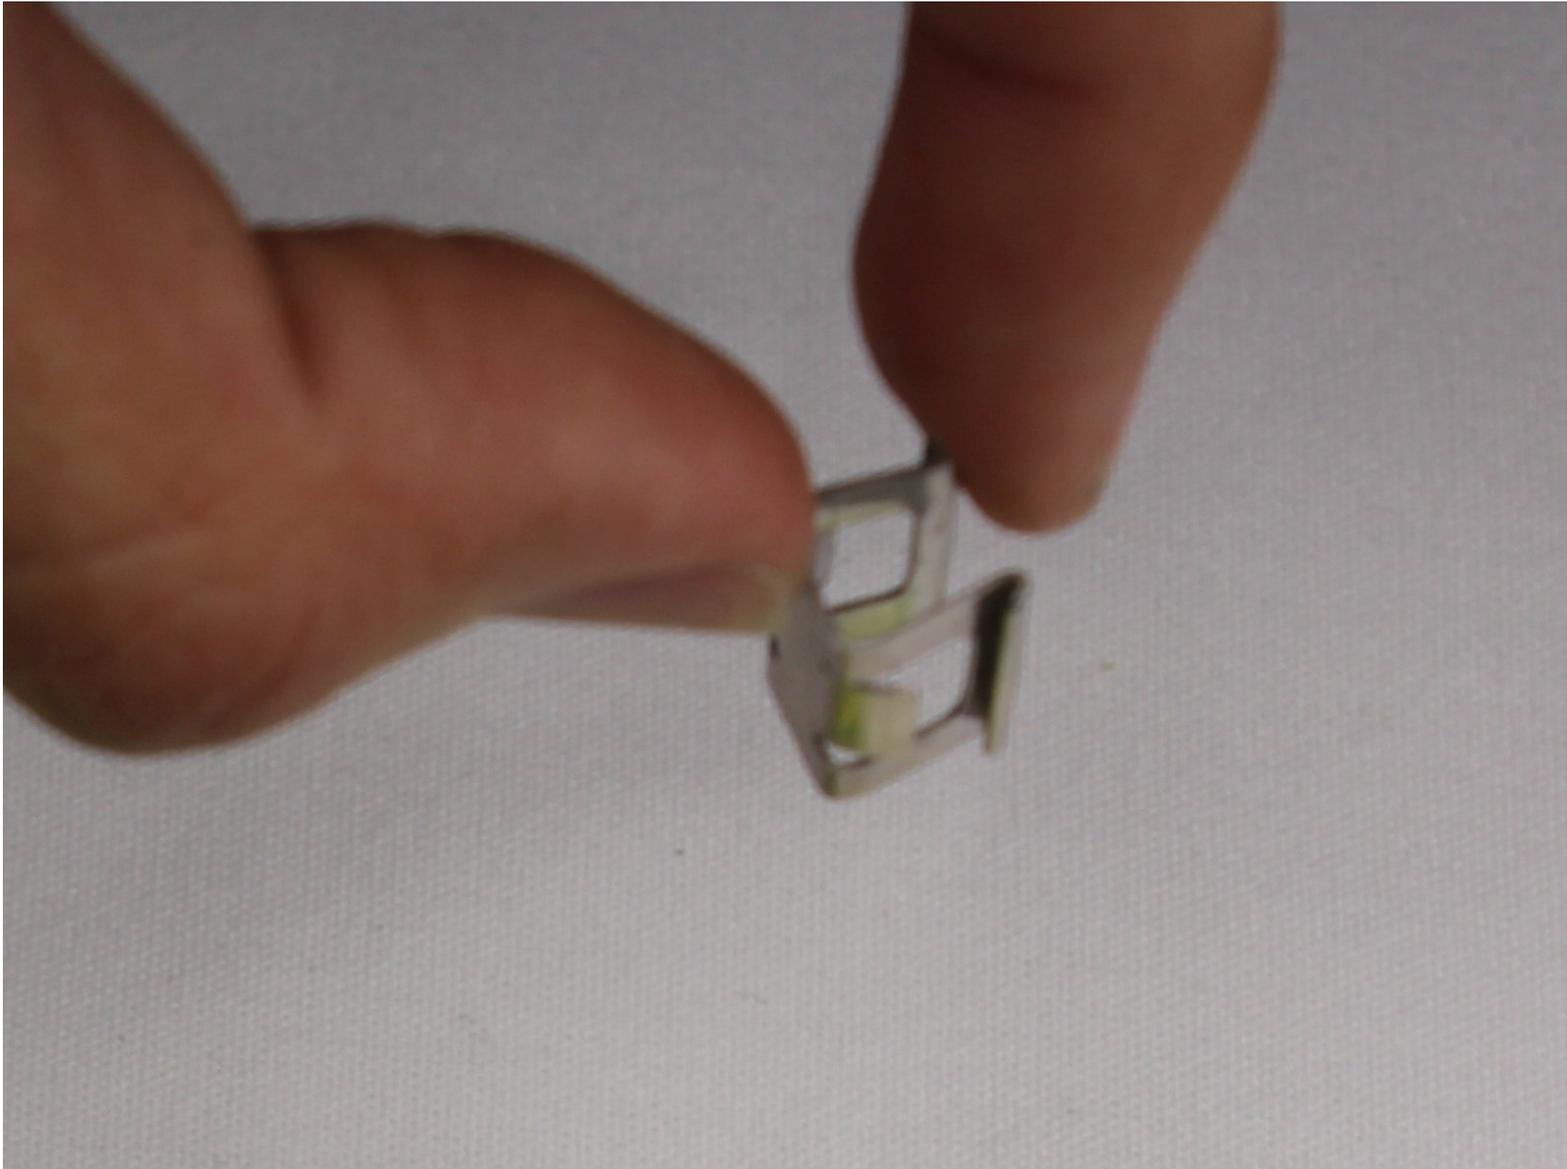

INTRODUCTION

This guide demonstrates how to replace the bit clip located on the lower front portion of the drill above the battery. This guide requires opening the drill, but does not require removing any of the internal electronic components.

TOOLS:

- [T10 Torx Screwdriver](#) (1)
-

Step 1 — Battery



⚠ The battery can shock you. Only touch plastic, non-conductive components.


- Detach the battery unit from the drill body by pressing the battery release buttons on both sides of the unit and pulling outwards.

Step 2 — Right Side Case





- Use a Torx T10 screw driver to unscrew all ten 13.5 mm screws from the drill casing to gain access to the interior.

Step 3

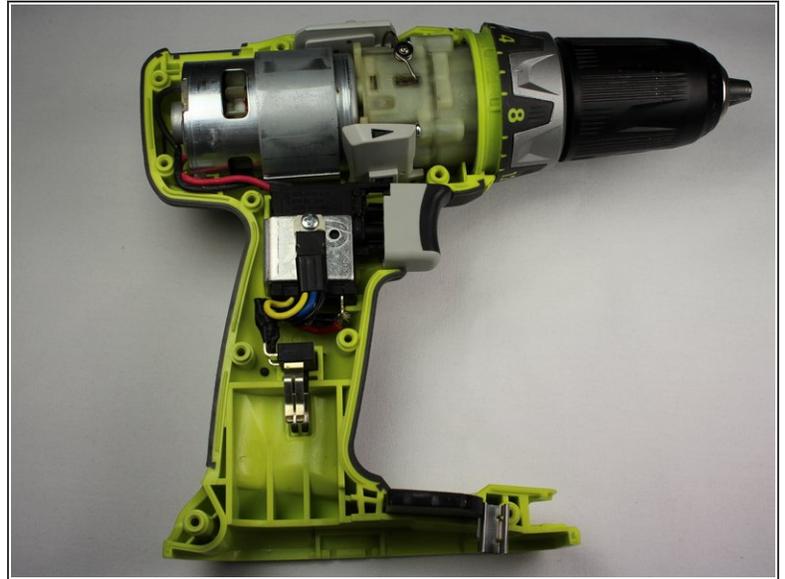

- Gently lift the casing from the drill body.
 - Take the casing completely off the drill body to gain access to the interior of the drill.
- i** The Ryobi P202 casing has Part #: 200690001

Step 4 — Bit Storage Clip

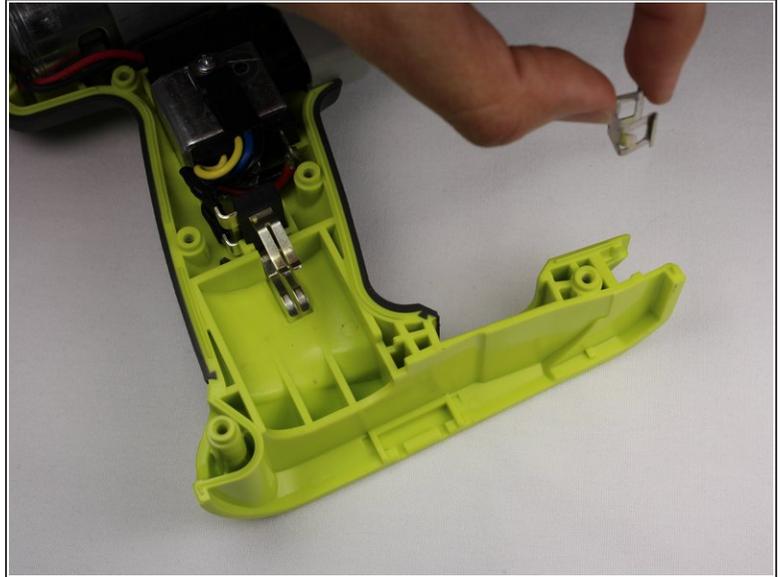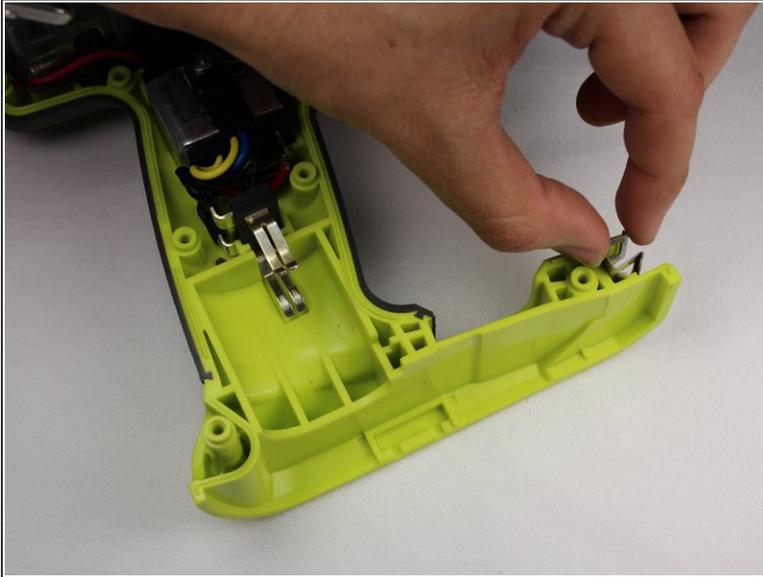

- Grip the bit-clip and gently lift up to remove it from the case.

i The bit-clip is Part #: 630206007

To reassemble your device, follow these instructions in reverse order.