




# X-Street STR Viper

This is a prerequisite guide to remove the underside panel which is necessary to complete our other guides.

Written By: slcombs

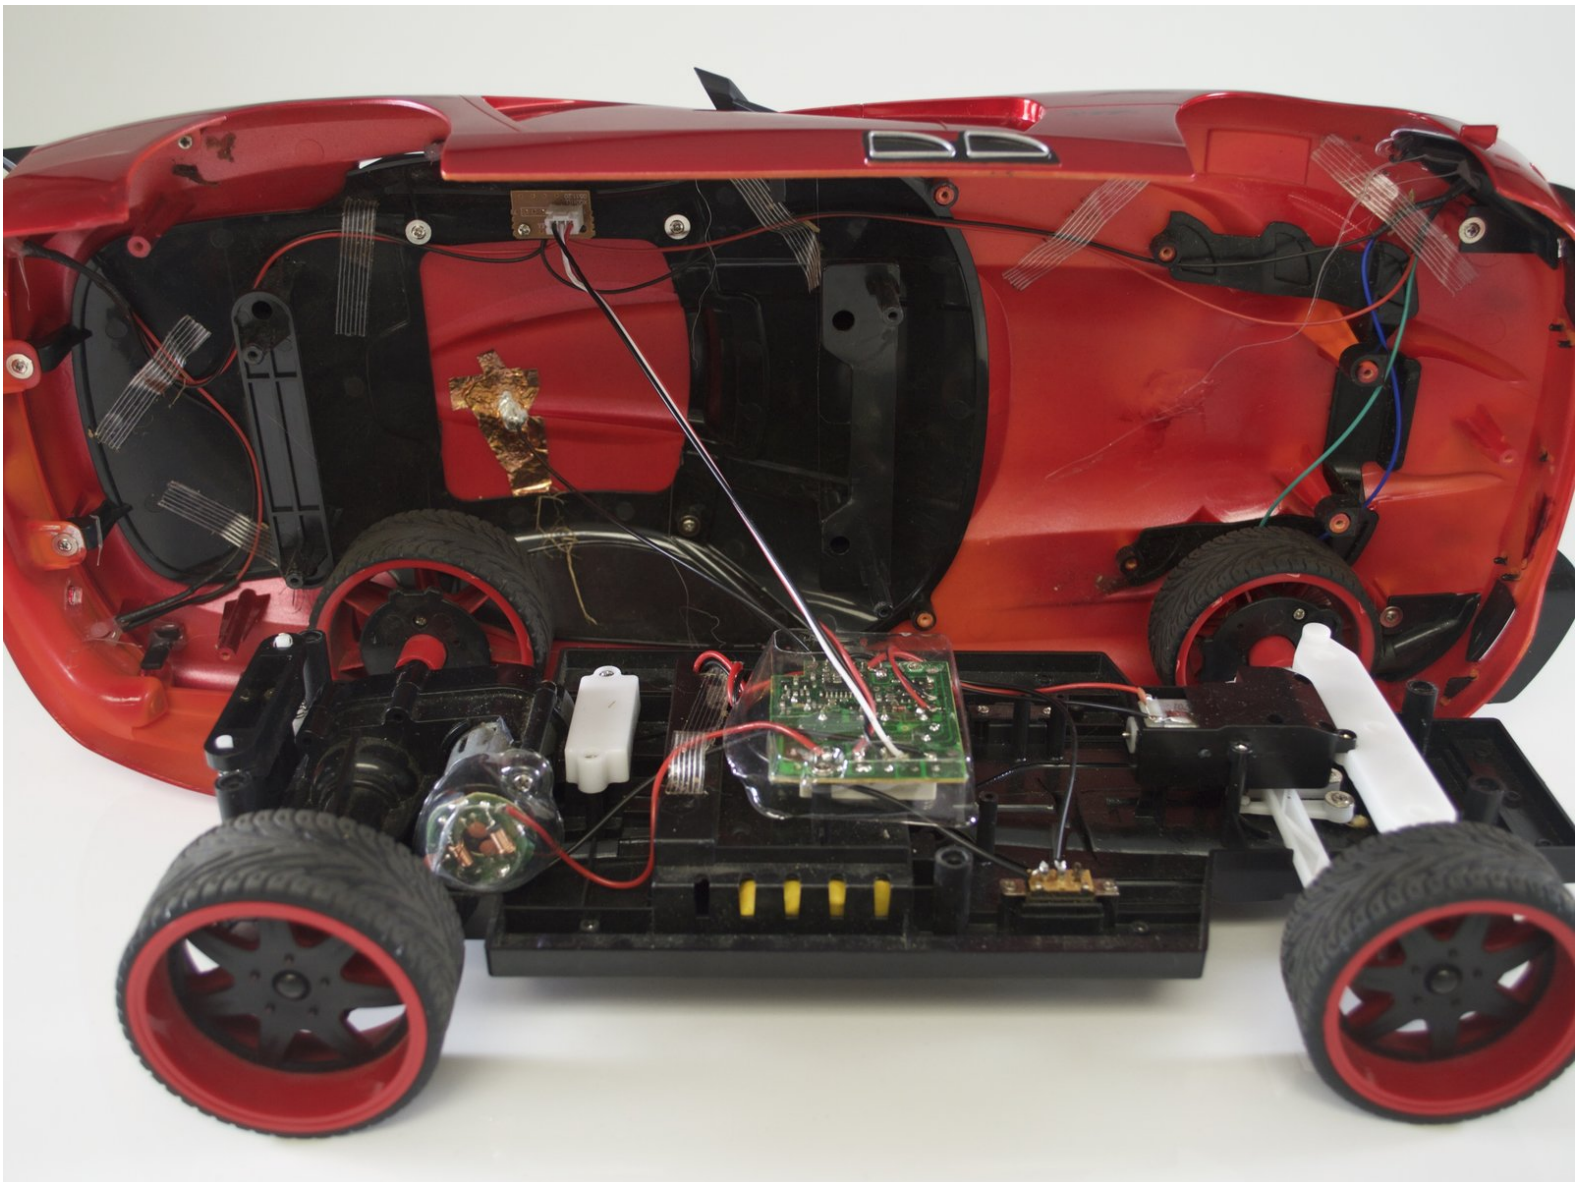

---

## INTRODUCTION

This is a simple guide that will open up the car's insides and allow more access to the other parts of the car.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — X-Street STR Viper





- Remove the four 3 mm screws from the bottom panel using a 3 mm Philips #1 screwdriver.

## Step 2



- Use the 3 mm Philips #1 screwdriver to remove the three 3 mm screws that connect the front panel with the main underside panel. Also remove the 6 mm front panel screw.
- Remove the bottom panel by pulling the plastic tabs from either side of the car.




## Step 3

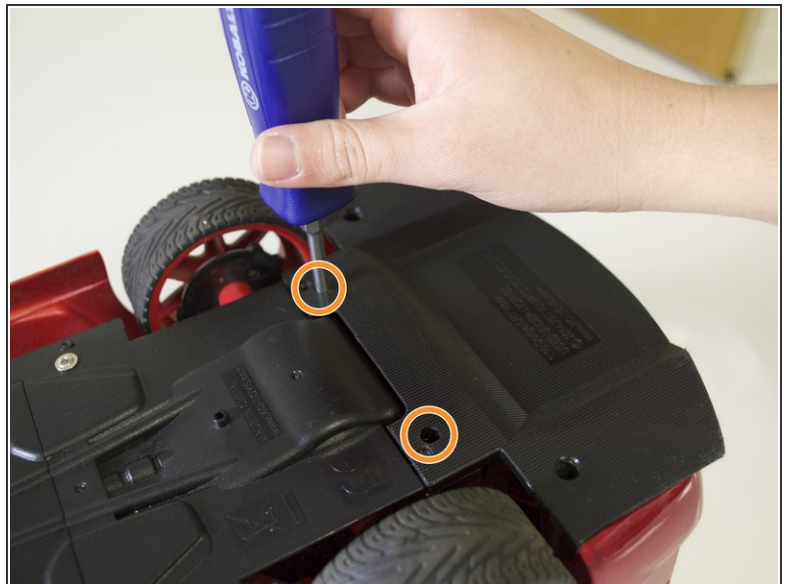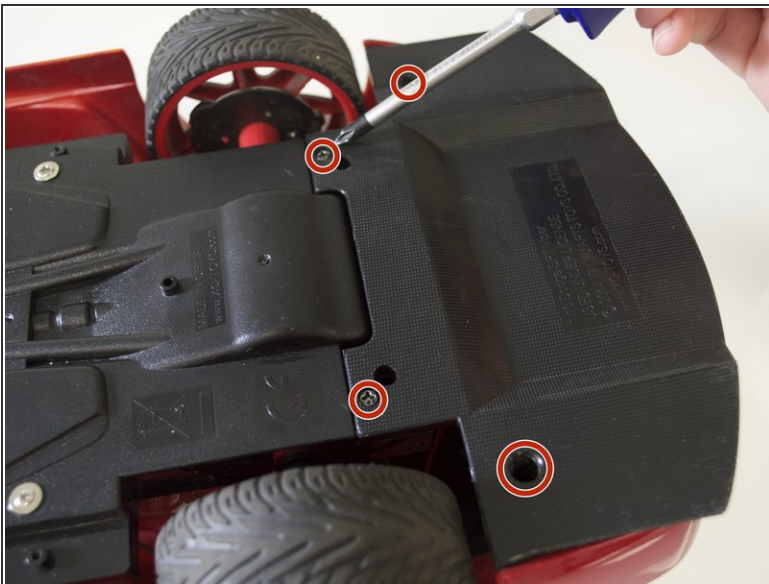

- Remove the two 6 mm screws and the two 3 mm screws that connect the back panel to the main underside panel.
- Remove the two 6 mm screws that connect the rear panel to the body of the car.



## Step 4

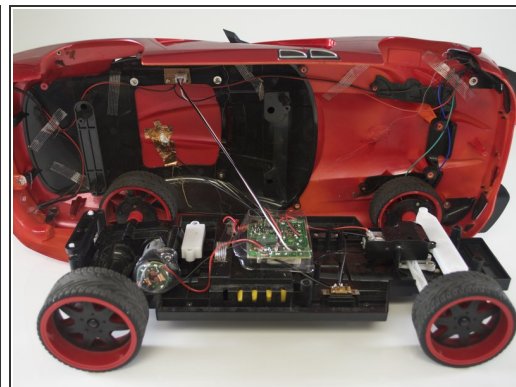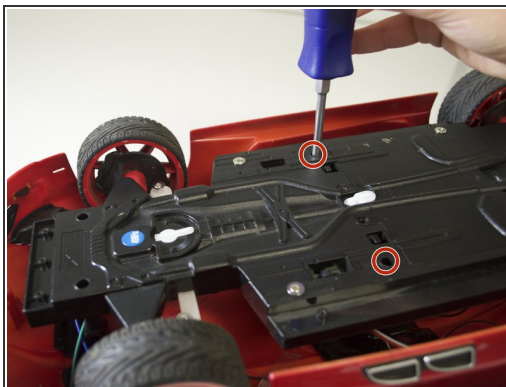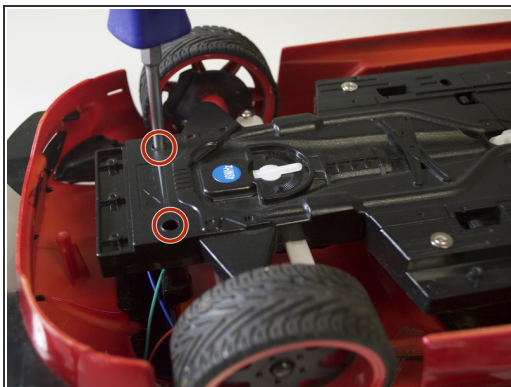

- Remove the two front 6 mm screws and the two middle 6 mm screws.
  - ★ Remove the main underside panel carefully. Excessive force could damage or disconnect the fragile wires attached to this piece.
- Remove the car shell and place it on the left side of the car.

To reassemble your device, follow these instructions in reverse order.