




4Sight 9 Battery Replacement

This guide will provide a step by step process to locate and remove the battery for the 4Sight.

Written By: Jack Applegate

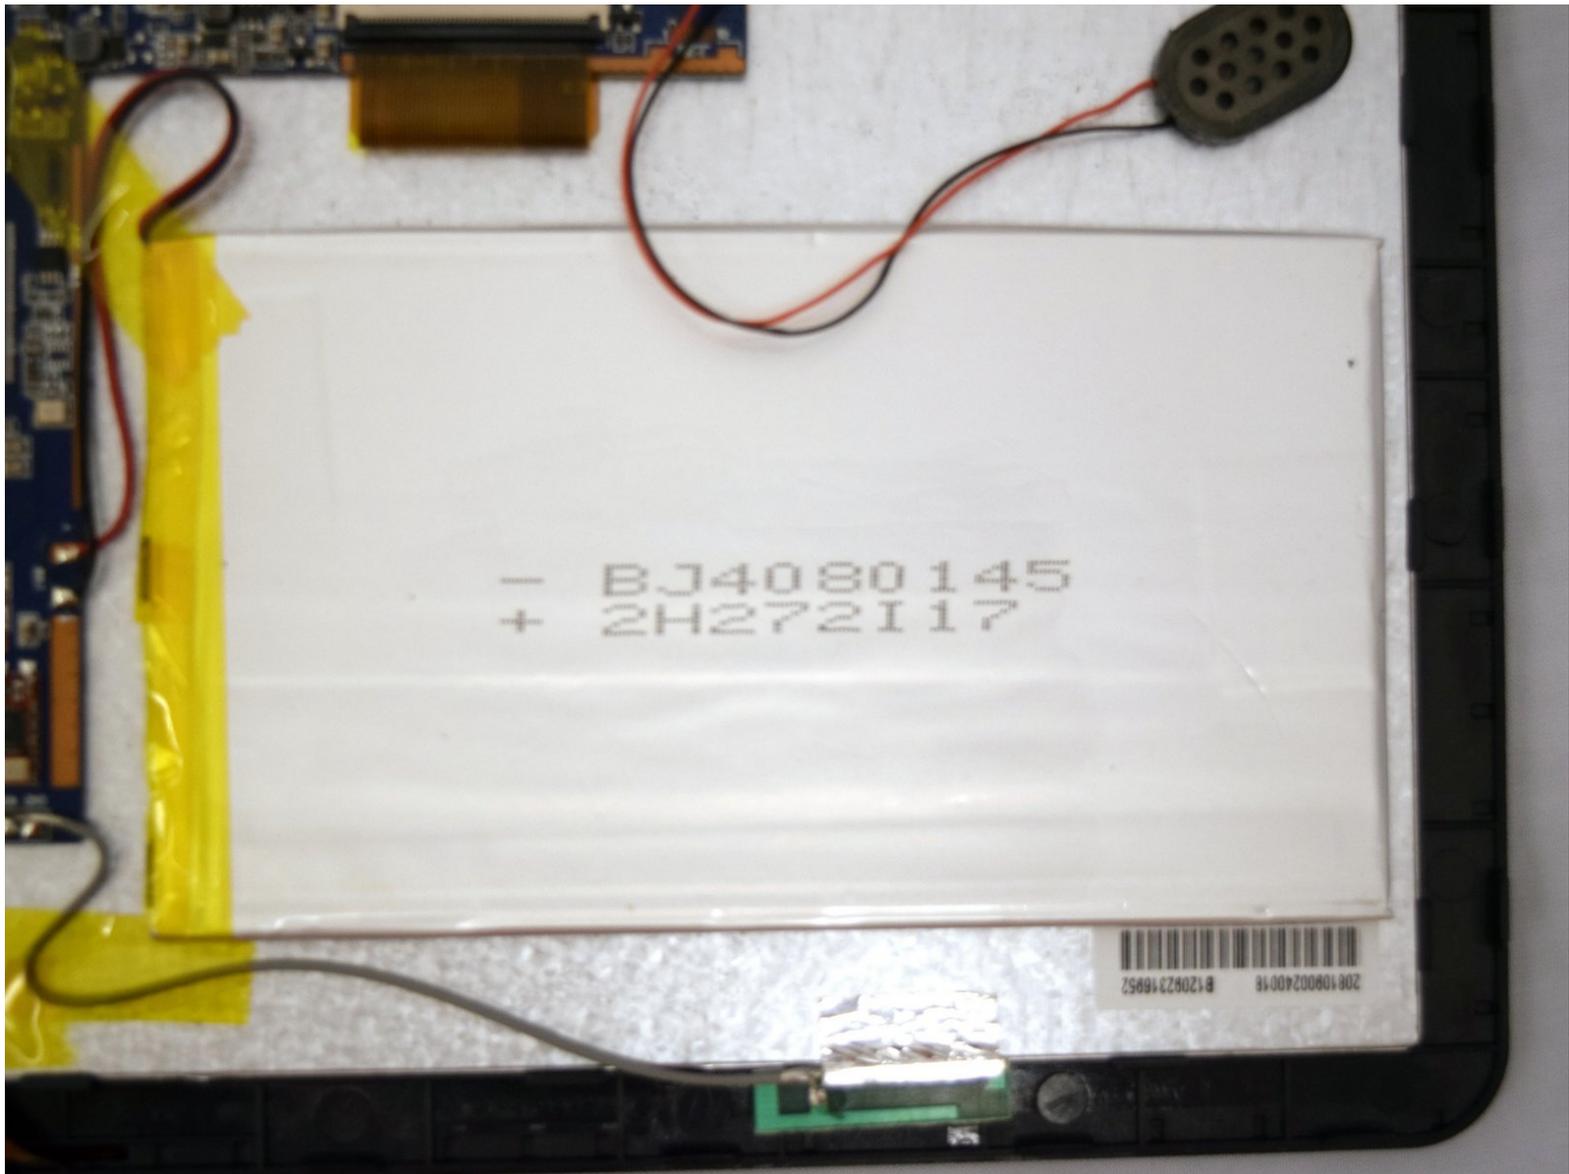

INTRODUCTION

Use this guide to replace the battery on the 4Sight 9

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Soldering Workstation](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Cover



- Place the tablet on its side so that the two screws are facing upward.
- Remove two 1 mm screws from the left side of the tablet using a Phillips #00 screwdriver.

Step 2




- Pry the case away from the device slowly by sliding a plastic opening tool along the device.
- Once loosened, use your hands to separate the case from the device.

Step 3





- Hold the positive and negative wires as close as possible to the speaker.
- Use an opening tool and fingers to simultaneously lift the speaker from the cover.

Step 4 — Battery

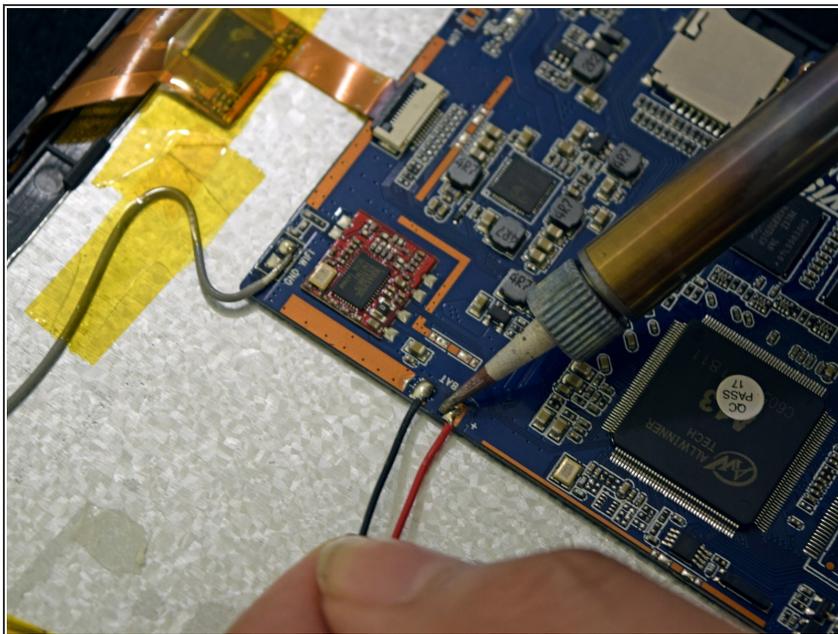

- Use soldering gun to remove the positive and negative wires connecting the battery to the circuit board.
- ⓘ For a complete guide on how to solder, [click here](#).

Step 5

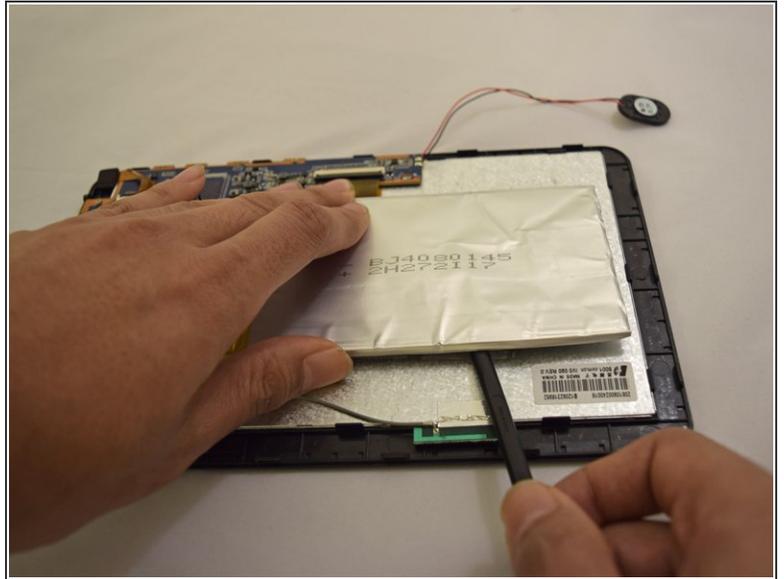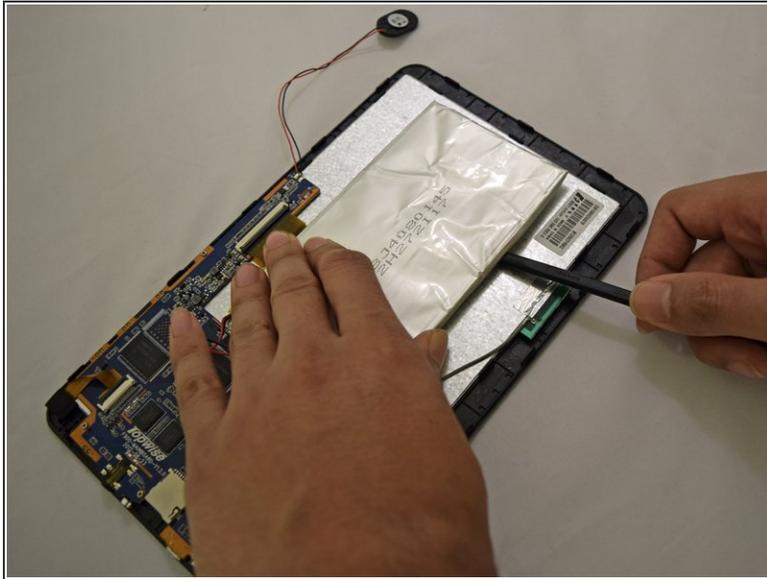

- Insert plastic prying tool under upper-hand corner of battery and slide back and forth.
- Once loosened, insert plastic prying tool under lower-hand corner and repeat sliding action.
- ⓘ Repeat previous actions until battery comes loose from device.

To reassemble your device, follow these instructions in reverse order.