




Nokia Lumia 720 Loudspeaker & Antenna module Replacement

Nokia Lumia 720 Loudspeaker & Antenna module Replacement

Written By: ZFix

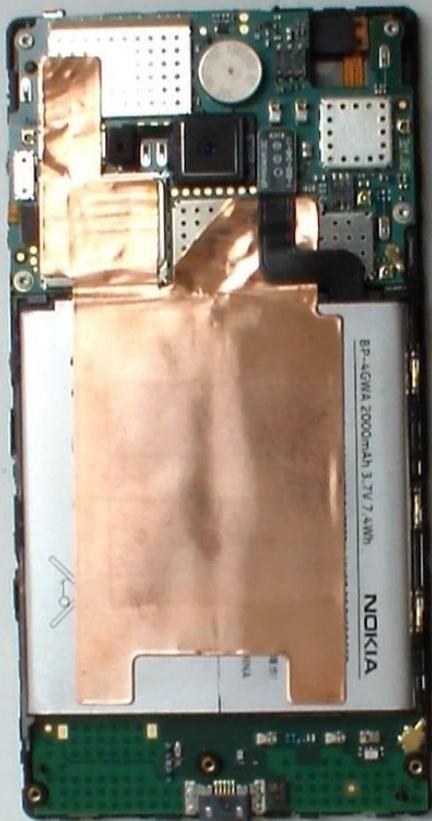

INTRODUCTION

Nokia Lumia 720 - How to replace Loudspeaker / Buzzer / Ringer & Antenna module.

[video: https://www.youtube.com/watch?v=wseNxvPm_po]

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T2 Torx Screwdriver](#) (1)
 - [T4 Torx Screwdriver](#) (1)
-

Step 1 — BATTERY COVER - PART 1



- Remove the SIM card tray and the memory card tray.
- Use a screwdriver Torx T2 and remove the screw under the SIM card tray.
- Use plastic tools and start the separating the back cover from the top side.

Step 2 — BATTERY COVER - PART 2



 Be careful with the volume buttons.

Step 3 — Loudspeaker & Antenna module



- Remove the 3x Torx T4 screws.
- Buzzer / Loudspeaker

To reassemble your device, follow these instructions in reverse order.