


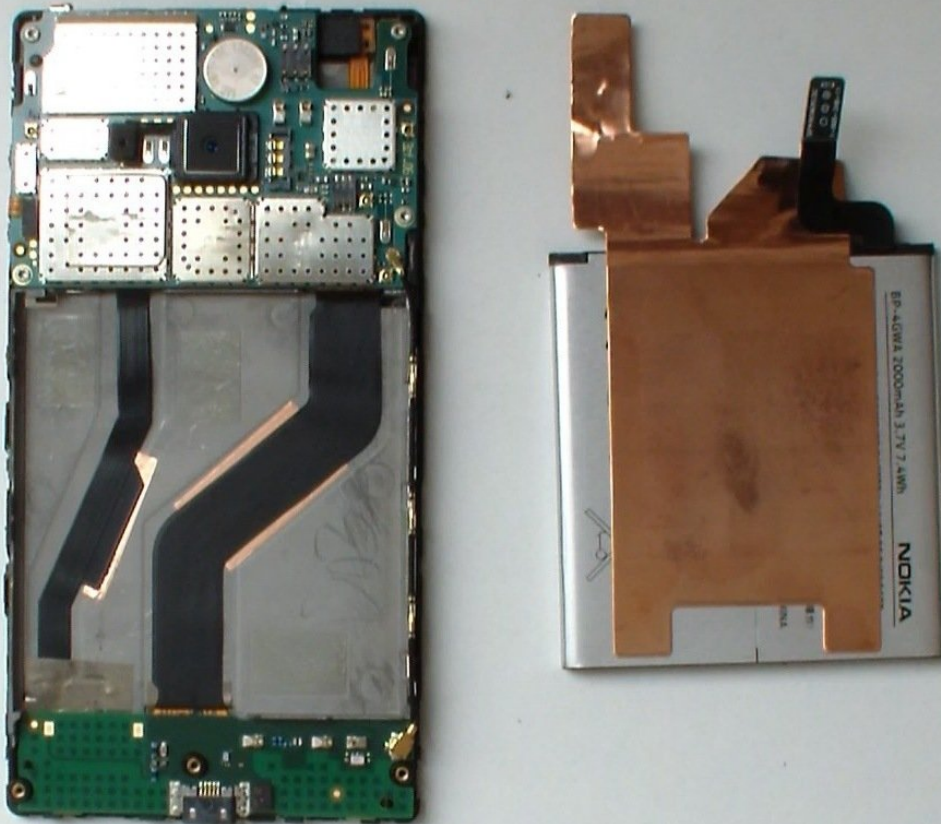

Nokia Lumia 720 Battery Replacement

Nokia Lumia 720 Battery Replacement

Written By: ZFix



INTRODUCTION


Nokia Lumia 720 - How to remove and replace the Battery.

[video: https://www.youtube.com/watch?v=wseNxvPm_po]

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [T2 Torx Screwdriver](#) (1)
 - [T4 Torx Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — BATTERY COVER - PART 1

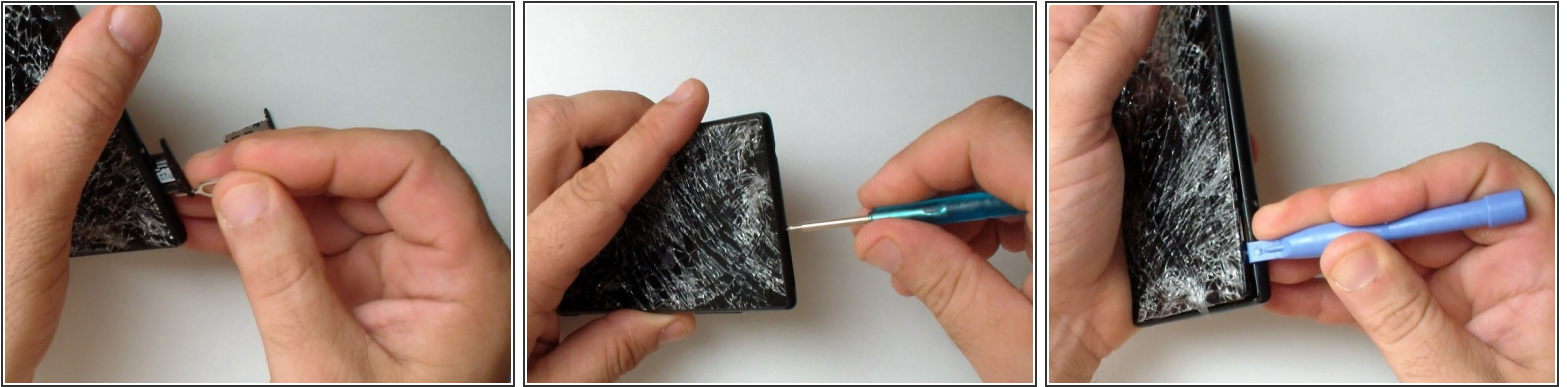




- Remove the SIM card tray and the memory card tray.
- Use a screwdriver Torx T2 and remove the screw under the SIM card tray.
- Use plastic tools and start the separating the back cover from the top side.

Step 2 — BATTERY COVER - PART 2

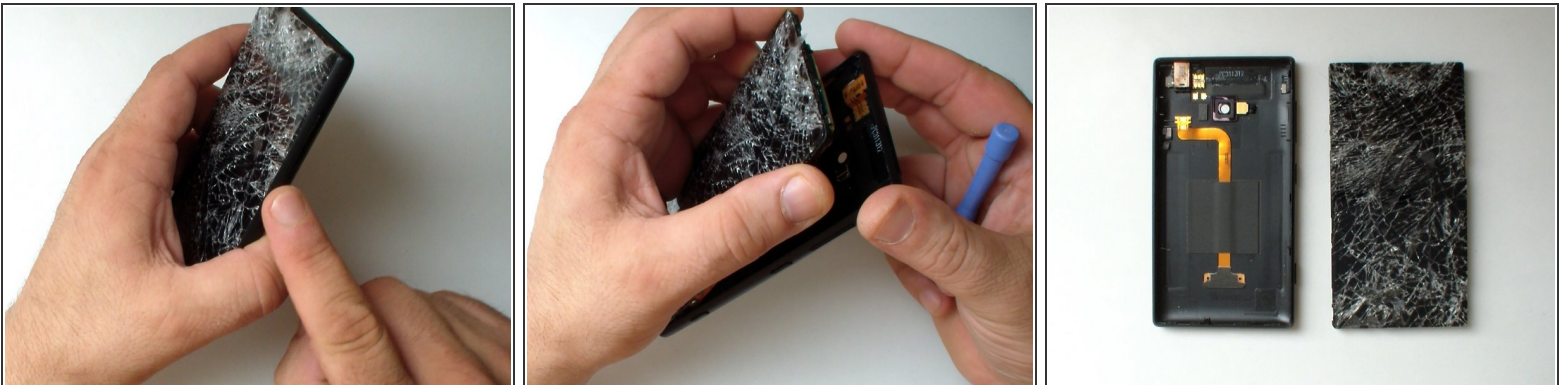




Be careful with the volume buttons.

Step 3 — Loudspeaker & Antenna module

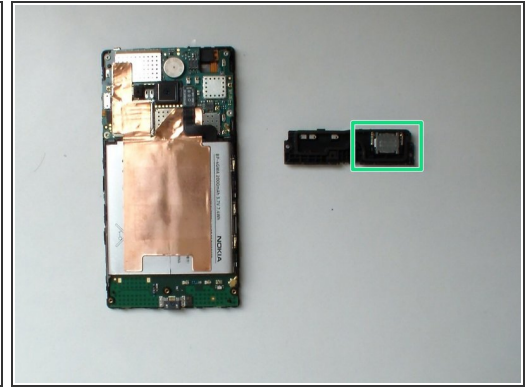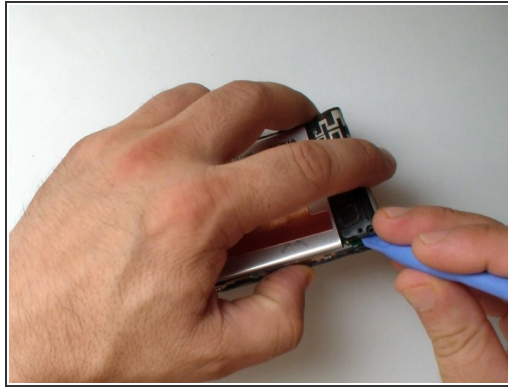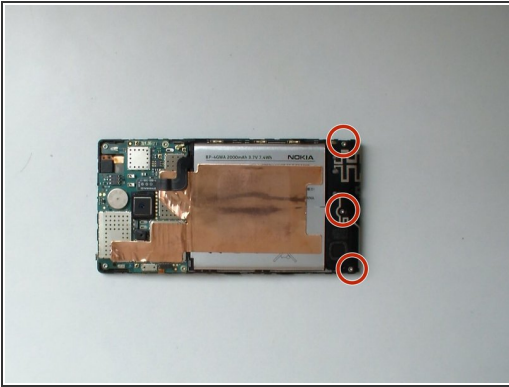

- Remove the 3x Torx T4 screws.
- Buzzer / Loudspeaker

Step 4 — BATTERY

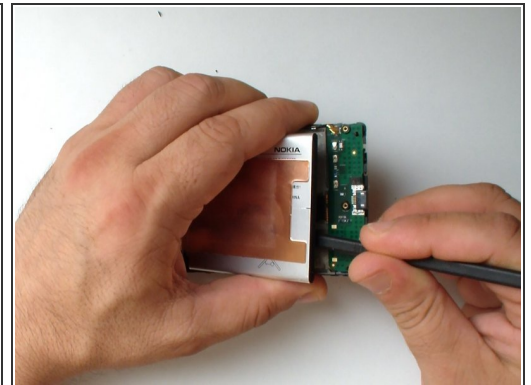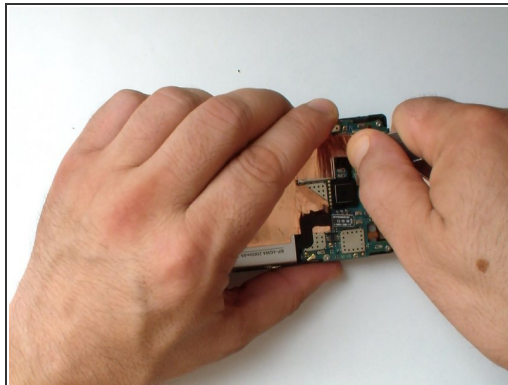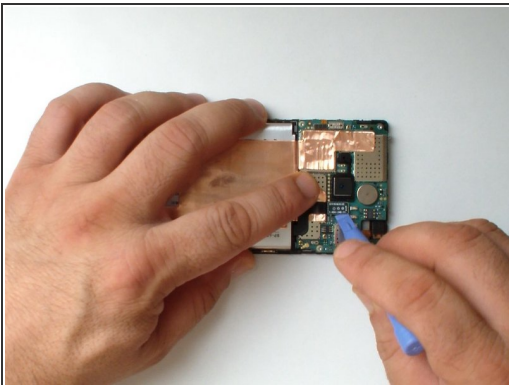

- Disconnect the battery flex cable.
- Unstick the metal foil from the logic board.
- Use a plastic tool with a thin tip and unstuck the battery from the middle frame.
- Battery - **BP-4GWA**, 2000mAh, 3.7V, 7.4Vh

To reassemble your device, follow these instructions in reverse order.