



HTC One X Plus Screen Replacement

You may need to replace your screen if it is...

Written By: Jason Melo



INTRODUCTION

You may need to replace your screen if it is broken or cracked.

TOOLS:

- [Tweezers](#) (1)
 - [Suction Handle](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Screen



- Power off your device.
 - Insert a pin, paper clip, or very small piece of metal in the hole next to the micro sim card holder to remove it.
- ⓘ The sim card slot is located on the top edge of the device.

Step 2




- Using plastic opening tools, pry open the bottom of the device first.
- ⓘ You will hear clicking sounds as the sides of the device detach from the screen.
- Once both sides are detached, use the suction cup tool to remove the screen completely from the black encasing.

Step 3




- Remove the five 2.4 mm screws using a Phillips #000 screwdriver.
- Remove the plastic cover.

Step 4

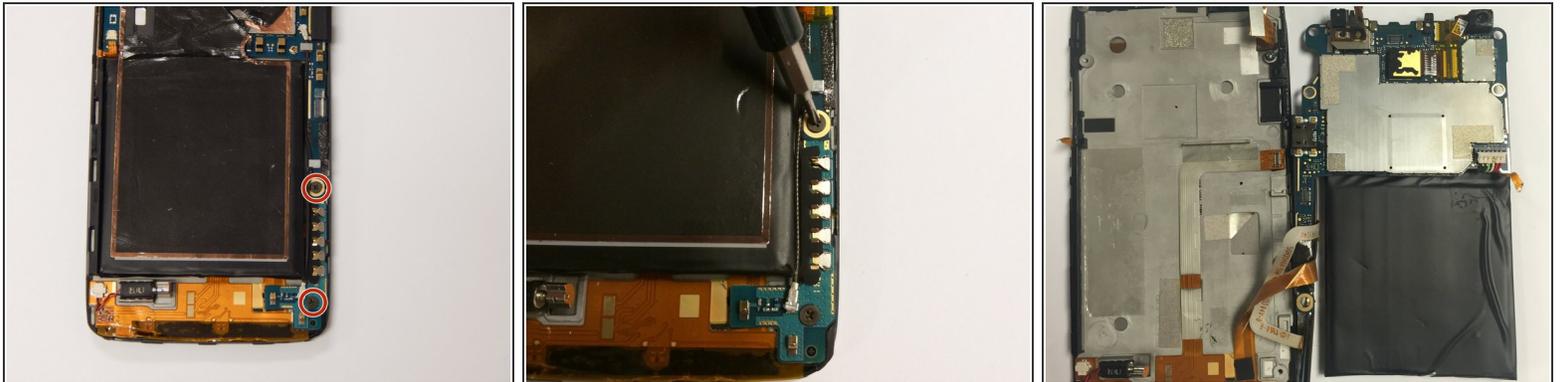


- Use a Phillips #000 screwdriver to remove the two 3.4 mm screws.
- Remove the PCB board and antenna.

Step 5

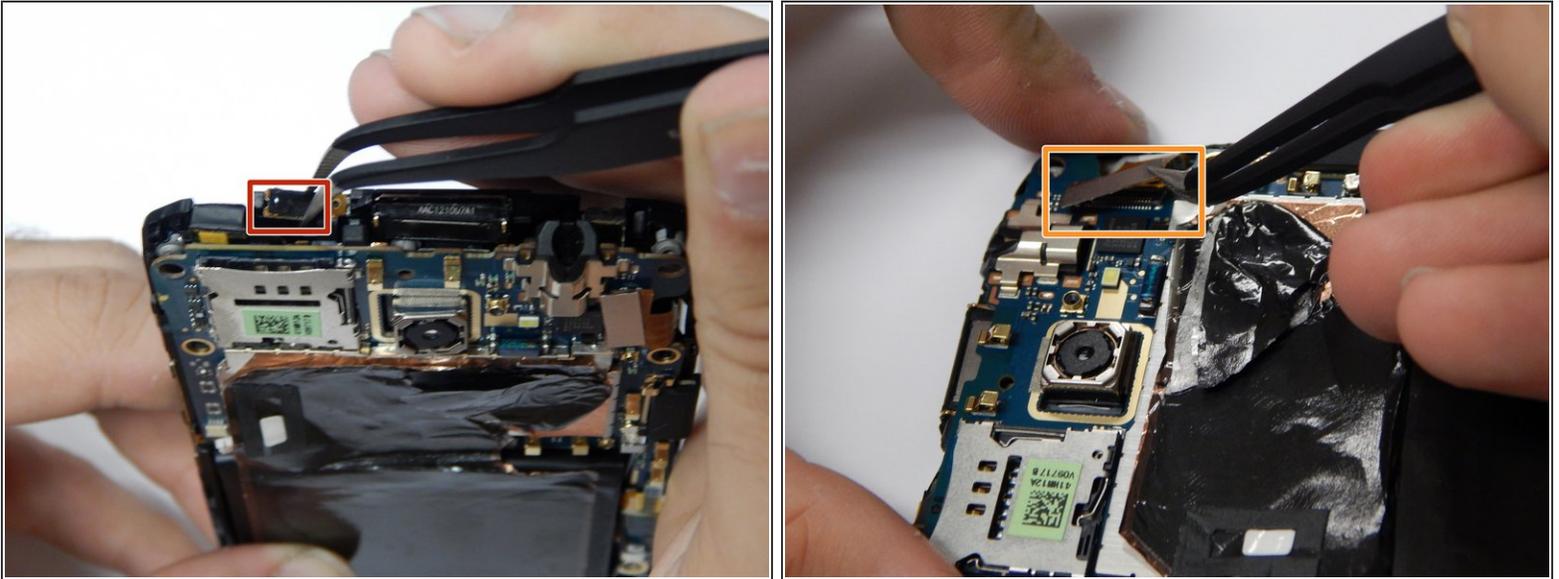

- Use tweezers to disconnect the power button flex cable.

Step 6

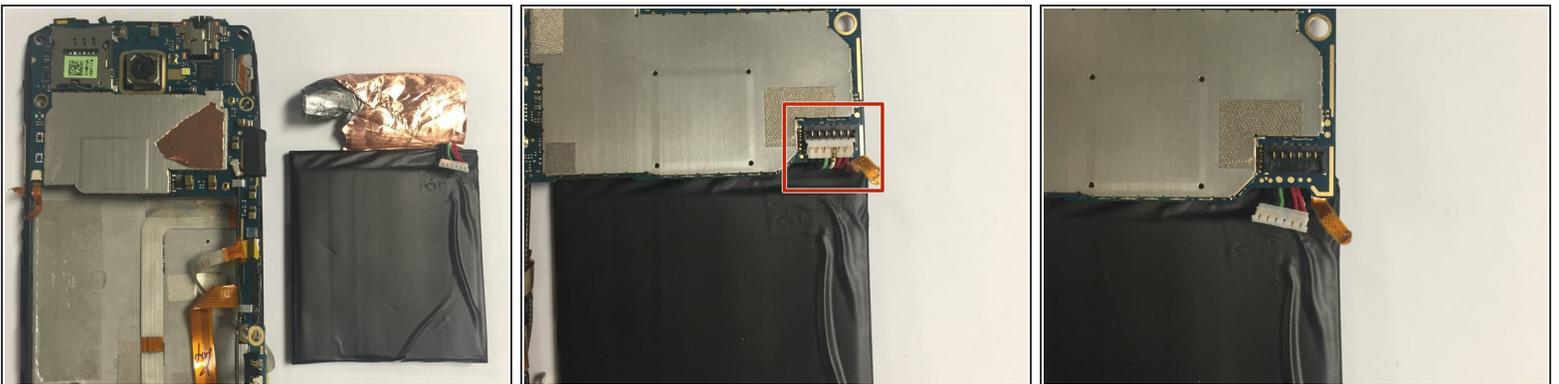

- Disconnect the battery's six pin connector from the motherboard.
- Remove the battery by pulling it upwards.

Step 7



- Disconnect the screen from the digitizer.
- Use a plastic opening tool to gently disconnect the screen from the digitizer.
- ⓘ You may have to use heat to loosen adhesive securing the screen.

To reassemble your device, follow these instructions in reverse order.