



Jazz UltraTab C1059-HL Antenna Replacement

Written By: Amanda Justiniano



INTRODUCTION

This guide will guide the user to effectively remove and replace the antenna. This replacement will take 20-30 minutes. However, if the guide is followed to the letter, the task will be accomplished with minimal damage to the device.



TOOLS:


- [Essential Electronics Toolkit](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Antenna



- First step is to remove screws from top and bottom of device.

Step 2

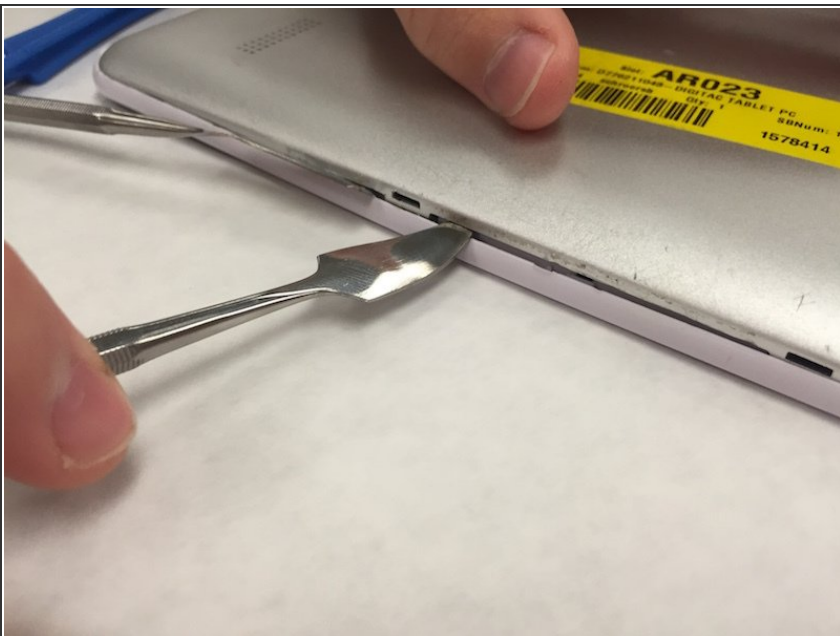


- Remove the back panel of the device.

Step 3




- Upon removing the back panel, place the device screen down on the table.

Step 4

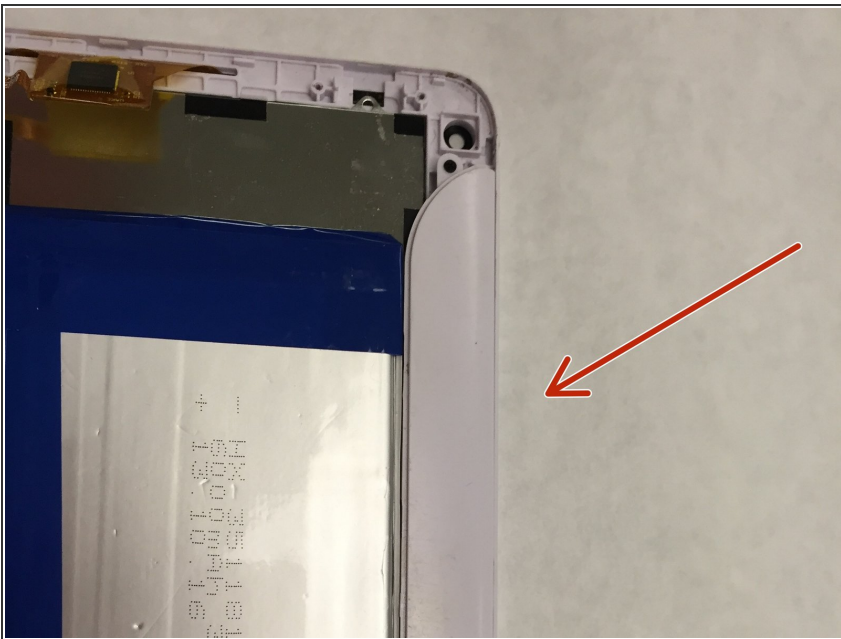

- Identify the antenna cover on the top of the device.

Step 5

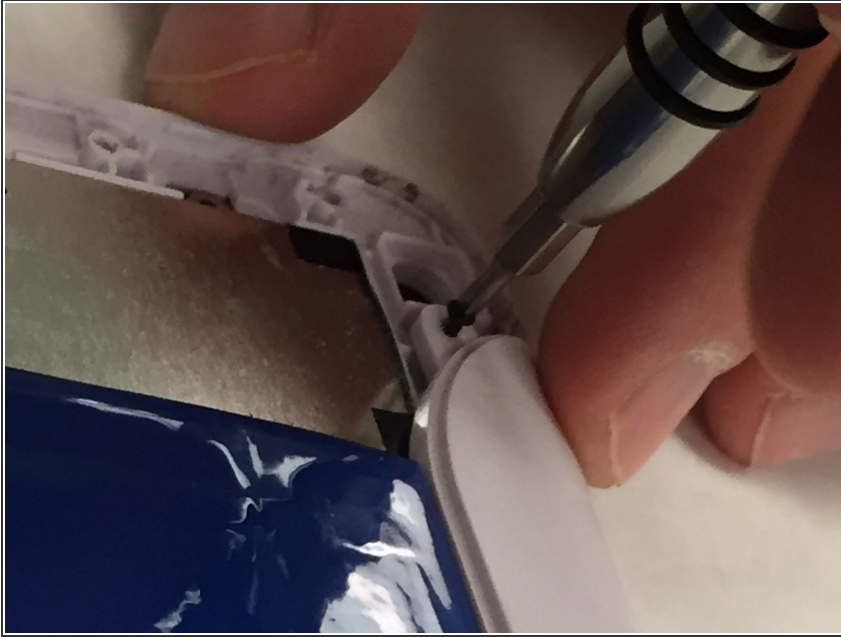

- Remove the two screws holding the antenna cover in place.

Step 6



- Use a prying tool to remove the plastic piece off of the antenna component.

Step 7




- Identify the antenna component as the gray cable that comes out of the plastic cover.

Step 8




- Remove all of the adhesive tape pieces off of the antenna cable.

Step 9

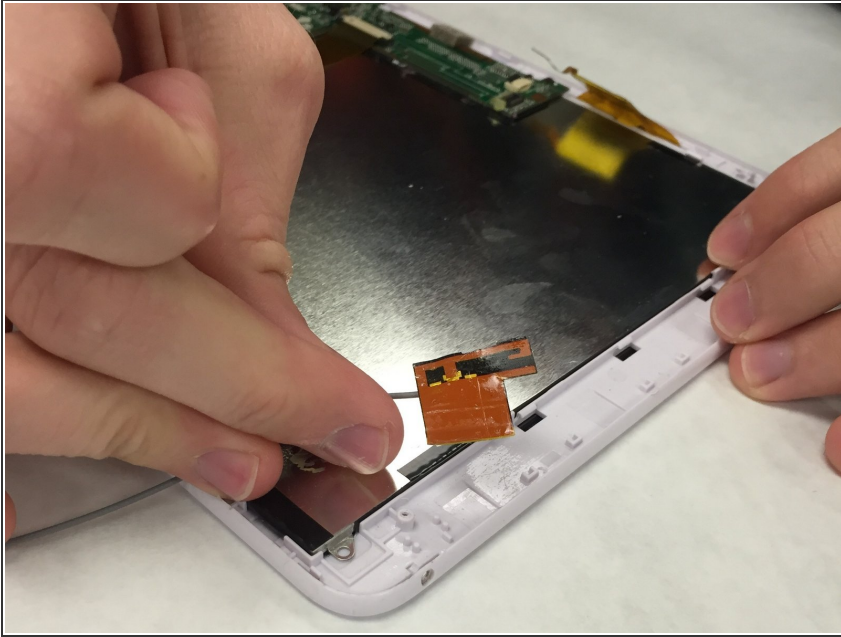

- Once all of the adhesive tape has been removed. Pull out the antenna component.

Step 10

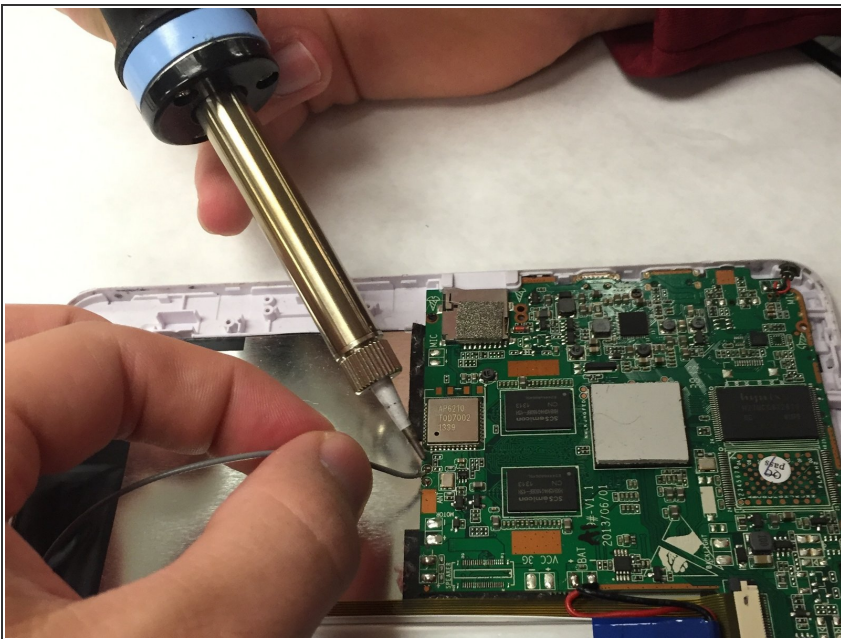

- The antenna will be attached to the chip in your device. Be careful not to pull off.
- Solder of the wire that is connected to the chip in order to be able to remove the antenna component.
- Once this is done, you can replace your old antenna with a new one!

To reassemble your device, follow these instructions in reverse order.