



# GoPro Hero3+ Silver Edition Front Panel Replacement

This guide will explain how to replace the silver face plate on the GoPro Hero3+.

Written By: Patrick Cook



## INTRODUCTION

Oops! You scratched the front of your GoPro and you don't want others to question if you take care of your camera. Let's replace that face plate and make it look good as new!



### TOOLS:


- [iFixit Opening Tools](#) (1)



### PARTS:


- [GoPro Hero3 Plus Silver Front Panel](#) (1)

## Step 1 — Front Panel

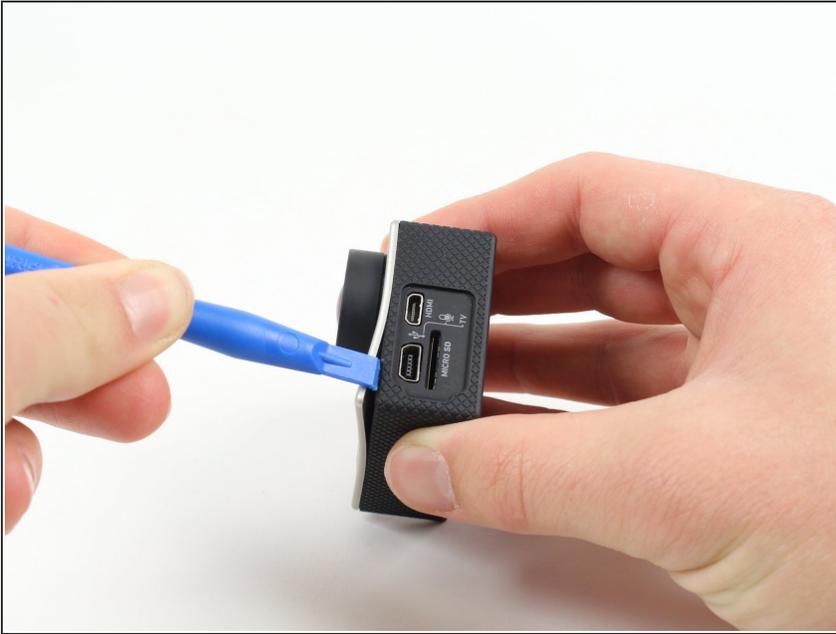

- Insert a plastic opening tool in between the front face plate and the black housing.
- ⓘ Make sure you insert the plastic opening tool next to the microSD card slot. There is a small gap that will help separate the face plate.

## Step 2

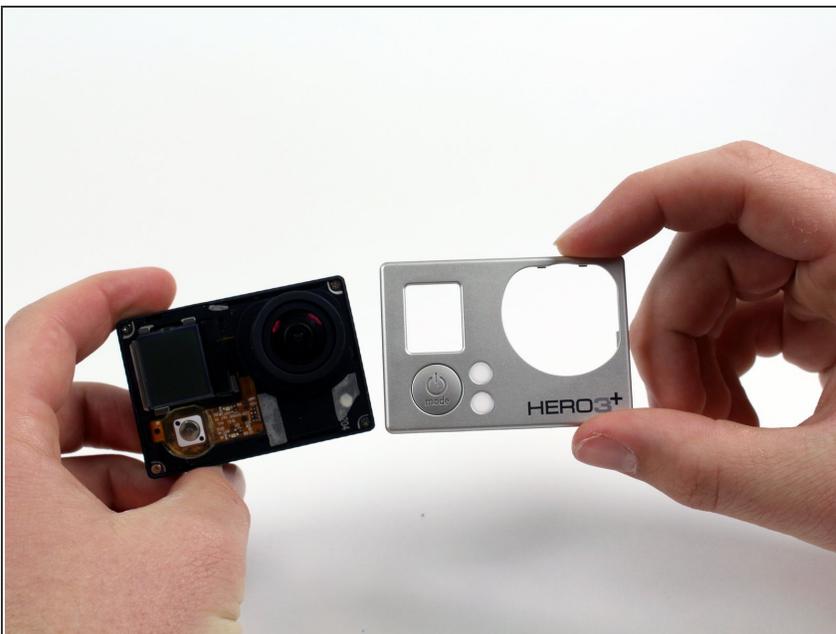

- Continue to use the plastic opening tool and separate the front face plate from the rest of the device.
- ⓘ There is adhesive that helps attach the front face plate. Some extra prying may be required to separate the face plate, but do not use excessive force.

To reassemble your device, follow these instructions in reverse order.