



Asus Zenbook UX32VD Bottom Panel Replacement

“Prerequisite Only”

Written By: Michael Remmel






TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Bottom Panel

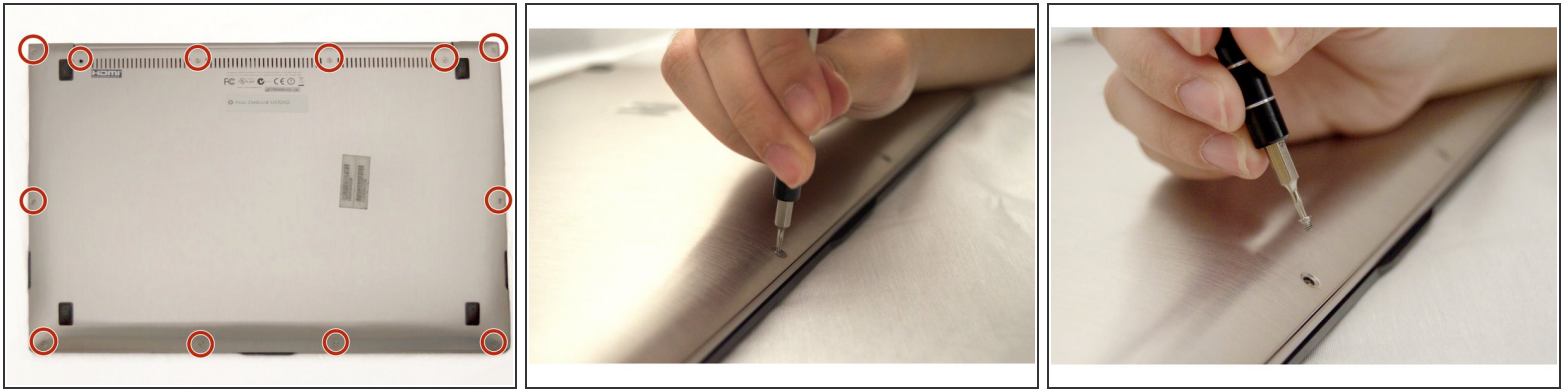

- Remove the twelve 3 mm bottom panel screws with a [T5 Torx Screwdriver](#).

Step 2



- Use a plastic opening tool to pry along the perimeter of the bottom panel until it can be easily removed.
- Remove the bottom panel from the body of the laptop.
- Set aside the bottom panel.

To reassemble your device, follow these instructions in reverse order.