

# **Dell Vostro 1320 Screen Replacement**

Replace the screen if it is no longer responding.


Written By: Christie Lloyd






- 64 Bit Driver Kit (1)
- Spudger (1)

# Step 1 — Screen

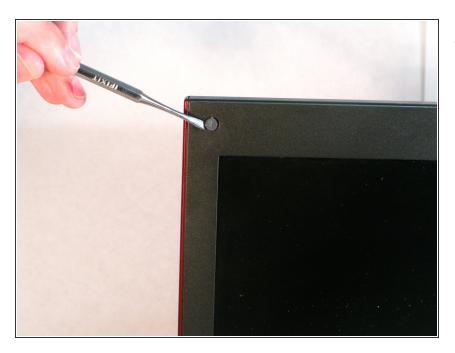

 Take screw covers off with a metal spudger

# Step 2

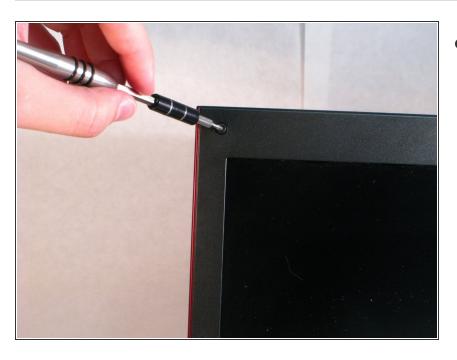

 Take the six screws out with the bit driver.

### Step 3





 Pop the black plastic panel off with the metal spudger. There are three spots where you should leverage it so that the panel does not break.

# Step 4



 Remove the plug on the bottom of the screen.

# Step 5




 Remove the two screws on the bottom of the computer screen.


# Step 6



 Remove the tape and the LCD plug/connector from the back of the screen.

# Step 7

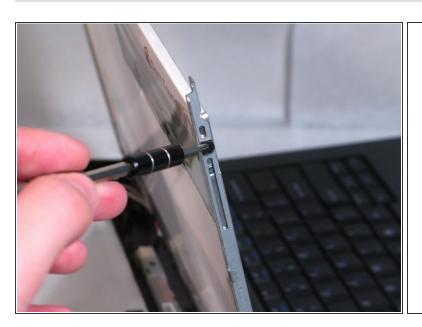

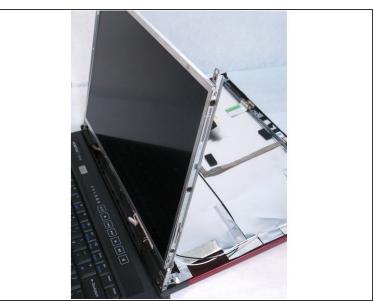

Remove the three screws on the left and right of the screen.

### Step 8



 Remove the screen from the metal side frames.

To reassemble your device, follow these instructions in reverse order.