



# Trio Stealth-10 Speaker Replacement

This guide will detail the steps to replace the speaker on the Trio Stealth 10.

Written By: Daniel Coleman



---

## INTRODUCTION

If the speaker on your Trio Stealth-10 is no longer functioning, replacement isn't difficult and this guide will give you the step by step procedure to do so.

---



### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Soldering Iron](#) (1)
  - [64 Bit Driver Kit](#) (1)
-

## Step 1 — Back Panel



- To remove the back panel, you will need to use a plastic opening tool and slowly separate the back panel from the device.

## Step 2 — Speaker

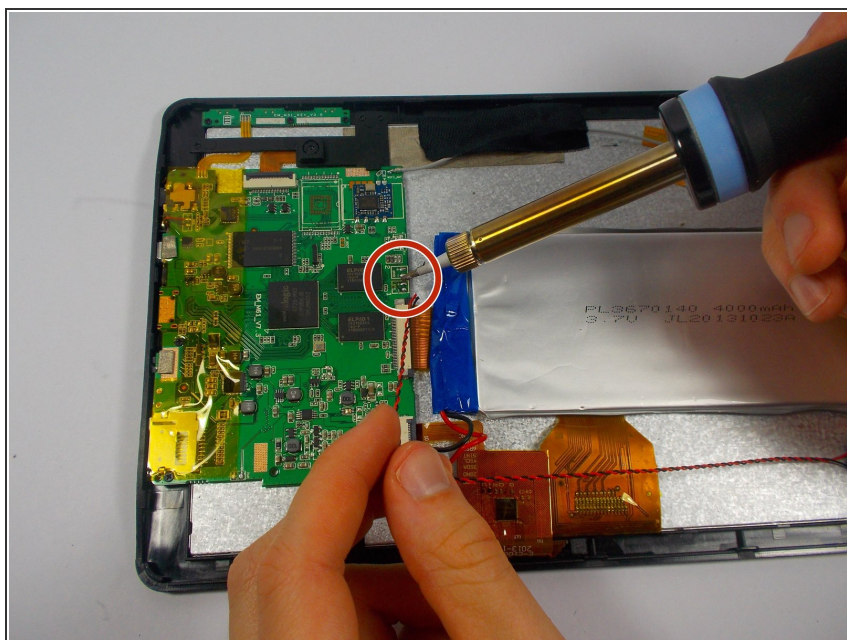

- ⚠ This next step will require you to solder a couple of wires off the motherboard. We recommend you



get someone to help you if you are unfamiliar with soldering or use iFixit's [Soldering guide](#) to help you.

- Next you must solder off the wires that connect the speaker to the motherboard.

### Step 3



- Next you will need to remove the two screws attached to the speaker. If you have a 54 bit Driver Kit use the Philips Head 0 (or PH 0) head to remove the two 4mm screws.

To reassemble your device, follow these instructions in reverse order.