

Braun Cruzer 6 Type 5417 Battery Replacement

Use this guide to remove and replace the...

Written By: Zweikeks



INTRODUCTION

Use this guide to remove and replace the batteries in the Braun Cruzer 6 - Beard and Hair Trimmer, Model: 5417

TOOLS:

T5 Torx Screwdriver (1)
Soldering Iron 60w Hakko 503F (1)
Entlötpumpe (1)

PARTS:


Rechargeable NiMh AAA Battery with terminals (1)

Step 1 — Braun Cruzer 6 Type 5417 Battery Replacement



- Remove the trimmer head.
- Remove the two Torx T5 screws attaching the cover to the hand-piece.
- Remove the cover.
- Take this opportunity to remove built up hair and residue. Hair can prevent the batteries from making contact leading to power failure.

Step 2

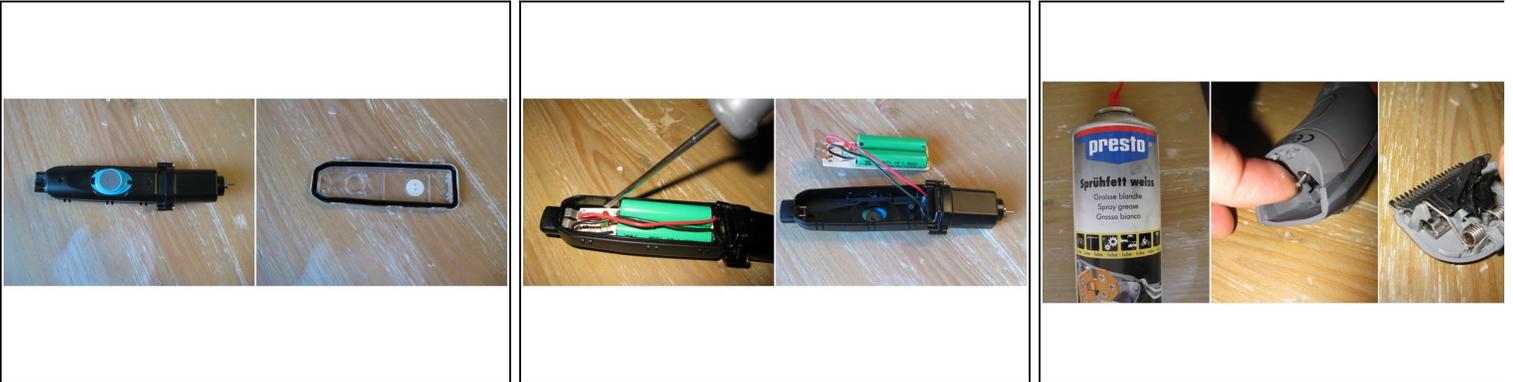

- Remove the back cover.
- Using a flat head screw driver, remove the single screw holding the power board in place.
- Use compressed air to clean the motor. *Take this opportunity to lubricate the trimmer with an anti-rust spray or WD-40.*
- Remove the two AAA batteries by soldering them with soldering iron and des soldering pump.
- Bend the terminals of the new batteries and solder them back in the right direction
- If the batteries are already slightly charged, you can briefly press the power button to check if the motor is working
- Insert the board again, with the side towards the motor first

Step 3



- **OPTIONAL** Additional improvements to the trimmer's performance by removing the upper-cover and removing any built up hair. You can also lubricate the blades.

To reassemble your device, follow the above steps in reverse order.