

VTech Record and Learn KidiStudio Black Piano Keys Replacement

We will be replacing the black piano keys

Written By: Shaina Carbonel



INTRODUCTION

Showing how to replace the black piano keys on the VTech Record and Learn KidiStudio.



TOOLS:

Phillips #2 Screwdriver (1)



PARTS:

• Replacement Black Piano Keys (1)

Step 1 — Black Piano Keys






- Unscrew 11 PH2 screws (7 mm).
- Remove the black plastic backing.

Remove the batteries from the toy before beginning replacement of the piano keys.

Step 2

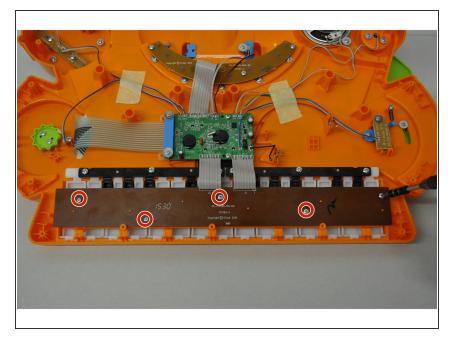


- Near the bottom of the device, unscrew 5 PH2 screws (7 mm) on the electric board.
- Pull back the electrical board.

Step 3



 Unscrew 6 PH2 screws (11 mm) on the black bar holding the keys on the device.

Step 4

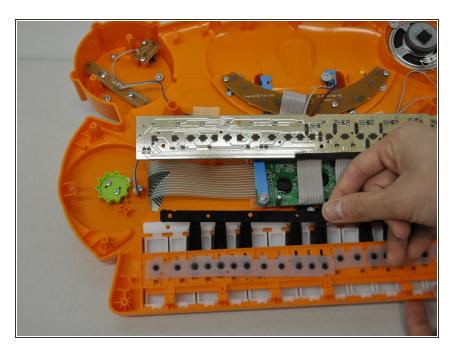

 Pull out the black piano keys and replace with the new piano key part.

To reassemble your device, follow these instructions in reverse order.