




Telstra Dave 4G ZTE T83 Logic Board Replacement


Written By: Ryan

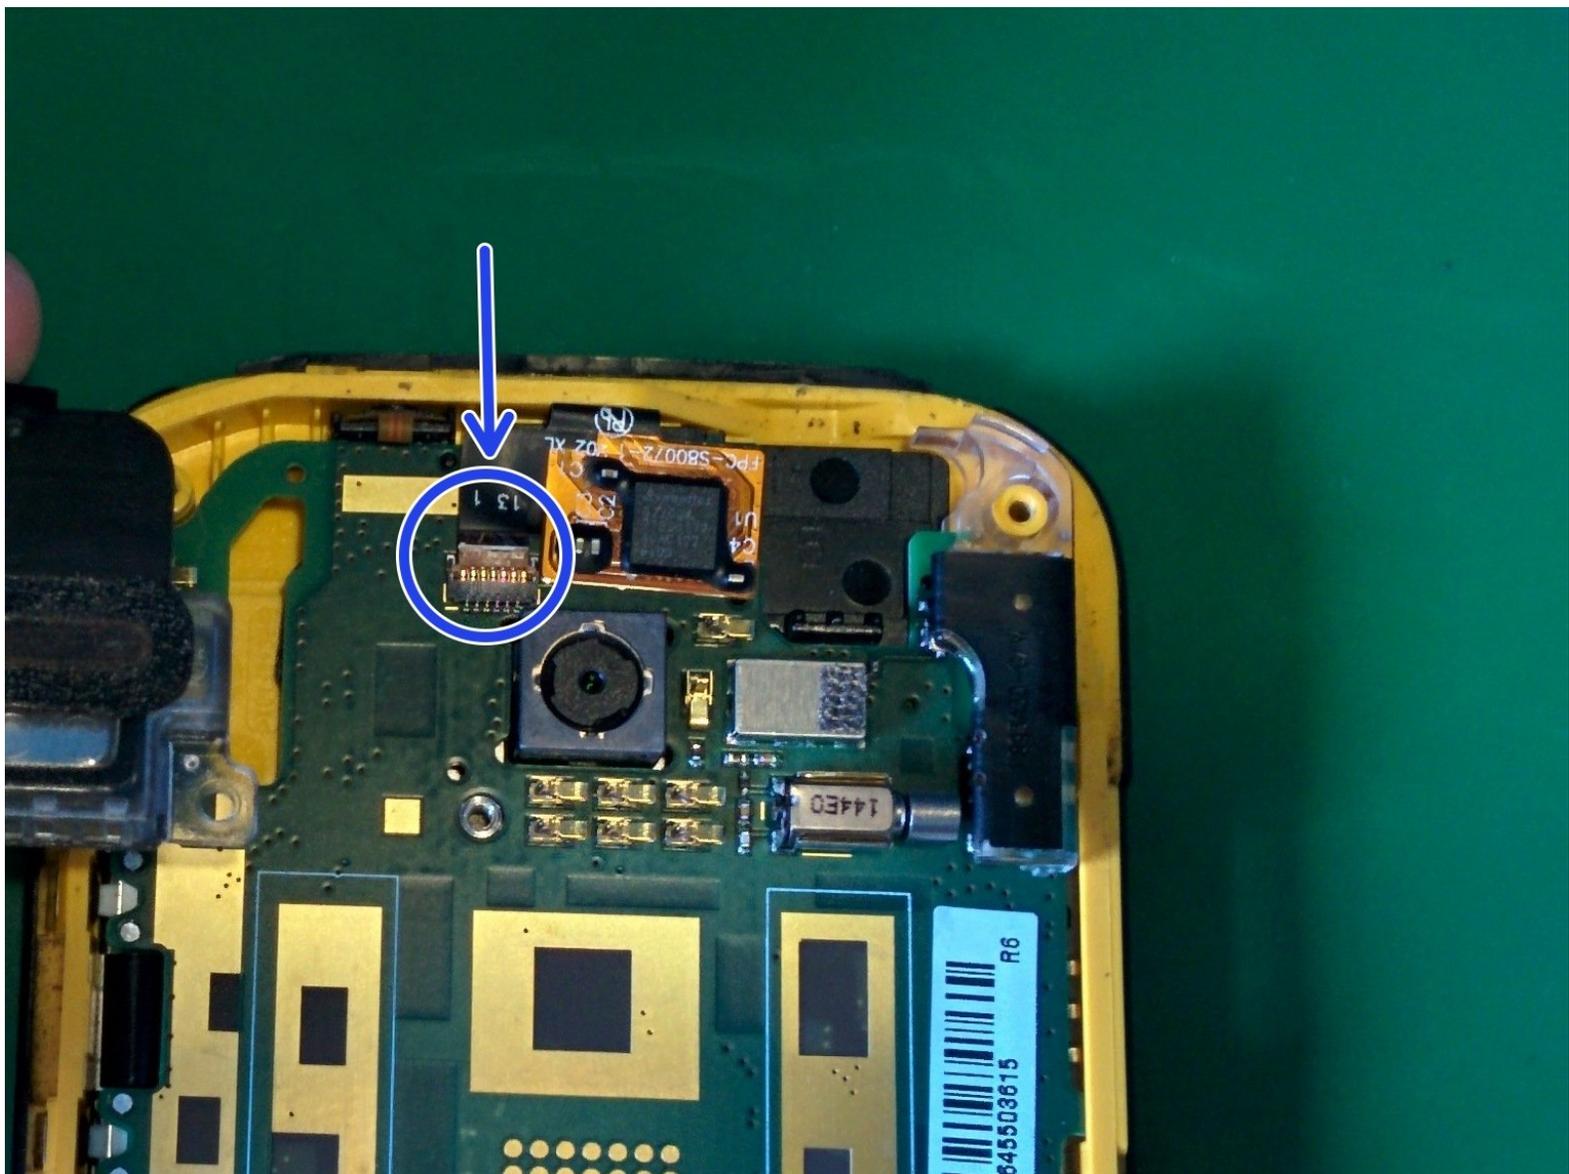

 **TOOLS:**


- [Heat Gun](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Digitiser Cable

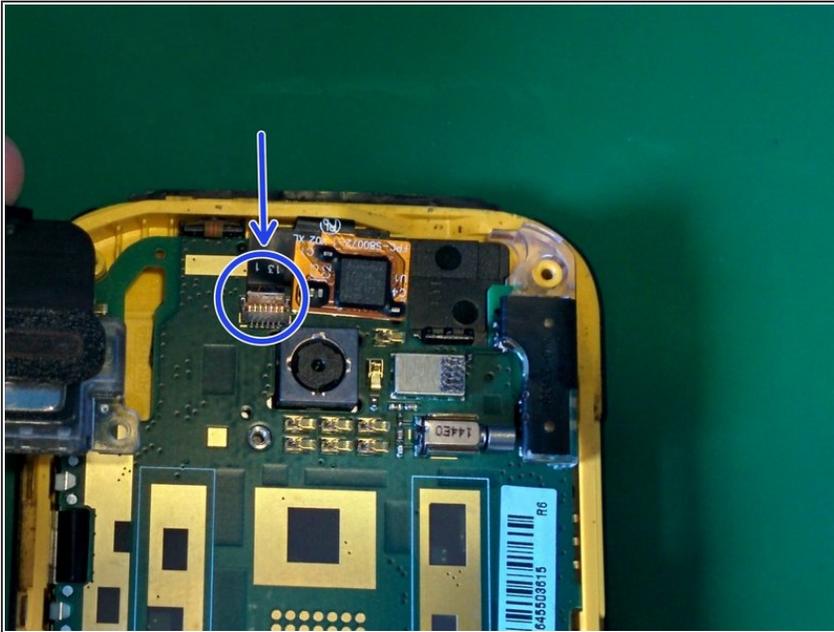

- Disconnect the digitizer cable from its socket, flip the brown clasp up from indicated edge and gently remove the cable.

Step 2 — Logic Board

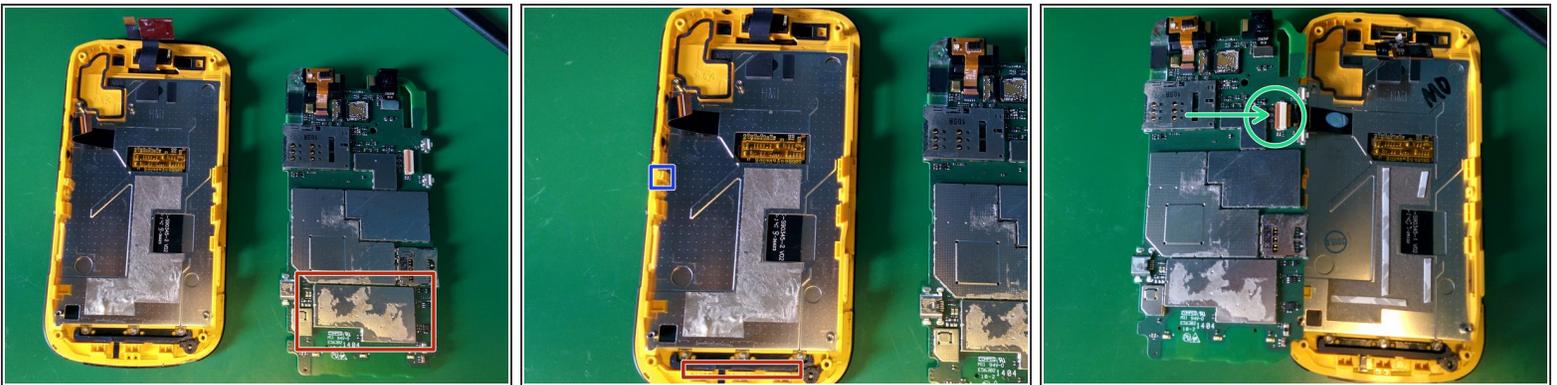

⚠ Be careful of LCD connector on the underside of the board through all of these steps (see green).

- Separate the logic board from front display. Apply heat to the front glass to loosen the adhesive, using a prying tool to separate the board. Be careful and move slowly, it is very strong.
- Be careful to remove the display first from the right side as there are clips along the left side.
- Ensure not to damage the LCD cable, remove once accessible by releasing the brown clasp from indicated side.

To reassemble your device, follow these instructions in reverse order.