



Zenbre SoundBank Z3 Bottom Cover Replacement

This guide is designed to take out a Zebra...

Written By: Cherian Thomas



INTRODUCTION

This guide is designed to take out a Zebra SoundBank X3 speaker grill and replace it with a new one. Use the Essential Electronics Toolkit, iFixit Opening Tool, and the 64 Bit Driver Kit to perform the repair.


TOOLS:

[Essential Electronics Toolkit](#) (1)


Step 1 — Bottom Cover



 **Power off the SoundBank Z3.**

- Turn over the device.
- Peel the silicone feet up to remove.
 -  No extra adhesive is needed to reapply the feet as long as the sticky side is not touched.

Step 2

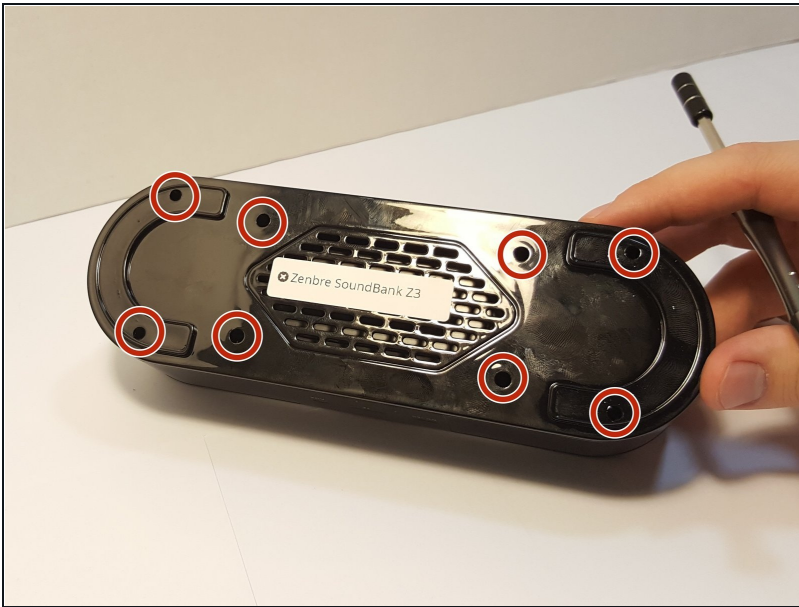

- Remove all eight of the 11 mm Phillips screws from the bottom of the device.

Step 3



- Remove the bottom panel speaker using an iFixit opening tool.

To reassemble your device, follow these instructions in reverse order.