



Lenovo Vibe Z2 Pro Battery Replacement

In this short tutorial we will show how to replace the battery on the Lenovo Vibe Z2 Pro.

Written By: Bryan Sepulveda



INTRODUCTION

If your phone is having issues holding a charge or the battery doesn't charge, it might be time to replace your phone's battery. Find out how to replace it in this guide

TOOLS:

- [T4 Torx Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Lenovo Vibe Z2 Pro Backplate Disassembly




- Remove the 4.9 mm torx head screws located on the camera plate on the back of the phone

Step 2



- Remove the 3.65 mm Torx head screws at the bottom of the phone.

Step 3

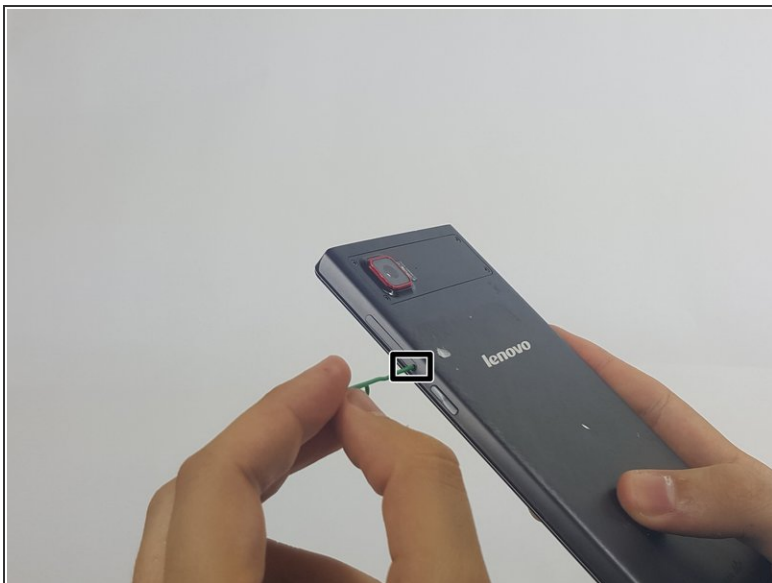

- Remove the SIM card tray by pushing a pin into the hole on the side of the phone.

Step 4





- Push the Spudger along the gap between the phone and the backplate to separate them.

Step 5



- Carefully pull the backplate away from the phone.

Step 6 — Battery

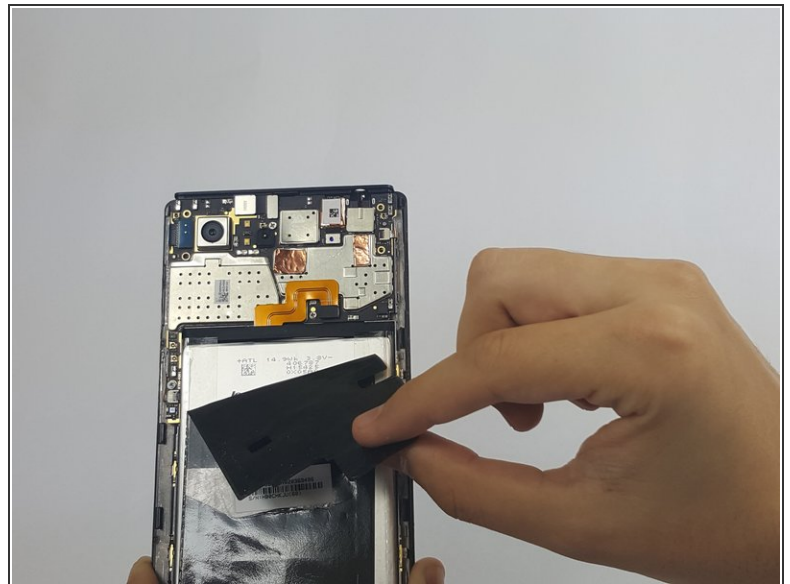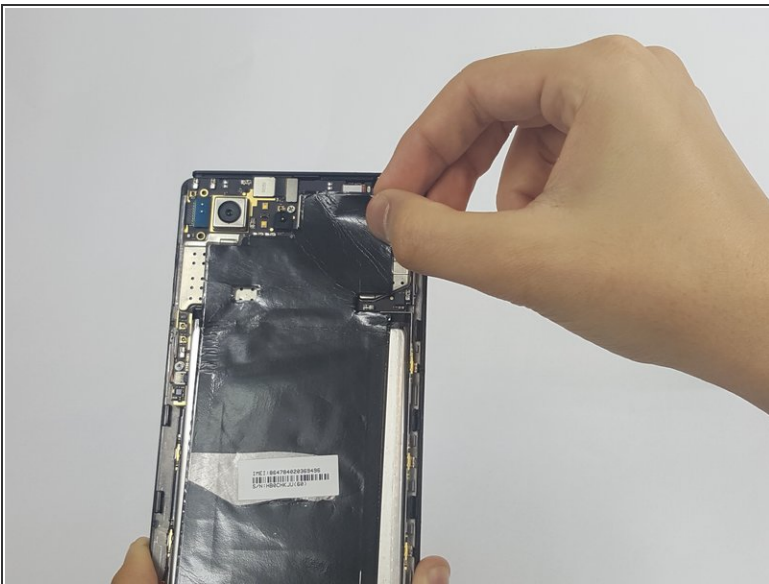

- Peel away protective the film using your hands.

Step 7



- Remove any adhesive strips holding the battery in place gently using a fingernail or spudger.

⚠ The regular black nylon spudger should be used whenever possible, especially around batteries.

Step 8



- Disconnect the orange battery ribbon cable by gently lifting with a spudger.

Step 9



- Insert a fingernail or spudger into either side of the battery and lift upward.
- Remove the battery from phone.

To reassemble your device, follow these instructions in reverse order.