



Samsung Instinct Back Case Replacement

This guide will show how to remove the back case of the Samsung Instinct.

Written By: Jacob Michener



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Apply pressure to the back cover and slide it forward towards the camera.
- Lift the back cover off the phone.

Step 2




- Holding the phone firmly, use the notches to grip and lift up the battery.

Step 3 — Back Case



- Remove the four 4.45mm screws at the corners of the phone.

Step 4

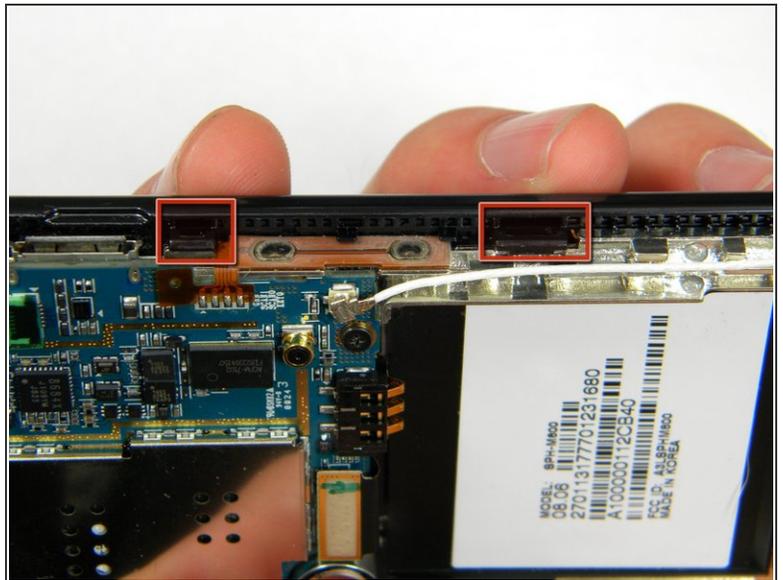

- Use the plastic opening tool to unhook the locks around the edges of the phone.
- ⓘ Do not worry about the inner components of the phone; they are not connected to this case.

Step 5



- Lift the casing off of the phone.

To reassemble your device, follow these instructions in reverse order.