



Linksys EA9200 Disassembly

The disassembly of the Linksys EA9200.

Written By: Henry Cates






TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Linksys EA9200 Disassembly

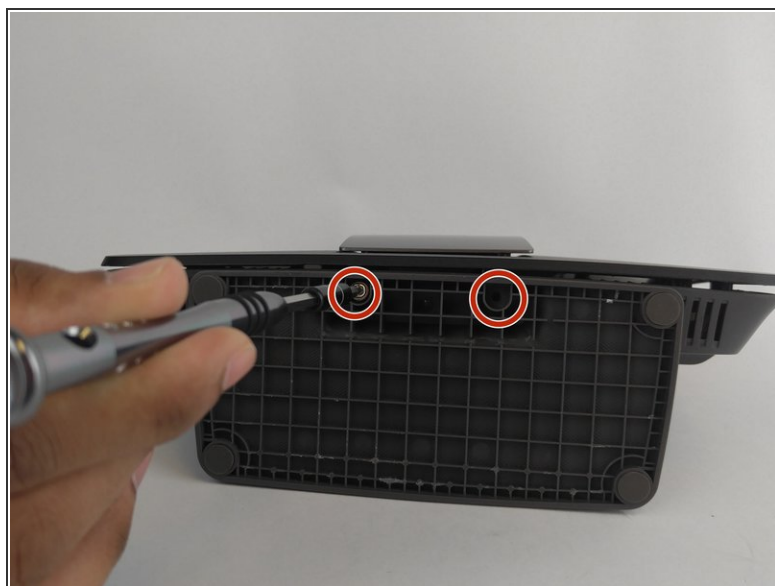

- Remove the sticker on the bottom.
- Remove the two screws holding the bottom plate in place. Use Phillips screwdriver tip #1 , the screw head-size is 5mm.

Step 2



- Remove the back sticker that has all the labels.
- There are two screws to remove. They are 6mm in diameter, use phillips screw tip #1.

Step 3




- Depress the 12 clips along the edge into the router. Use the nylon spudger as using a metal object could cause damage.

Step 4



- Once you have one side open, keep a spudger wedged between both sides. This will help keep it open in case it tries to snap back together.

 These clips are tough and may need some additional force.

Step 5



- Lift the board and pull down, away from the antennas.

To reassemble your device, follow these instructions in reverse order.