




Hasbro Bop-It Micro Series Levers Replacement

How to replace the levers in a Hasbro Bop-It Micro Series.

Written By: Glenn Haag

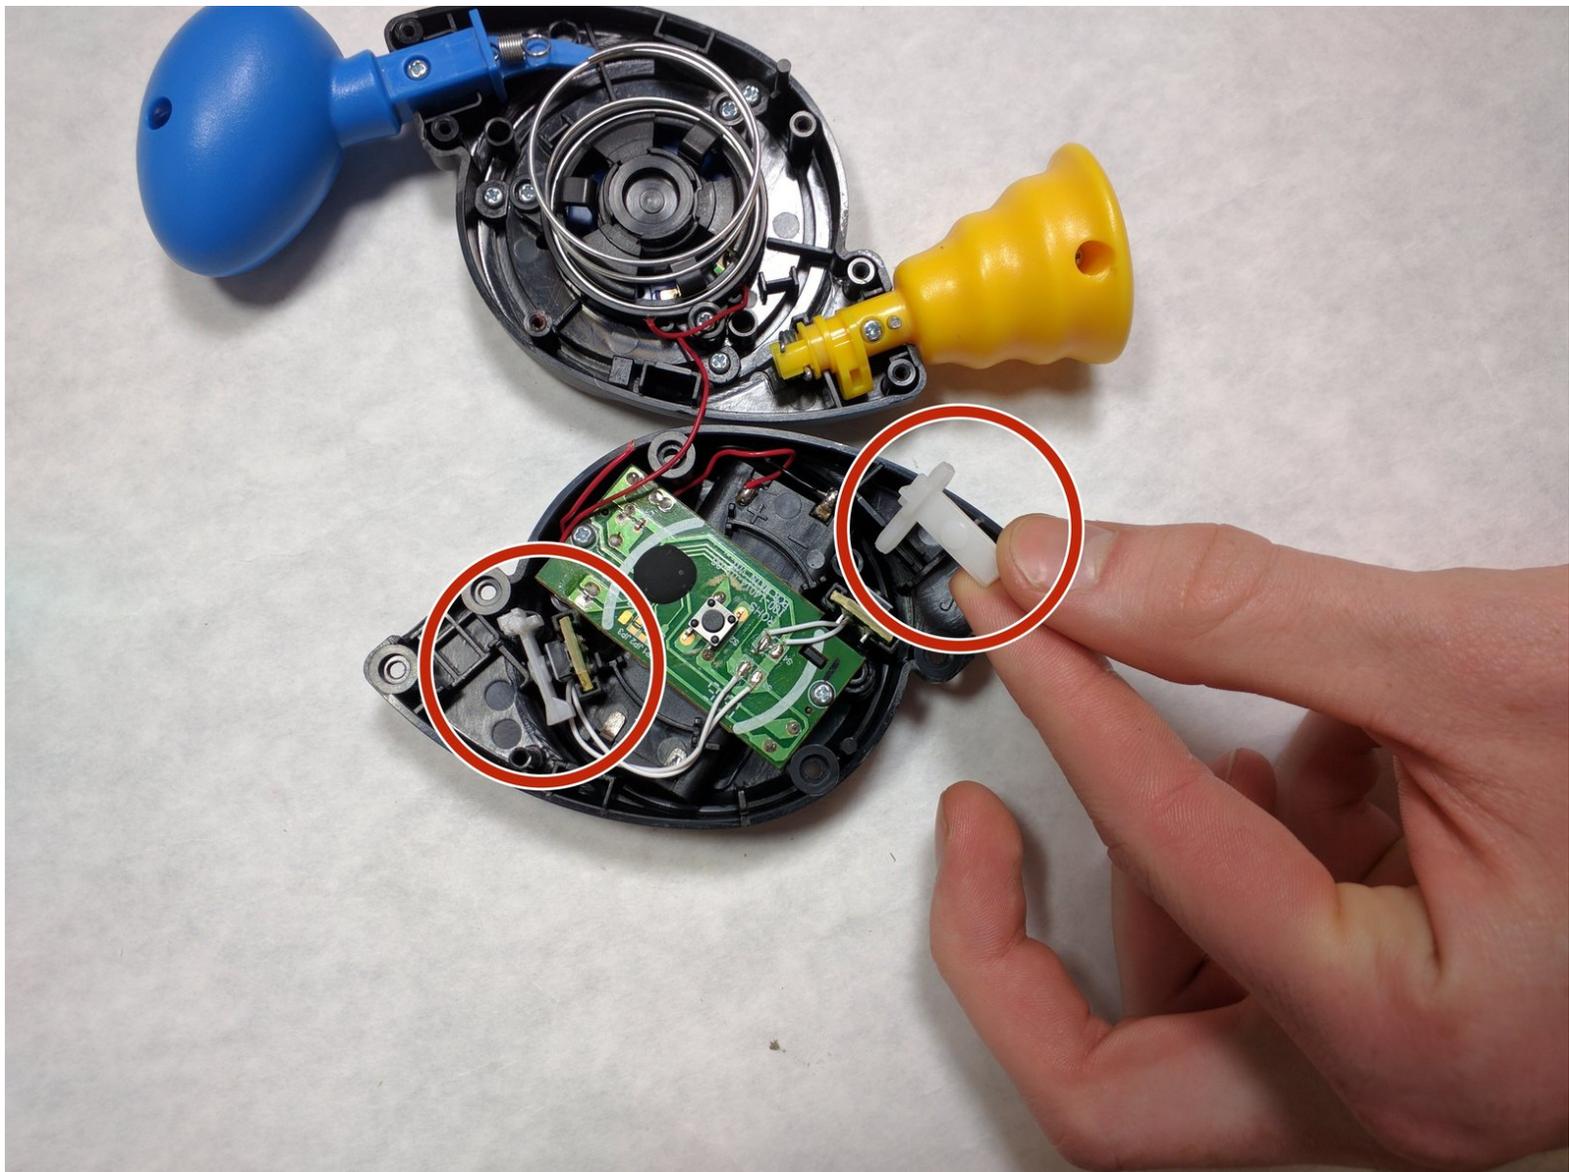

INTRODUCTION

Use this guide to replace the levers inside the Hasbro Bop-It Micro Series game. The levers make the pull-it and twist-it handles function. When you pull or twist the handles, the levers push a sensor. The levers may be damaged if the game turns on but the handles don't work.

Before using this guide, make sure to review the [troubleshooting page](#).

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Back Case




- Loosen the two captive 8 mm screws in the back cover using a Phillips #0 screwdriver.

Step 2

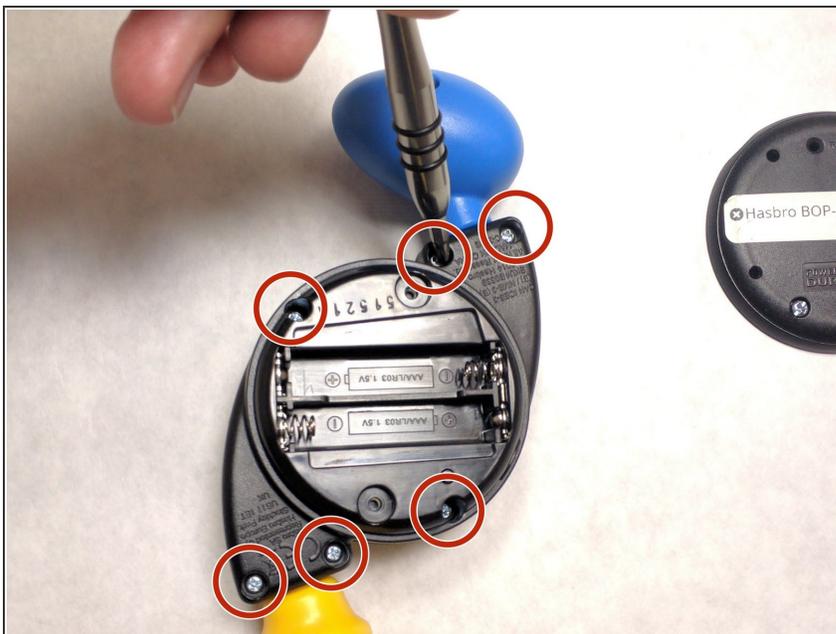


- Remove the six 6 mm screws from the back cover using a Phillips #0 screwdriver.
- When removing the final screw, hold the assembly together. There is a spring inside the device which will pop the assembly apart when all the screws are removed.

Step 3

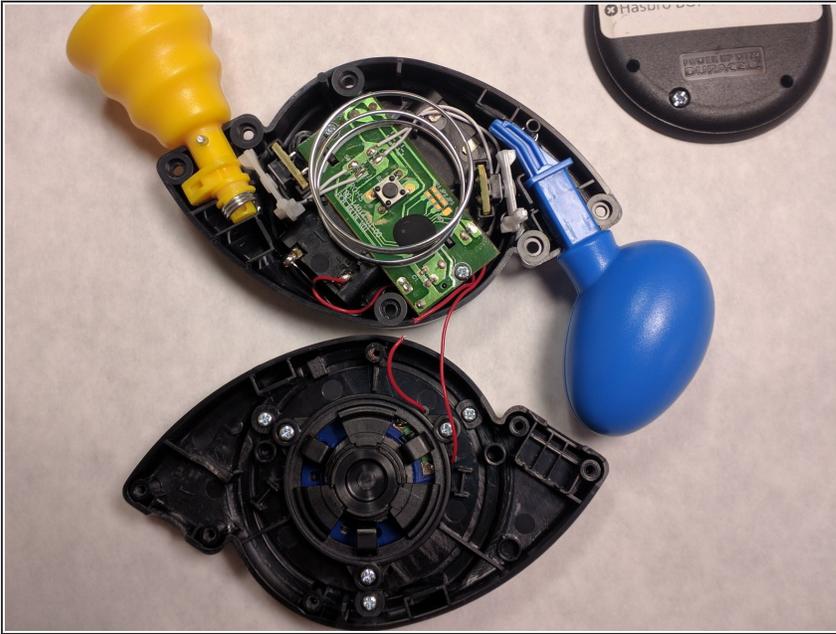

- Carefully separate the two sections, leaving them connected by the wires.

Step 4 — Levers

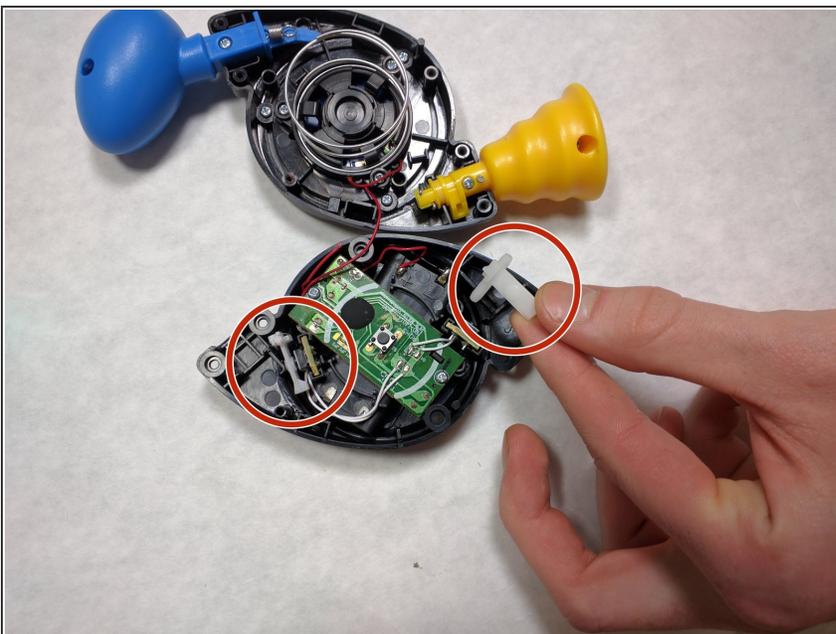

- ☑ Observe the orientation of the levers before removal.
- Remove the white plastic levers with your fingers.

To reassemble your device, follow these instructions in reverse order.