



# Acer Aspire 5334-2581 Battery Replacement

This step by step guide will help you replace and reinstall your battery.


Written By: gilson teixeira



## INTRODUCTION

Battery replacement is the easiest to replace, it should only take you about 5 minutes. Before starting your replacement, be sure to have unplugged the power cord.

## Step 1 — Battery

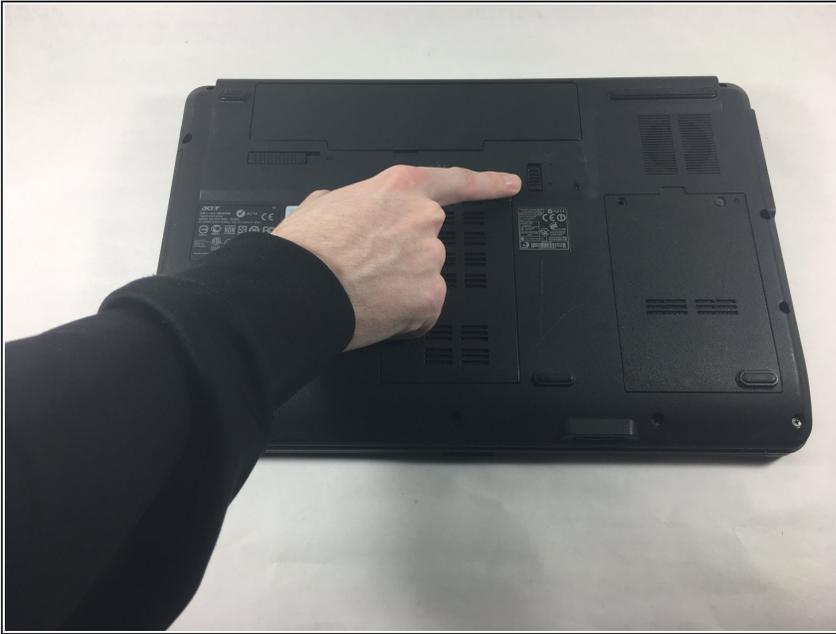


- Please make sure your device is unplugged . Turn it over slowly, and place it on a flat surface.

## Step 2




- This latch holds your battery in place, it should always be locked. Make sure to unlock this piece.
- ⚠ Do not break this latch, otherwise your battery will not hold in place.

### Step 3

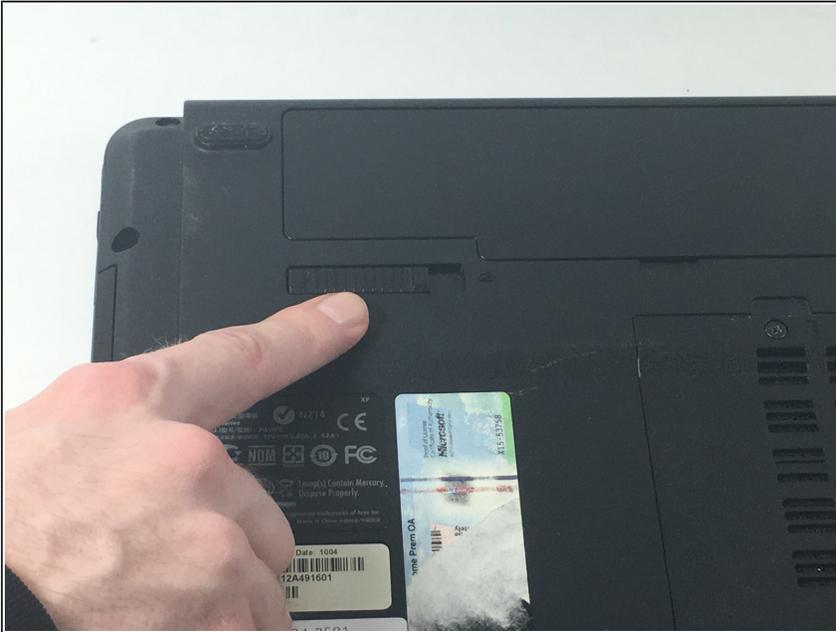

- Locate the eject latch and push it so the battery can come out.
- The battery will lift up once you have pushed the latch.
- ★ You DO NOT need to adjust the latch when replacing the new battery, because it just snaps in place.

### Step 4

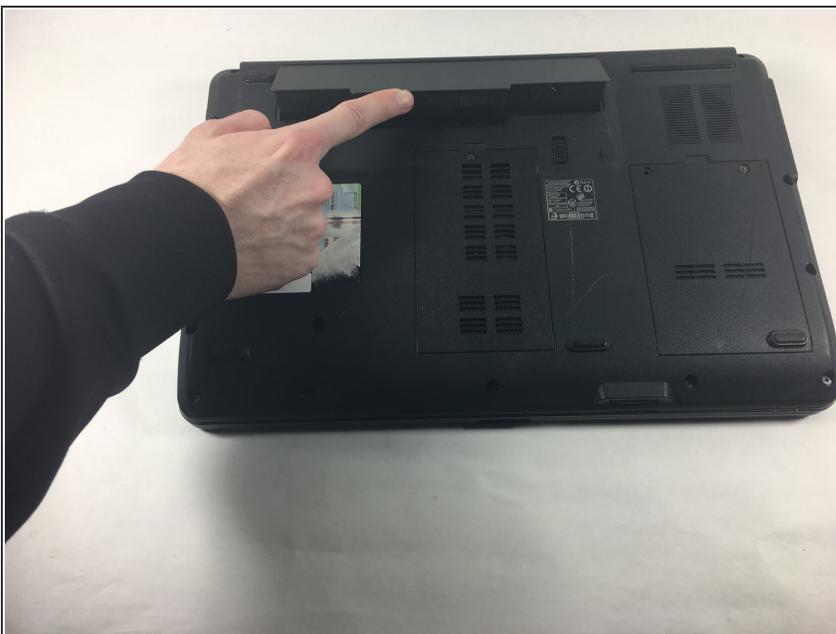

- Lift the battery up, and it should just come right off. You should see the label with the part number.

To reassemble your device, follow these instructions in reverse order.