

# LG Muziq LX570 Keypad Replacement

Replace the keypad on a LG Muziq LX570.

Written By: Braden Burk



## **INTRODUCTION**

This guide will help you through the process of replacing the LG Muziq's keypad.



# **TOOLS:**

- Phillips #00 Screwdriver (1)
- iFixit Opening Tools (1)

#### Step 1 — Battery





- Slide the battery cover release towards top of phone.
- Place one finger at each side of the battery cover.
- Lift and remove the battery cover.

## Step 2





Place a finger at the top corner of the battery and lift out of the phone.

#### Step 3 — Rear Case





- Use the spudger to lift up the two screw covers at the top of the phone.
- Remove all four Phillips#00 (3.3mm) screws with screwdriver.

## Step 4








- Use the spudger to lift up the rear case from the phone.
- Note: Rear case is connected on all sides and will have to be detached on all sides before removal.
- Remove the rear case from the device.

#### Step 5 — Motherboard

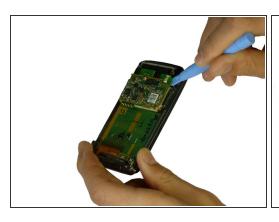






Use the spudger to lift the motherboard from the phone.

### Step 6 — Keypad

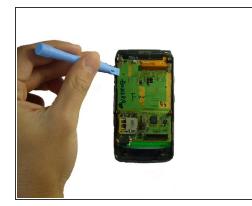






- **Caution:** The circuit board is connected via ribbon to the phone. Do not break this connection.
- (i) Note: The circuit board is attached by clips on both sides of the board. Detach each clip before removing the motherboard from the phone.
- Use the spudger to detach the circuit board from the phone.

## Step 7

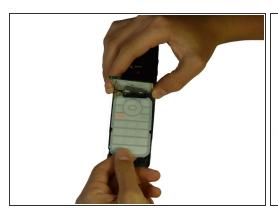





- Open the phone to expose the keypad.
- Use your finger to push the keypad from the front towards the circuit board.
- Remove the keypad from the phone.

To reassemble your device, follow these instructions in reverse order.