



Olympus Stylus 760 Battery Replacement

How to remove and replace the battery in an Olympus Stylus 760 camera.

Written By: Wade Harkins




Step 1 — Battery door



- Slide the door located on the bottom of the camera in an outward direction

Step 2 — Release

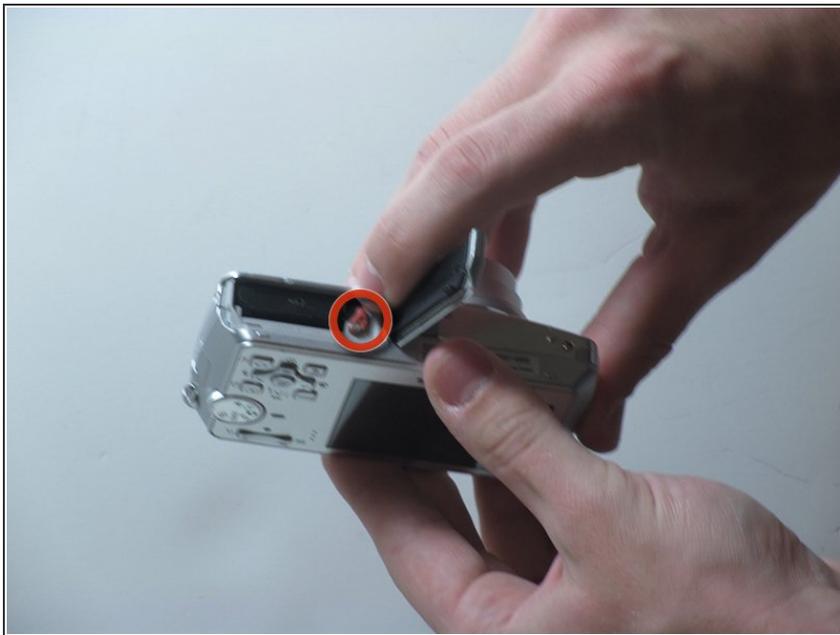

- Pull back on the red release tab located on the left side of the battery.

Step 3 — Replacement



- Slide battery out of camera

To install a replacement battery, follow these instructions in reverse order.