



# Blackberry Bold 9650 Buzzer-Loudspeaker Replacement

Written By: Ryan





## TOOLS:


- [iFixit Opening Tool](#) (1)
- [T6 Torx Screwdriver](#) (1)
- [Spudger](#) (1)



## PARTS:

- [Buzzer-Loud Speaker](#) (1)

## Step 1 — Battery

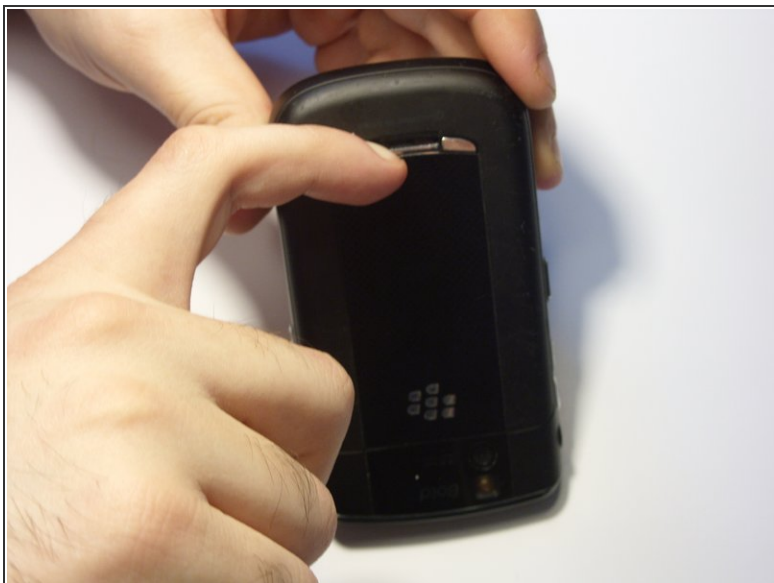

- Turn the device upside down.
- Using your finger, slide the silver cover release button towards the top of the device.
- Lift and remove the back cover.


## Step 2



- Using your fingernails, lift the sides of the battery.
- Remove the battery.



### Step 3 — SIM Card

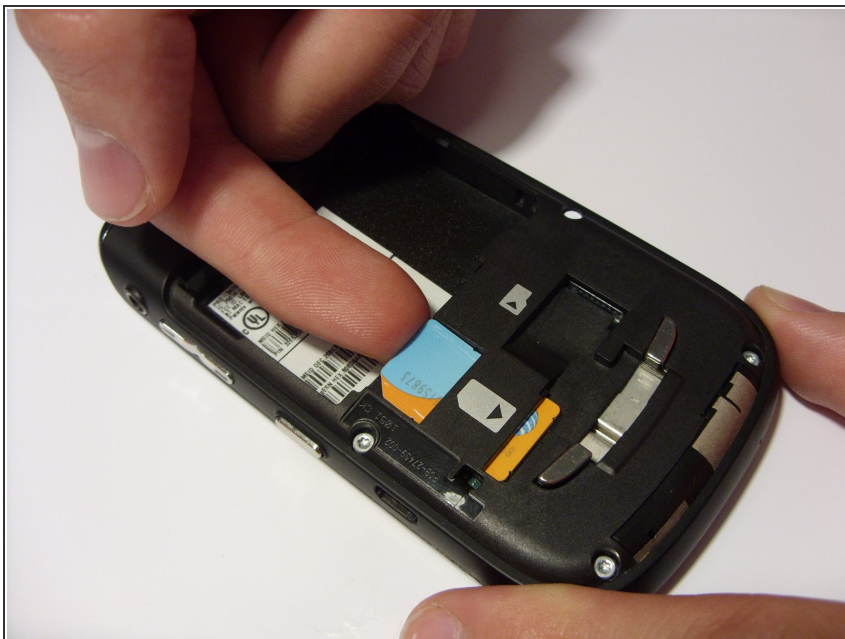

- Orient the device so that the screen is facing the ground.
- Using your finger, gently lift the top of the SIM card.


### Step 4



- Gently pull out the SIM card.

⚠ The card will break in half if you apply too much force when pulling out the card.

## Step 5 — Back Chassis

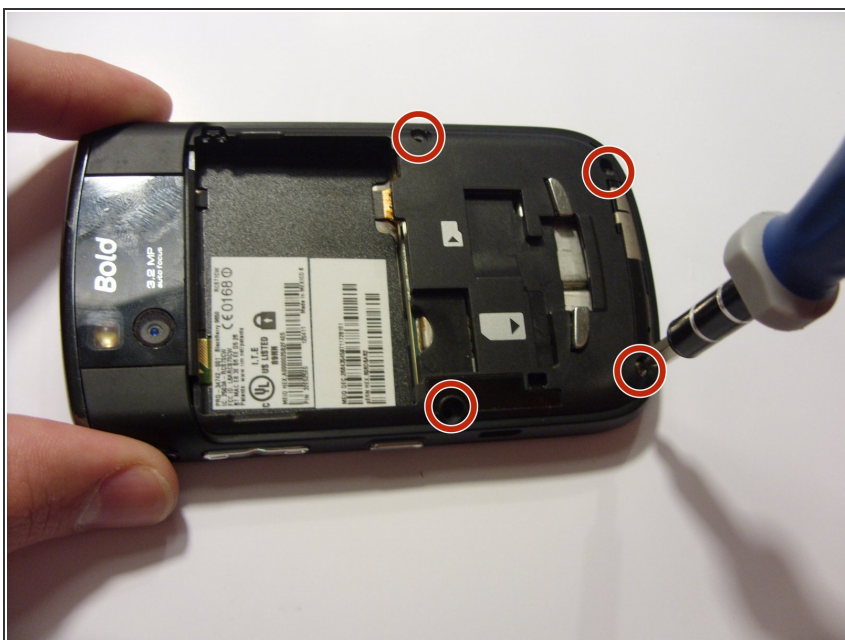

- Using a T6 Torx screwdriver, remove the four screws from the bottom half of the device.

## Step 6



- Orient the device so that the screen is facing you.
- Using a spudger, remove the ear piece cover.

## Step 7



- Using a T6 Torx screwdriver, remove the two screws from the top corners of the device.

## Step 8




- Remove the back chassis by gently pulling the chassis back and forth.

⚠ The headphone jack can break if the chassis is pulled too forcefully.



## Step 9 — Buzzer-Loundspeaker

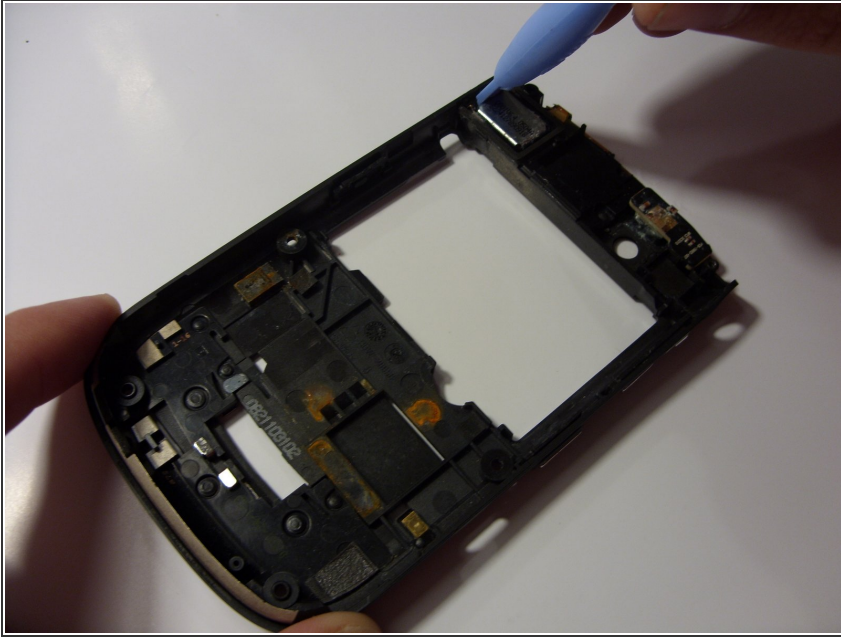

- Use a plastic pry tool to remove the speaker.

**⚠ Be careful removing removing the speaker as the plastic frame around the speaker is fragile.**

To reassemble your device, follow these instructions in reverse order.