

# **Pebble Time Battery Replacement**

Removal of battery for replacement.

Written By: Nicolas Hempe



# INTRODUCTION

Removal of battery for replacement.

# **TOOLS:**

۶

- Metal Spudger (1)
- iFixit Opening Tools (1)
- Phillips #000 Screwdriver (1)

# Step 1 — Screen Cover




• Lay the watch flat on your workstation.

#### Step 2



- Use the metal spudger to carefully pull apart the screen cover from the case.
- Replace the metal spudger with a plastic opening tool to hold the cover open.

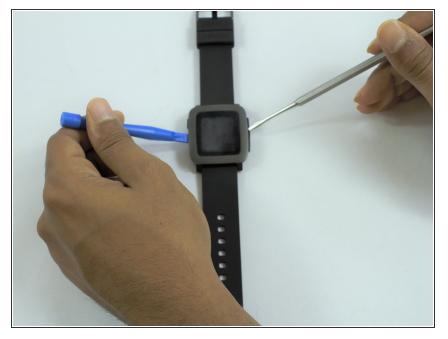

• Use the metal spudger tool to carefully loosen the rest of the cover.

# Step 4




• Carefully, pull apart the cover with the plastic opening tool.

#### Step 5 — Screen



• Insert metal spudger into the side of the screen shown in the picture.

# Step 6

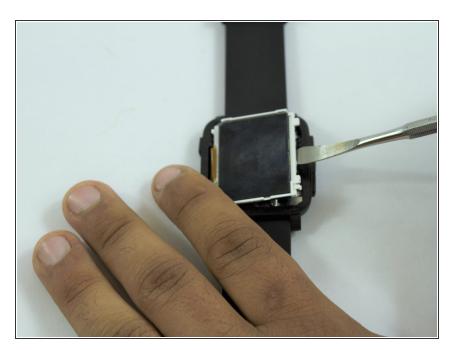


• Use the metal spudger to pry the screen up.



- Once screen is lifted, insert plastic opening tool between the screen connector and circuit board.
- Disconnect the screen from the circuit board.

#### Step 8 — Circuit Board

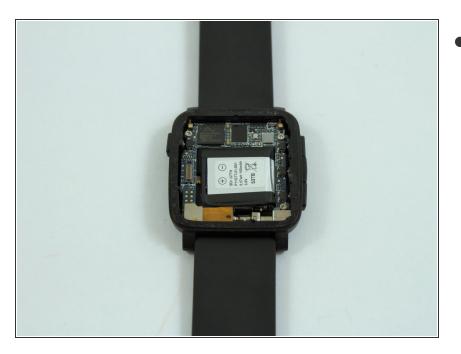

 Keep the watch flat on your workstation.



- Locate the three screws on the circuit board.
- Remove using the J000 Philips head screwdriver.

#### Step 10




- Carefully disconnect the connector wire on the bottom left edge of the circuit board using a plastic opener tool.
- Move apart the connector to expose the fourth screw.



• Remove the final screw from the circuit board with a J000 Philips head screwdriver.

#### Step 12

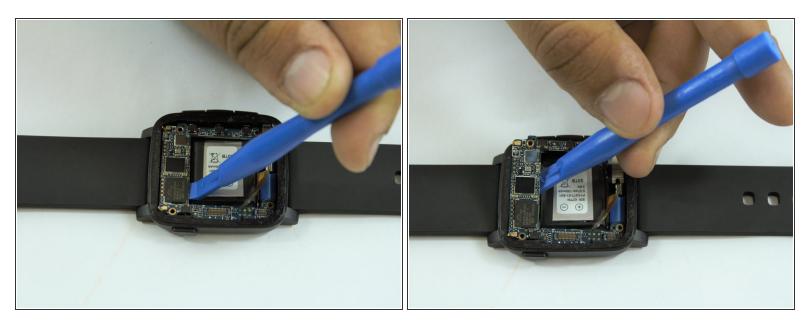


- Turn the watch to the side and use the plastic opening tool to lift up the circuit board.
- Remove the circuit board from the case.

#### Step 13 — Battery



 After removing the circuit board, the battery is located in the middle of the case.

#### Step 14

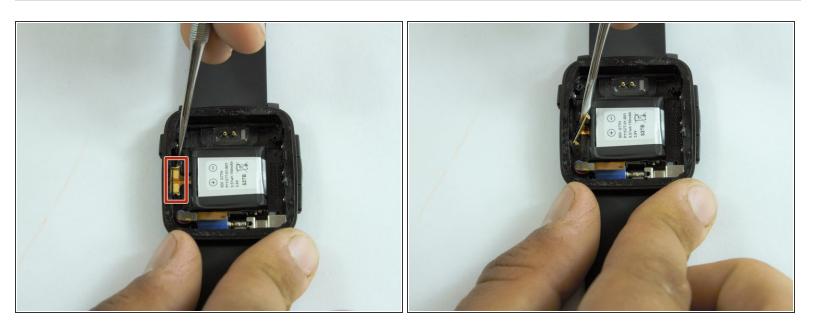

- Locate the battery connector on the left side of the case.
- Carefully disconnect the wire using a metal spudger.



- After disconnecting the battery use the plastic opening tool to lift the battery off of the case.
- (i) The battery might be glued to the case.

To reassemble your device, follow these instructions in reverse order.