



Motorola 120c Microphone Replacement

Shows how to remove the microphone for the Motorola 120c cell phone.

Written By: Megan Elrod



INTRODUCTION

This process involves removing the battery, outer case, and motherboard. After, the microphone can be removed.

TOOLS:

- [Tweezers](#) (1)
-

Step 1 — Battery



- Hold the phone and pull the back latch down towards the bottom.
- Remove the back panel by releasing the latch and lifting from the top.

Step 2



- Remove the battery by pushing the bottom end towards the top, then lifting up.

Step 3 — Motherboard




- Once the battery is out, unscrew the six 7.0 mm screws with T-6 screwdriver.
- Once the screws are removed, simply lift the back panel off

Step 4



- Remove the motherboard by lifting it up and out.

Step 5 — Microphone

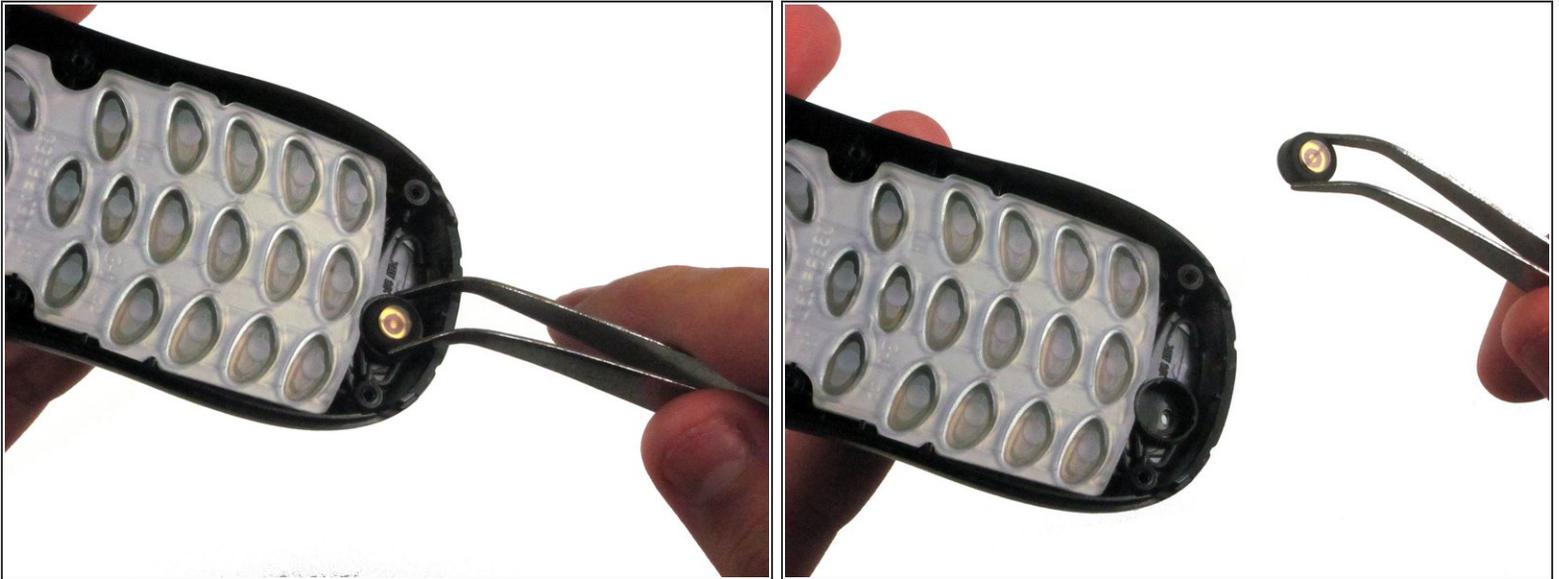

- Use tweezers or fingers to remove the microphone.
- ⓘ Note that the keypad does not need to be removed to get to the microphone.

To reassemble your device, follow these instructions in reverse order.