


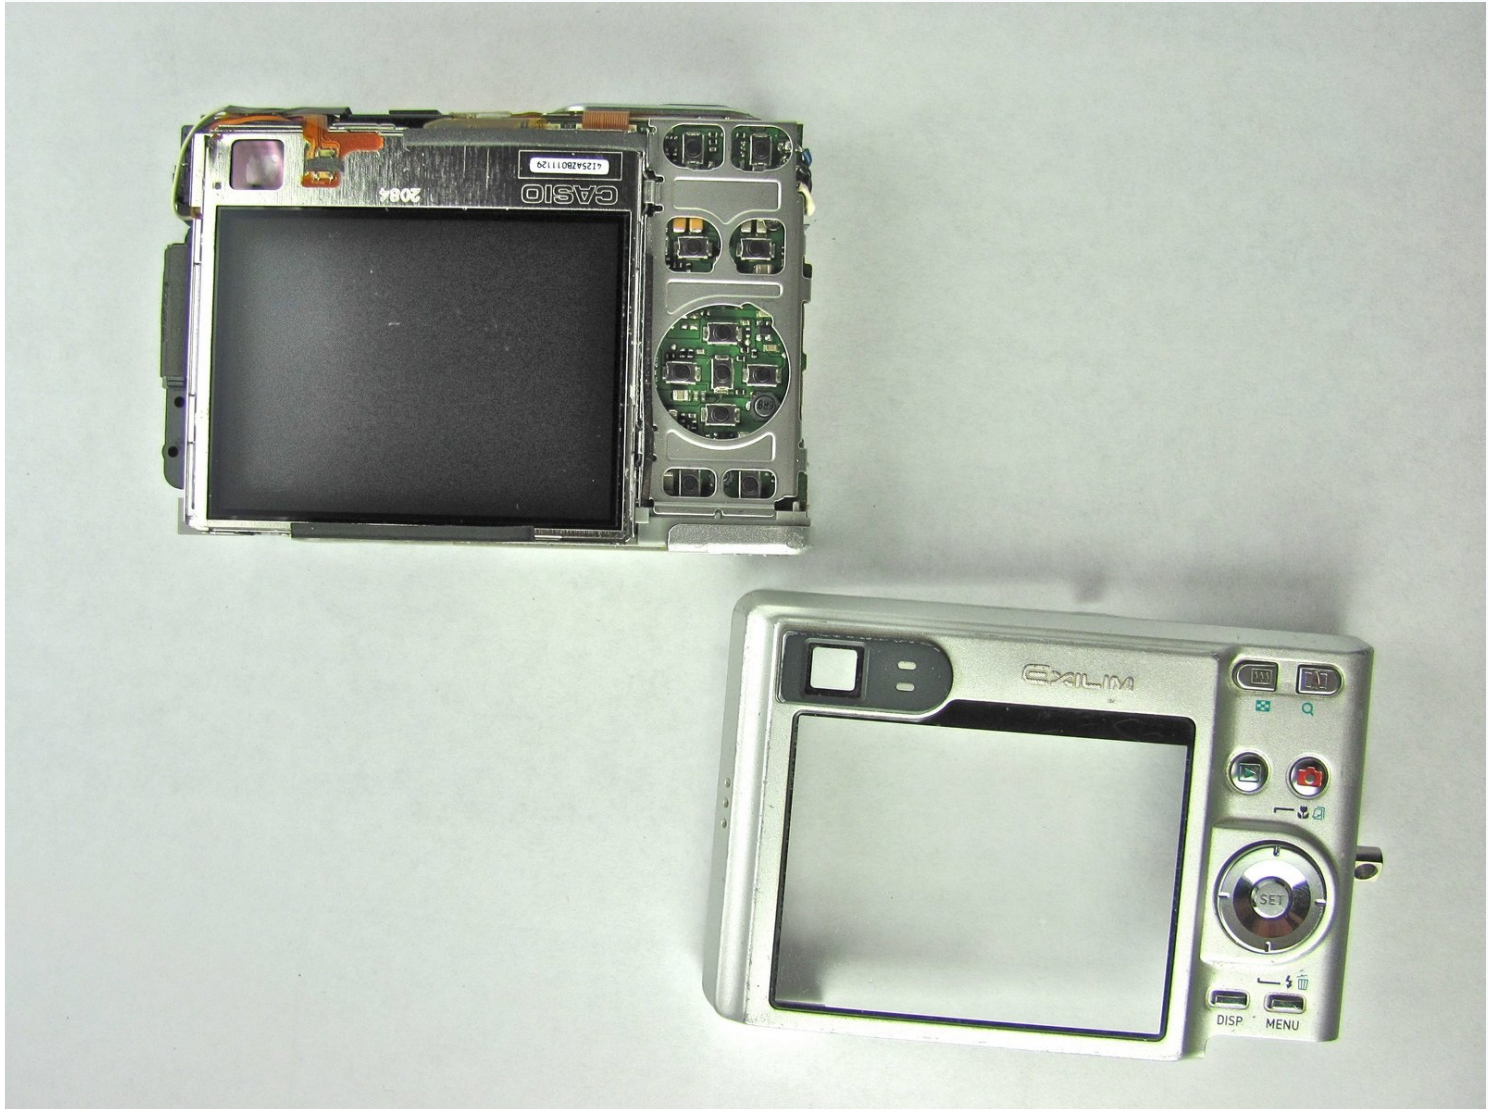

Casio Exilim EX Z55 Back Case Replacement

This guide shows how to remove the back case of...

Written By: Laura



INTRODUCTION

This guide shows how to remove the back case of the Casio Exilim EX Z55 camera to replace a damaged back case or access the inner parts of the camera.

TOOLS:

Phillips #00 Screwdriver (1)

Step 1 — Front Case



- Remove eight 1.8 mm screws from the left and right sides of the camera using a Phillips #00 screwdriver

Step 2



- Remove the four 3.7 mm screws from the bottom of the camera using a Phillips #00 screwdriver.

Step 3



- Separate the front case from the body of the camera.

Step 4 — Back Case



- Separate the back case from the body of the camera.

To reassemble your device, follow these instructions in reverse order.