


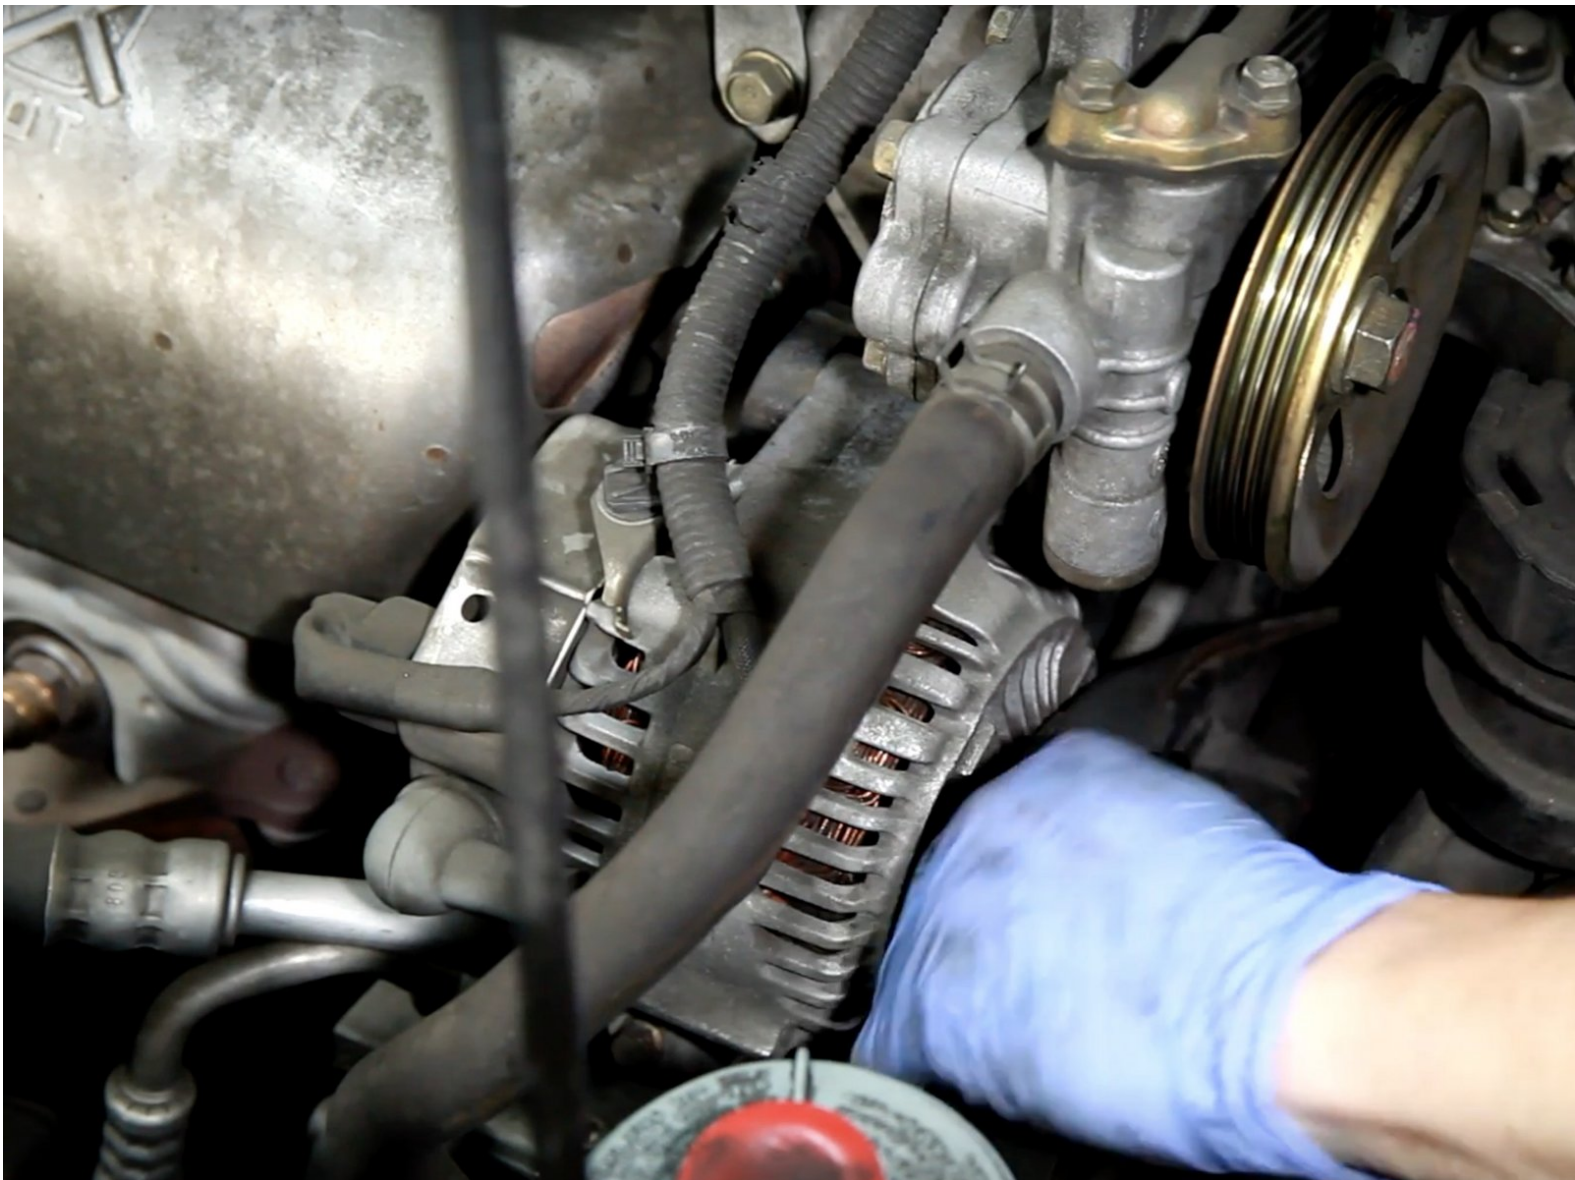

1998-2002 Honda Accord Drive Belt Replacement

A video tutorial on how to change an old worn out drive serpentine belt on a 1998-2002 Honda Accord.

Written By: eCuration



This document was generated on 2020-11-19 12:26:49 AM (MST).

INTRODUCTION

A noisy belt and or belt wear is an indication that a belt should be replaced. Belts are usually replaced at 105k miles or 7 year intervals.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to complete the job yourself.



TOOLS:

- [3/8" Drive Ratchet](#) (1)
- [14mm Deep Socket](#) (1)
- [12mm Deep Socket](#) (1)
- [10mm Socket](#) (1)
- [Pry Bar](#) (1)



PARTS:

- [Power Steering Belt](#) (1)
- [Alternator Belt](#) (1)

To reassemble your device, follow these instructions in reverse order.