



Lenovo Horizon 2s Rear Case Replacement

This guide will demonstrate how to remove and replace the rear case of your Lenovo Horizon 2s.

Written By: Zak Kazakos



INTRODUCTION

Use this guide to remove the rear case, which is designed to prevent damage to interior components.

This guide will provide step-by-step instructions on how to access the internal components.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [Lenovo 2s Horizon Rear Casing](#) (1)

Step 1 — Rear Case



- Flip the device so the rear case is facing upward.
- With the plastic opening tool carefully pry the plastic piece shown in the picture, until it is completely removed from the case.

Step 2




- Using your fingers, carefully remove the rubber boot from the right side of the rear case.
- With the Phillips #1 head, remove the screw placed directly under the rubber boot.

Step 3





- Using the plastic opening tool, push the display screen on the device forward until it separates from the rear casing.

Step 4

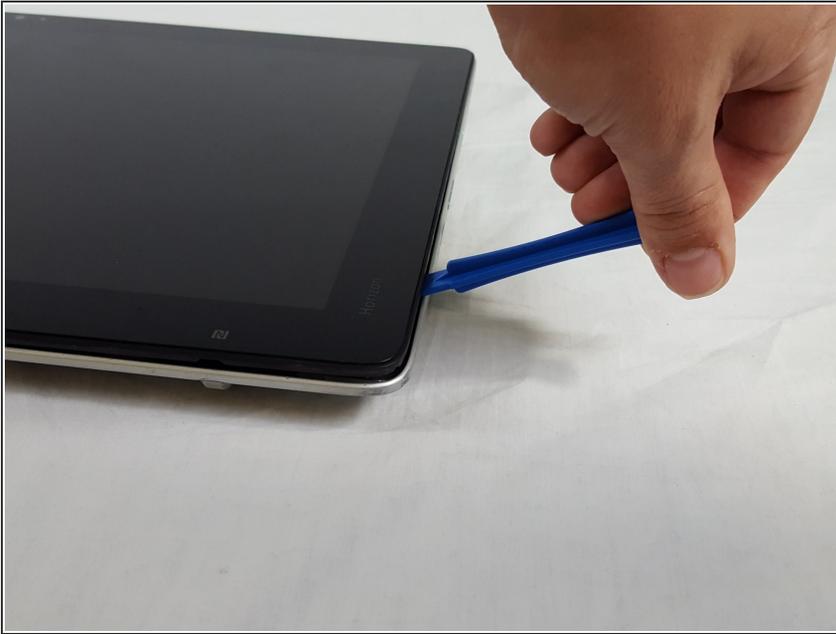

- Using the plastic opening tool, carefully pry around the perimeter of the screen until the entire screen is completely separated from the rear casing.

Step 5

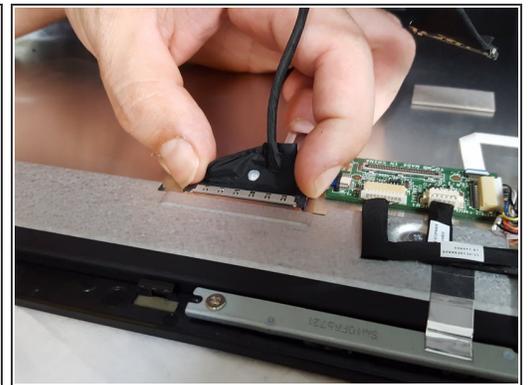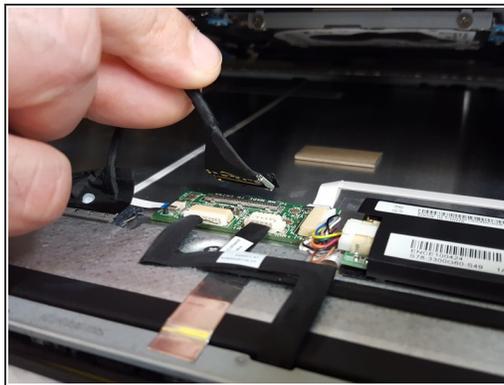

- Before completely separating the screen from the rear casing you will carefully detach two wires that are connected to both sides of the device. This will allow you to completely separate the rear casing from screen.

To reassemble your device, follow these instructions in reverse order.