




# Asus Chromebook C202SA-YS02 Bezel Replacement

The bezel is the hard plastic cover that borders the screen. This guide will show you how to replace it.

Written By: Beau Hansen

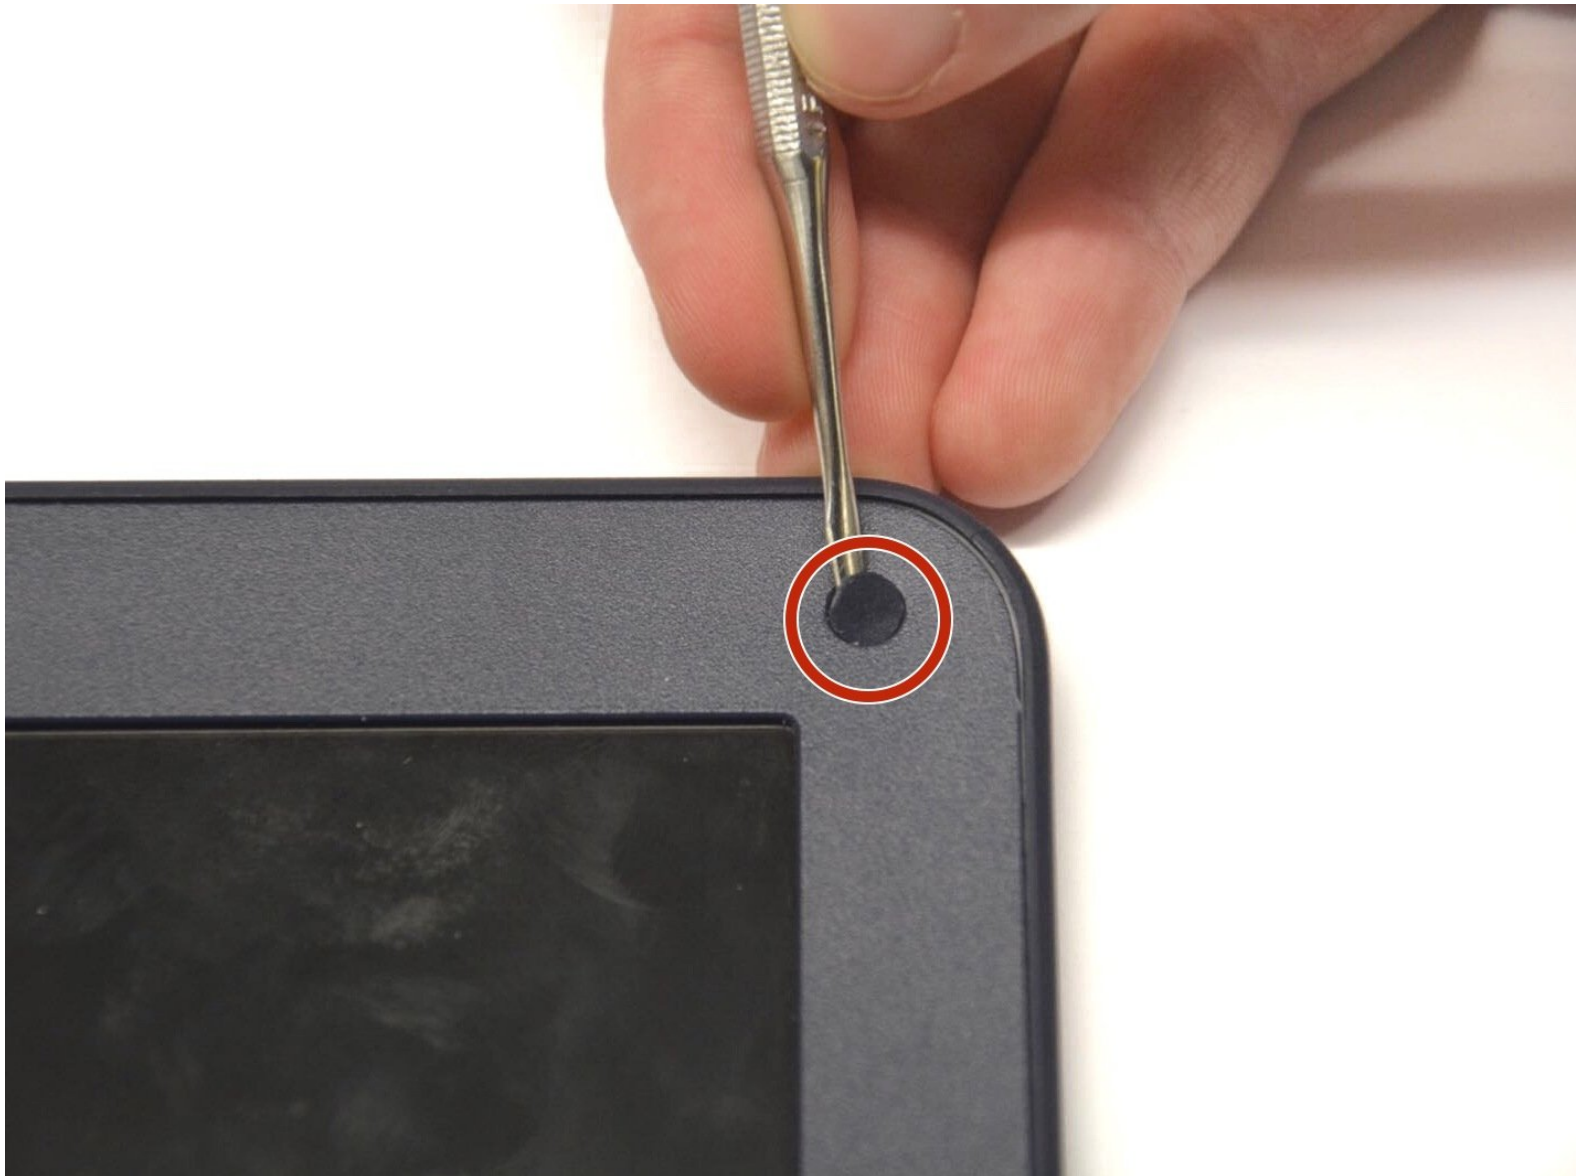

---

## INTRODUCTION

The bezel is the plastic covering that surrounds the screen. It is made of strong plastic, but in the event that it does crack or need replacement, this guide will show you how to replace it.

---



### TOOLS:

- [Phillips Head Screwdriver: Size PH1](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Bezel



- Using a flat blade, remove the two screw covers on the front of the bezel. They are attached by adhesive, so you may have to dig at it a little bit.

## Step 2



- Unscrew and remove the two Phillips #1 4.5 mm screws that are now visible.

### Step 3



- Using the plastic opening tool, carefully pry off the bezel. It will come off entirely, so be careful not to break it.

To reassemble your device, follow these instructions in reverse order.