

Acer Aspire One Cloudbook AO1-132-C3T3 Battery Replacement

Replacing the battery of an Acer Aspire One...

Written By: Brian Villa



INTRODUCTION

Replacing the battery of an **Acer Aspire One Cloudbook AO1-132-C3T3** is a straightforward, yet a crucial task to ensure the continued performance of the laptop. Overtime, the batteries tend to wear down and become less efficient. Replacing an old battery with a new battery will improve the efficiency and the durability of the laptop. In this guide we will walk through on how to <u>disconnect the battery</u> and replace a battery without rupturing any other components of the laptop.

PARTS:
Acer 3ICP4/68/111, AP16A4K 11.25V 3770mAh (1)
 Remove eleven 4 mm Phillips #1 screws.


• Pull the backplate off using your fingers.

Step 2



• Pull the rainbow cord out of the motherboard using the tabs on the sides.

Step 3

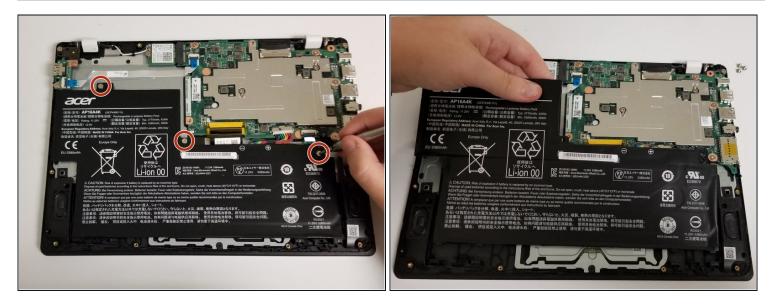

- Remove three 3 mm Phillips #1 screws holding down the battery.
- Lift the top edge of the battery and pull back towards the hinges to remove the battery.

To reassemble your device, follow these instructions in reverse order.