



# ASUS Vivobook Q301LA-BSI5T17 Battery Replacement

This guide will show you on how to replace the battery.

Written By: Jens Peter Andersen



## INTRODUCTION

The most common reason to replace the battery is if the laptop fails to hold a charge. This could mean that the laptop shuts off immediately when unplugged or that the battery only lasts for a short while compared to when the laptop was brand new. It is also common to remove the battery before performing any other operations on the laptop to prevent electrical damage to you and other parts on the laptop.


Over time, batteries become less efficient due to the constant charging and discharging. This is normal behavior, and it is known that batteries will lose the ability to hold a charge over a long period of time.



### TOOLS:

- [JIS #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery

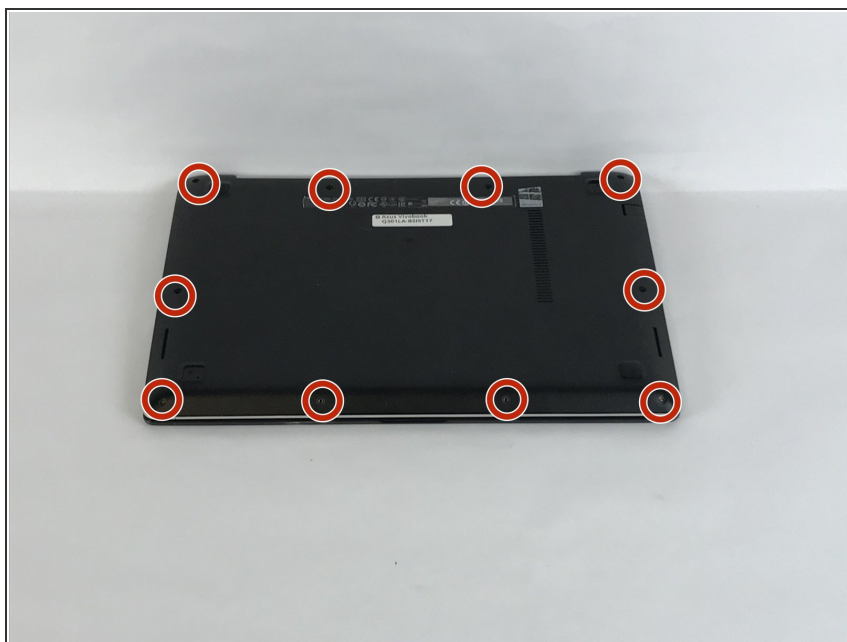


- Unscrew the (10) screws on the bottom of the computer chassis using the JIS #0 screwdriver.

## Step 2



- Slightly lift the lower case and push it toward the rear of the computer to free the mounting tabs.

## Step 3

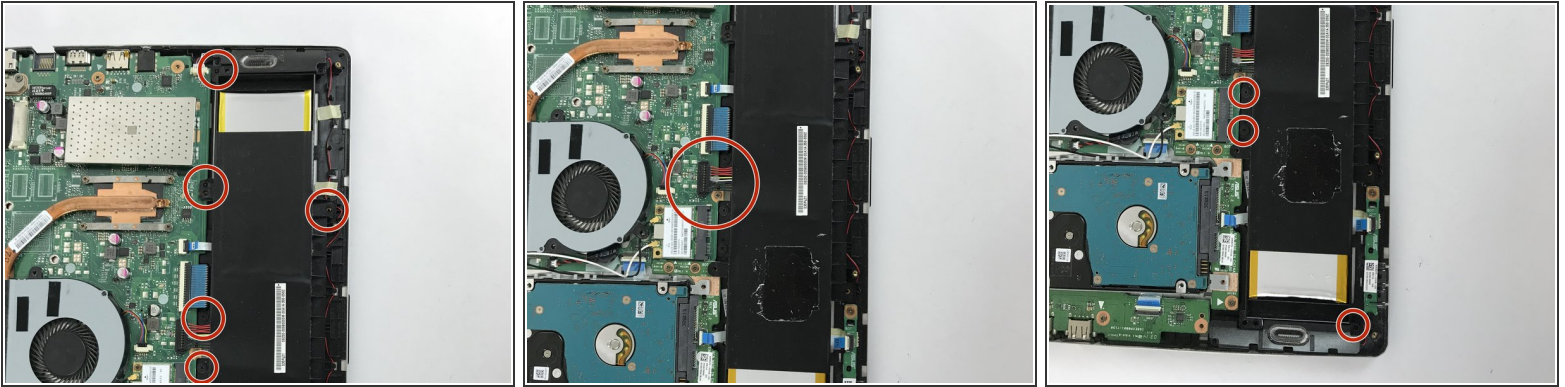

- Remove the (6) six screws attaching the battery to the frame using the JIS #0 screwdriver.
- Use the black plastic spudger to remove the battery from the device.

## Step 4



- Gently take the battery out of the laptop, making sure that all wires connecting to it are disconnected.

To reassemble your device, follow these instructions in reverse order.